Operation Guidance

UI introduction

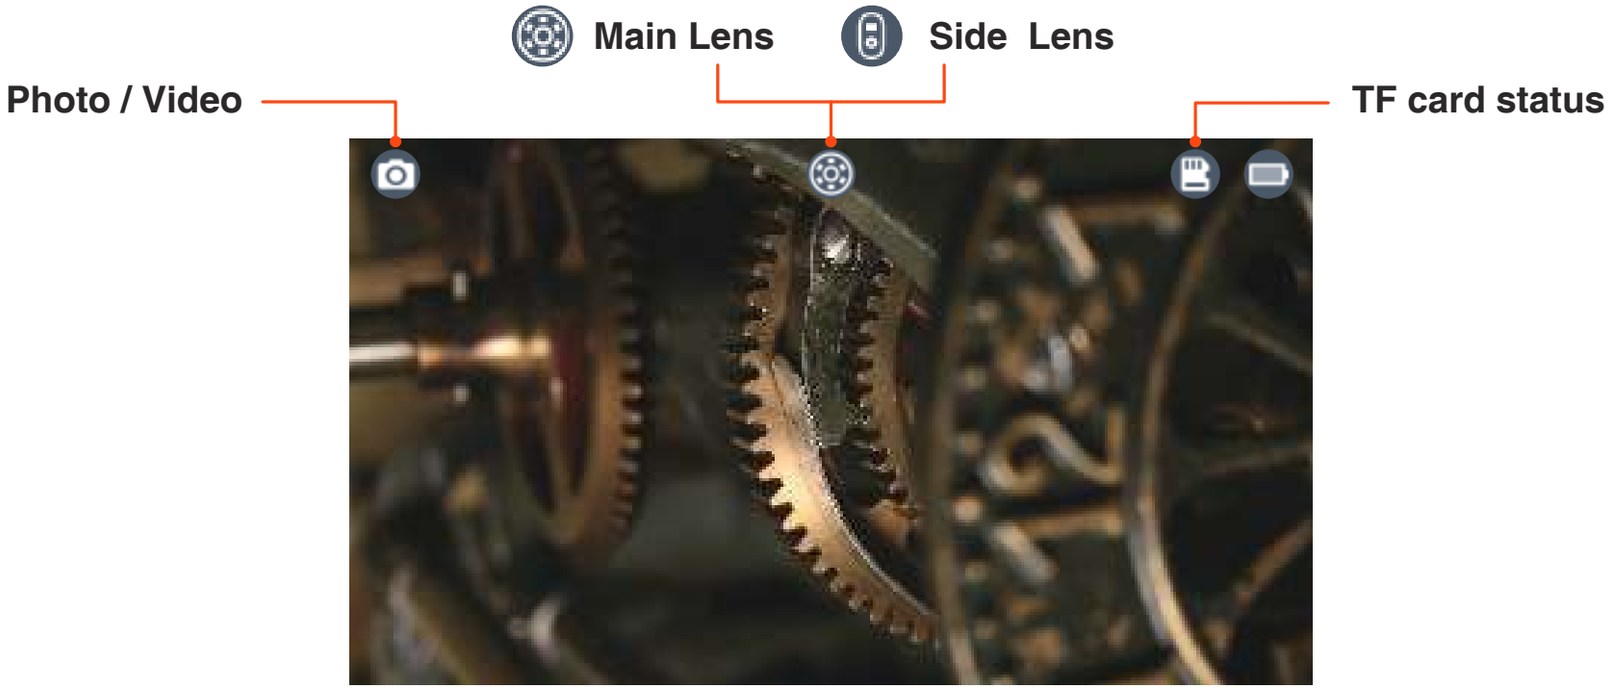


Photo / Video:

Take photos by pressing the button, and long press 2s to start or end Video.




Operation Guidance

View Photos:

Long press OK | ▶II in preview mode to enter the photo album, and press − | ◀ + | ▶ to view photos.


Long press OK | ▶II again to exit the photo album.




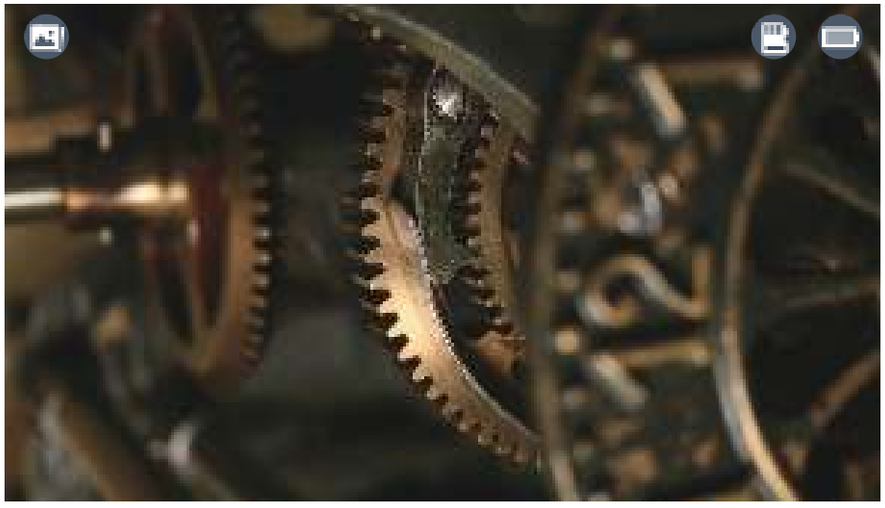

Delete Photos:

When viewing photos, press MENU to choose to delete the current photo or delete all photos, and press MENU again to return to the album.

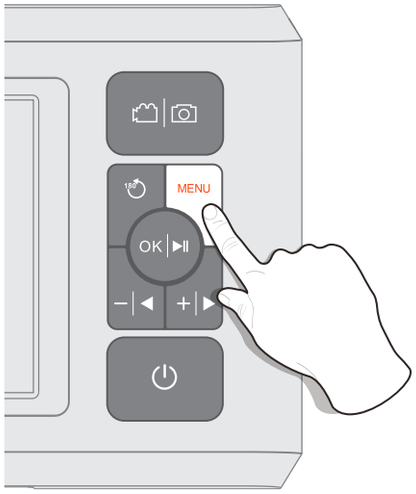

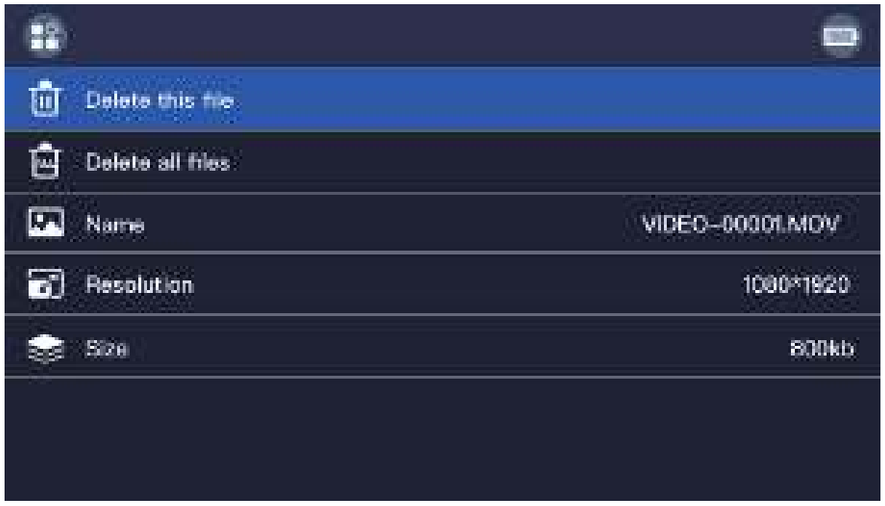


Operation Guidance

Screen Rotation:

Press the 180° button, and the image will rotate 180°.


Single and Double-Lens Switching (only applicable to double-lens products):


Long press the 180° button to switch among main lens, side lens and double-lens.

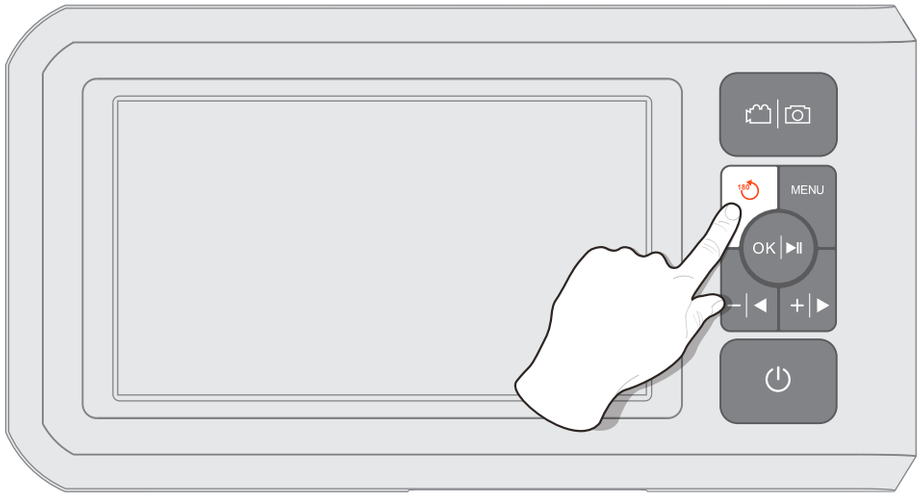

TF Card Formatting:

Press MENU to enter the menu interface, press − ◀ + ▶ to select Format options, and then press OK ▶II to enter the option interface.

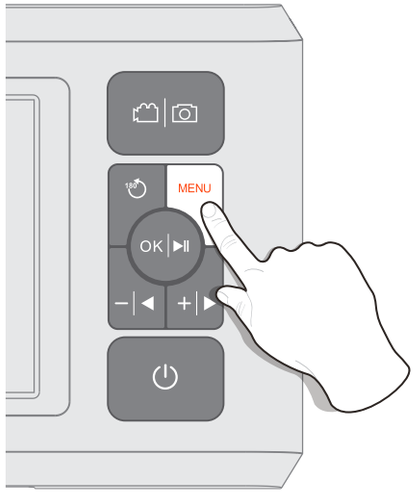


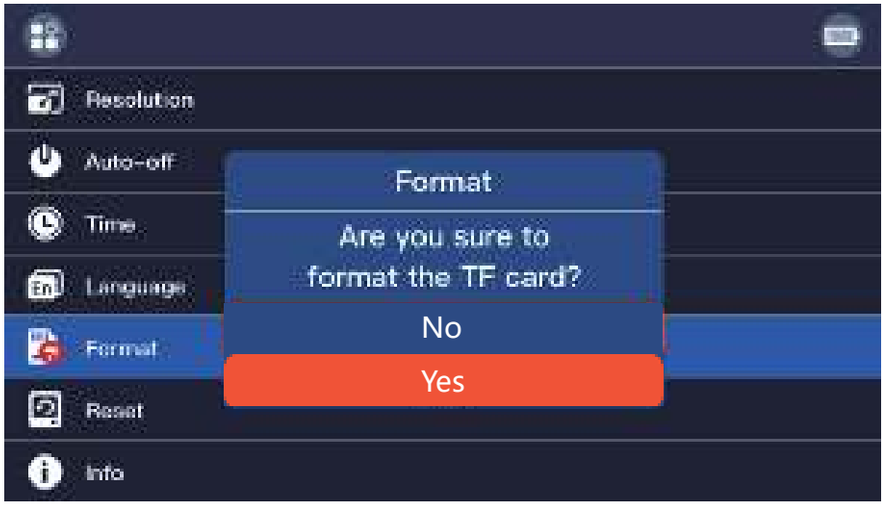

Operation Guidance


Copy photo and video files to computer

The device does not support USB data cable to transfer data, you can use a TF card reader to copy data directly.

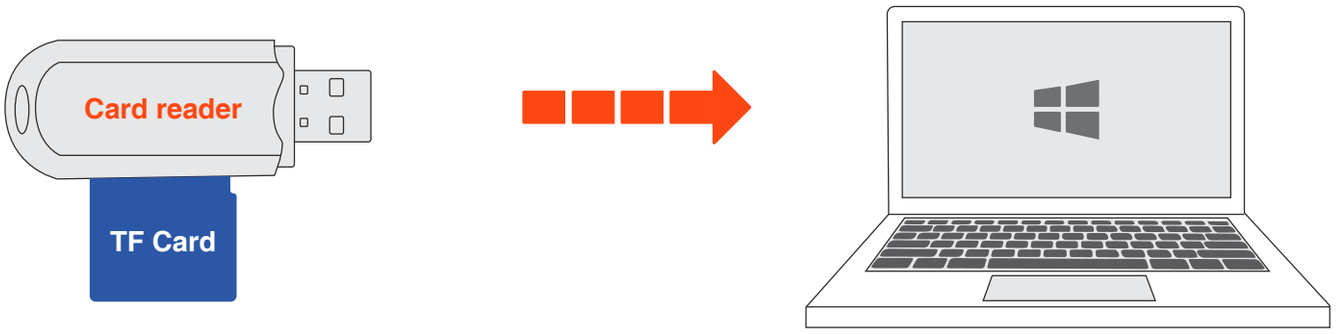


Guide for Accessories Installation

Turn counterclockwise-remove protect cap

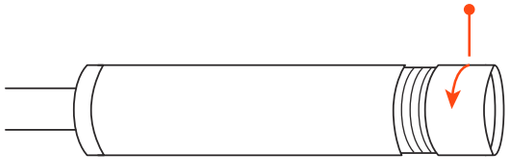

Turn clockwise-tighten accessories

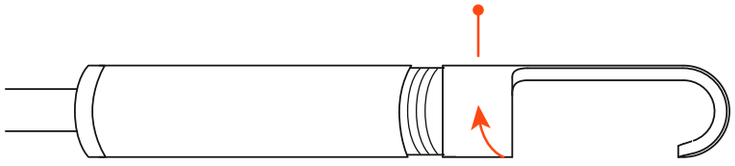

Please read the instruction manual carefully before using this product!