
Fanttik®

Ideas for Fantastic Life


SafeSnap™


Electric Pruning Shears

Y10 Pro

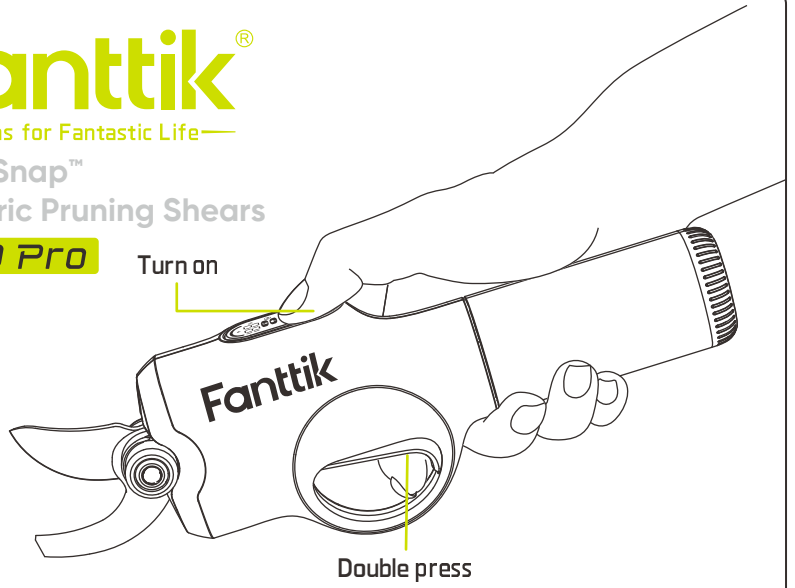



- Wake device, then quickly double-click the trigger to unlock. "Beep" - Unlock successful.
- Press the power button for 0.5 seconds to turn off the device.

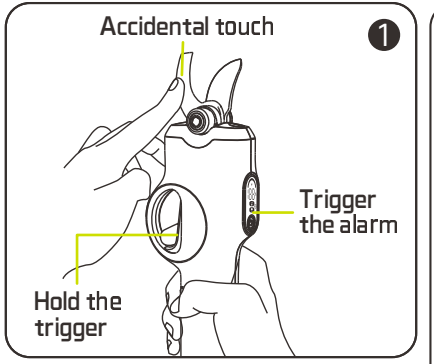

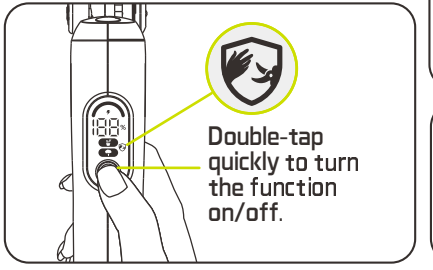

This function only works when gloves are not being worn.

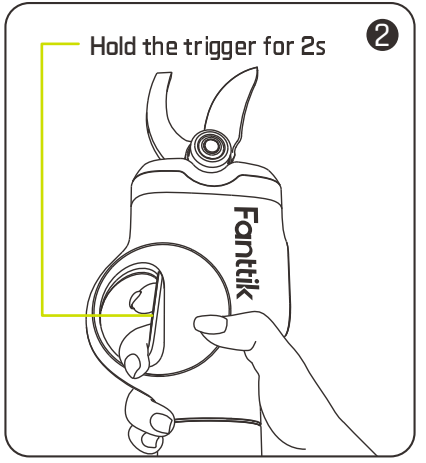

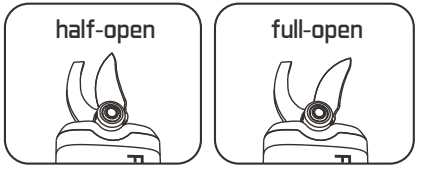

Press and hold the trigger for 2 seconds to switch cutting modes.