KAPUCI®

Product Manual

After Sale:support@le-safe.com

Packing Accessories

After open the package, please first check whether the accessories are consistent with the following table.If you have any questions, please contact:support@le-safe.com

Safe Box	**1**	**Product Manual**	**1**
Emergency Keys	**2**	**External Battery Pack**	**1**
Key Box	**1**		
Expension Screw	**2**		

Tips

1.Please keep the emergency key in a safe place.Don't put the emergency key or external battery pack in the safe box.
2.Please follow the instructions in the product manual strictly

Product Parameters

Product	KAPUCI SAFE BOX		
Size	450mm x 400mm x 350mm(HxWxD)		
G.W/N.T	24.5/23.5KG	**Model**	BGX-X1-45PMAZ
Password Storage	10 Groups	**Open Method**	Password+Fingerprint+Keys
Fingerprint Storage	30 Groups	**Internal**	Internal Light+Drawer

CONTENTS

Product Description 1

Panel Introduction 1

First Way to Open-External Battery Pack 2

Add Password/Fingerprint 3

Second Way to Open-Emerency Keys 4

Normally Open 5

Close The Door 5

Virtual Password Setting 5

Wrong Code Alarm 5


Vibration Alarm 6

System Initialization 6

Undervoltage Warning 6


Installation Notes 7


Product Description

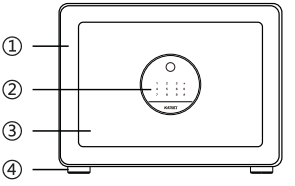

① Box
② Control Panel
③ Door
④ Feet

Panel Introduction

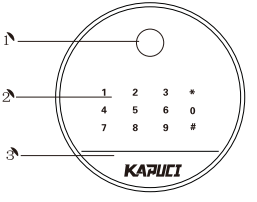

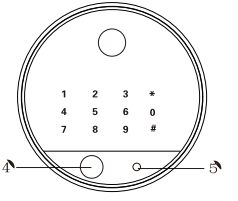



① Fingerprint Collection Area
② Password Keypad
③ Emergency Keyhole Cover
④ Emergency Keyhole
⑤ External Battery Pack Hole

Tips:
In order to prevent the ③ emergency Keyhole Cover from being lost during transportion we put the cover in the key box.

【First Way to Open-External Battery Pack】

In the factory state,you can use factory password **168** or any fingerprint to open the safes.After enter the correct password,you must end with **#** to let the System know that your password has been entered.

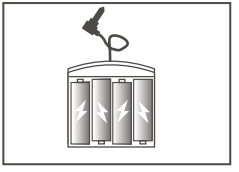

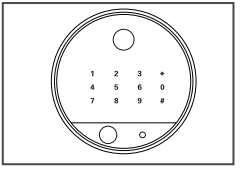



Step 1

Insert 4-AA batteries into the external battery pack in the correct direction(Because of transportation,the battery is not included in the accessorise)

Step 2:

Press the left or right end of the emergency keyhole cover to expose the emergency keyhold.
(If the emergency keyhold cover is in the key box,this step can be omitted)

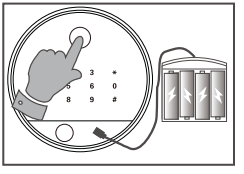

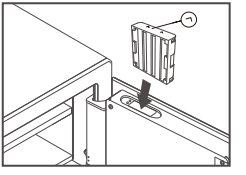

Step 3:

Plug the battery plug into the external battery pack hole.And touch the password keypad area to wake up screen,then enter 168,end with #, the door can be opend automatically.

Or you can put any finger in the fingerprint collection area about 1second,breathing light turns green,the door can be opend automatically.


Step 4:

Unplug the battery pack,replace the battery into the battery compartment above the back cover of the box door.When putting the battery compartmen back。Pay attention to the direction,the direction of the arrow on the battery box is as shown in the figure.

* When the battery is dead,or external battery pack cannot be found,or the password is forgotten,or the fingerprint is not recognized,etc.You can use the emergency key to open the safe.

  Once again,the emergency key and the external battery pack are very important,do not put them int the safe box .

Add Password/Fingerprint

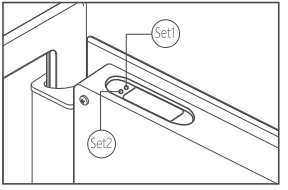

Add Password:


Short press(About 1s)"Set 1"button and you will notice the screen brightens , breathing light is blue and sound prompts"Di".Enter a new password with 1-8 digits and press # key to confirm.The sound prompts "Di-Di" and breathing light turns green ,indicating that the setting is successful.If you need to continue to add a new password,repeat the previous operation.
(You can store up to 10 sets of passwords).


Add Fingerprint:

Short press(About 1s)"Set 1"button and you will notice the screen brightens , breathing light is blue and sound prompts"Di".Put your finger in the fingerprint collection area ,leave it for about 2seconds,breathing light will turn green and sound prompts"Di-Di",indicating that the setting is successful.If you need to continue to add a new fingerprint,repeat the previous operation.
(You can store up to 30 sets fingerprints).

Second Way to Open-Emerency Keys Open

When the electronic system is abnormal or the password is forgotten or the battery is dead.
You can use the emergency to open the safe, ensure that belongs can be taken out

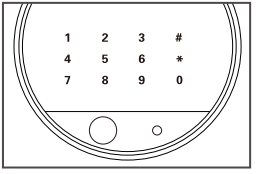

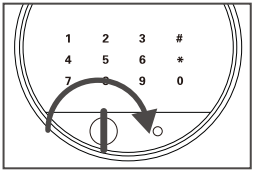


Setp 1:

Press the left or right end of the emergency keyhold cover and expose the emergency keyhold.(If the emergency keyhold cover is in the key box,this stepcan be omitted)

Step 2:

Insert the emergency key in the correct direction (The key's notch direction is to the left or right but not up and down),then turn it clockwise to the limit to open the safes.

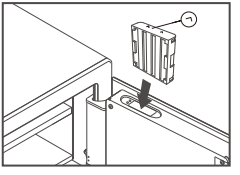



Step 3:

After the emergency is restored to its original position,pull it out,and put 4-AAbattery into the battery box above the back cover of the door. When installing the battery,pay attention to the positive and negative sides,and also pay attention to the direction when placing the battery box (See Picture)

At this point,you can notice that the door bolt is in an extended state.When the door bolt is extended,you cannot close the door,which will damage the paint.

Step 4:

After installing the battery,restore the emergency lock cover,the emergency lock cover may be in the key box.

Next,you can refer to:

Normal Open(Page 5)

Add Password/Fingerprint(Page 3)

Close The Door(Page5)

⚠ Prompt

- If the emergency key is not pulled out ,the door of the box can not be locked, otherwise it will cause the code lock failure.
- This emergency lock can only be used when the electronic system is abnormal when it is opened for the first time
- Long-term use of the emergency key will affect the service life of the electronic system
- Please do not put emergency keys in the safe box

【Normally Open】

- **Password Open:**
  Touch the password keypad to wake up the system and the screen lights up.Enter the correct password and end with **#** key,and the breathing light turns green.The door can open automatically

- **Fingerprint Open:**
  Put the registered fingerprints in the fingerprint collection area(Leave for 1-2 Seconds),the breathing light turn green.The door can open automatically

【Close The Door】

Push the door to the end by hand,press the door and hold for 2 seconds.The door can be automatically locked

Tips:

When closing the door ,do not remove the hand as soon as it is closed,press the door and hold it for 2 seconds for the system to recognize

【Virtual Password Setting】

KAPUCI Safe box support Support the virtual password function, add any number before or after the correct password (the total number is not more than 24 digits), as long as you ensure that there is a series of consecutive numbers in the middle is the password you set, after inputting, end with # key, you can open the box door.

For example:
The password you set is: 382345, in order to prevent the password from being peeped by others, you can enter xxxxxx382345xxxxxx (x represents any number from 0-9, no regularity is required)
234 456**382345**9847586 can also open the door.

【Wrong Code Alarm】

In the process of opening the door,if the password is entered incorrectly for 3 consecutive times or the fingerprint is unsuccessfull matched for 5 consecutive times,the buzzer will sound for 20seconds and the control panel will be locked for 3 minutes.Within 3 minutes,you can notperform any operations. Automatically release after three times(Or remove the battery can quick release the alarm)

【Vibration Alarm】

KAPUCI safe box has a vibration alarm function:

- This feature is turned on by default
- If you want to turn off the vibration alarm function,short press the “Set 2”button, short press the “Set 2”button again to turn on the vibration alarm function
- In the locked state,the safe box is subject to strong vibration,which will trigger a vibration alarm,and the buzzer will emit a sound for 20 seconds.During this process,input the correct password or fingerprint to clear the alarm

【System Initialization(Restore Factory Settings)】

Long press “Set 1”button(More than 3 seconds),the sound prompts”Di-Di-Di-Di” the breathing light turn green.and the system is initialized successfully.All the passwords or fingerprints entered before are cleared,and the system returns to the factory state

【Undervoltage Warning】

When the built-in battery voltage is lower than 4.8v,there will be a sound prompt ”Di-Di-Di-Di” every time the box is opened .Please replace with new batteries as soon as possible,otherwise the door will not be able to opened normally after the batteries are exhausted.


TIPS:

After the warning of voltage undervoltage,the remaining power of the system can only support 20 door openings or standby for 5 days.f the door cannot be opened normally because the battery has not been replaced in time,you can use **External Battery Pack** or **Emergency Keys** to open.

See page 3 for specific steps.

Installation Notes

- Choose a suitable place to place the box,remove the sticker on the back of the box ,open the door,and mark the punching positions according to the installation holes.
- Remove the safe and drill holes with a percussion drill(Drill diameter 13.5mm)
- Then align the mounting holes in the safe with the punched holes,insert and tighten the mounting screws,and fix the box to the solid wall.

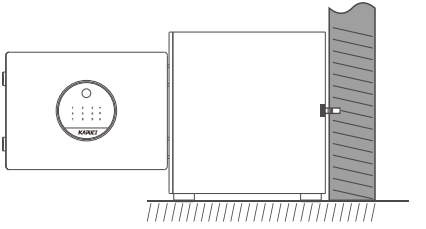

KAPUCI®

KAPUCI FINGERPRINT SAFE BOX

Client:Ningbo Lejia Security Technology Co.,ltd
Manufacturer:Ningbo Kamai Security Technology Co.,ltd
Address:No.527,BaoShan Road,Beilun District,Ningbo,China
Email:support@le-safe.com