
GEOKER Camera Network Connection and Settings


1. Computer download and install **"AjDevTools"** software tool,
http://www.anjvision.com:8021/client/AjDevTools_V5.2.1_20210108.exe
Or you can use Hikvision “SADP” Tool
https://www.hikvision.com/en/search/?q=SADP

2.Please keep the computer and camera on the same LAN--Please use a network cable to connect, do not use Wi-Fi.

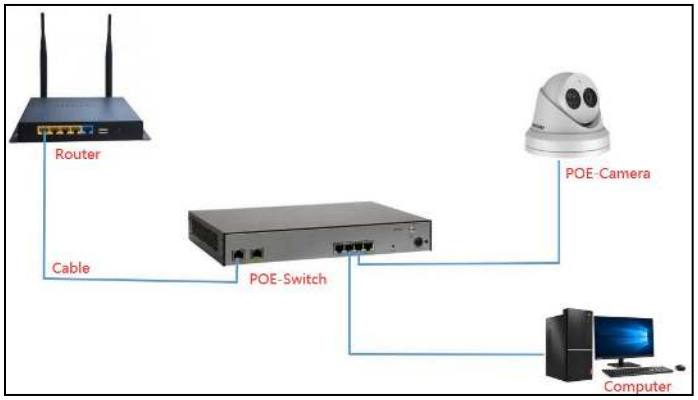



3.After installation,open the software and click the Start Search,
① Search for the IP address of the camera;
② Query the IP address of the camera.




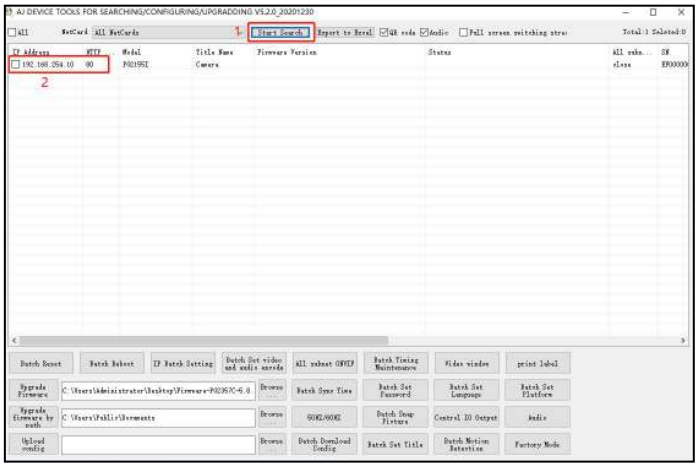

4. ① Query your computer IP address
② Open Network and Sharing Center
③ Details
④ View your computer's IPV4 Address, Subnet Mask and Gateway

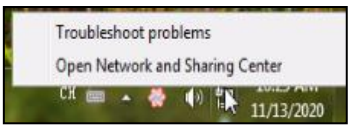

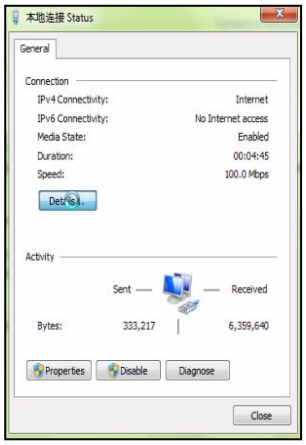

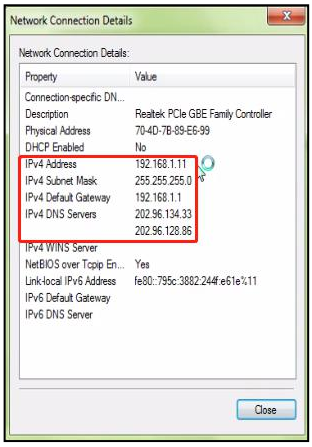

5. Modify the IP address of the camera and computer in the same network segment


Setting method:

① Select the IP address of the camera;


② Click IP Batch Manual Setting IP address;

③ Modify the IP address of the camera to be in the same network segment as the IP address of the computer or choose DHCP to obtain an IP address automatically;

④ Select OK--Successfully modified.

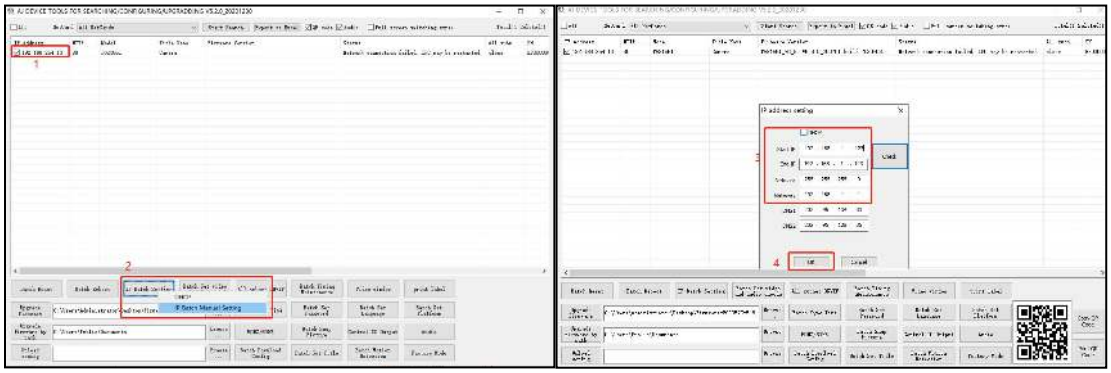

6 . Double click the camera IP address or Enter the camera IP address, (ex.192.168.1.110) in the browser URL bar to visit the web page login interface.

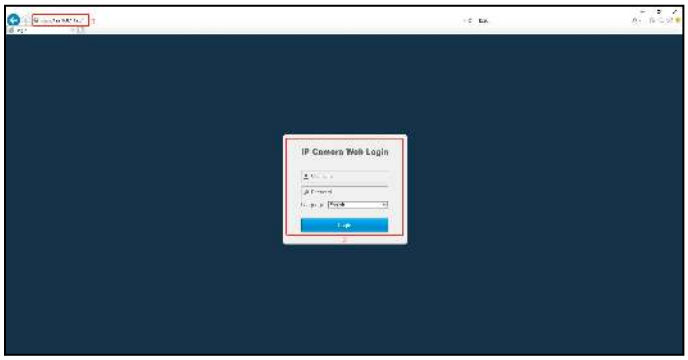

7. Login with the username:admin and password :123456.

8. If you need tech support, please contact us to support@vikylin.com. Also you can download the user manual from the **item description page on Amazon**

9.The guide video you can view onto Youtube (https://www.youtube.com/watch?v=hM4hxsPSfjs)