
HOLY STONE

14+ age

Quick Start Guide V 1.0

HS360S

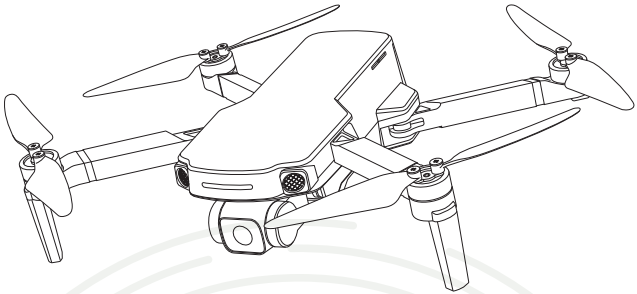

+1(855)888-6699

www.holystone.com

usa@holystone.com (USA)

eu@holystone.com (EU)





... downlode the HS FLY App


... watch the Tutorial Video

... view the Instructions For Use

DIAGRAM OF THE DRONE

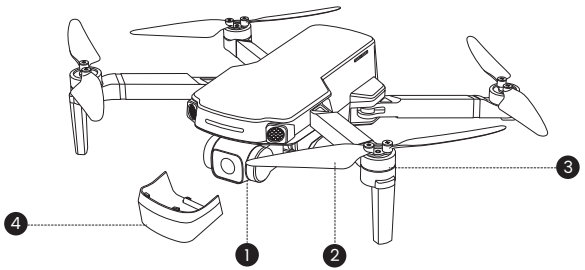

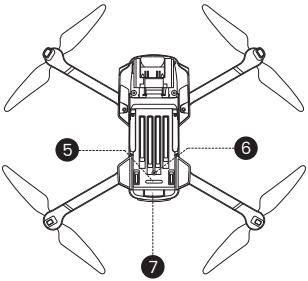


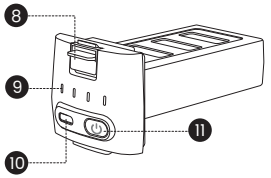


1 Camera
2 Propeller
3 Motor
4 Camera Cover
5 Drone Status Indicator
6 Optical Flow Module
7 Drone Battery
8 Snap
9 Battery Level Indicators
10 Charging Port (Type-C)
11 Power Switch

DIAGRAM OF THE TRANSMITTER


• **Front**:

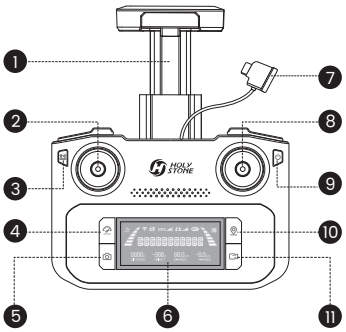

• **Top**:

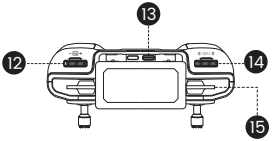

• **Bottom**:

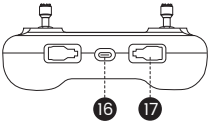

1 Cellphone Holder

2 Left Joystick

3 Takeoff/Landing: Short Press

Emergency Stop: Long Press

4 Speed Switch: Short Press

GPS Switch on/off: Long Press

5 Take Photo

6 LCD Screen

7 Connection Cable

8 Right Joystick

9 Check Battery Level : Short Press

Power Switch: Short press, then hold

10 Return to Home

11 Record Video

12 Zoom Dial

13 Connection Port

14 Camera Adjustment Dial


15 Cellphone Slot

16 Charging Port (Type-C)

17 Storage Slots for Joysticks


1 CHARGING

Attach the USB charging cable to a USB Adapter (5V/2A), then link it with the charging port of the drone battery or transmitter.

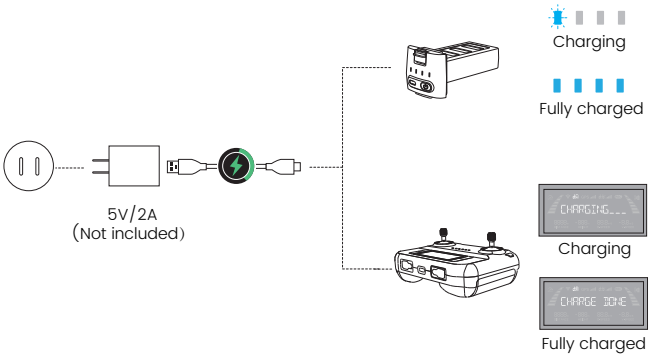


2 GET THE DRONE READY


❶

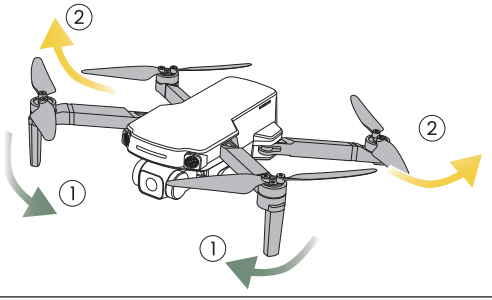


2

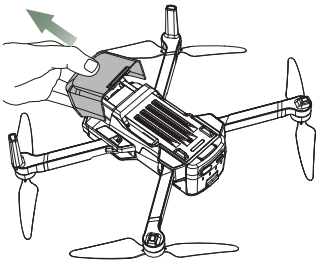

3

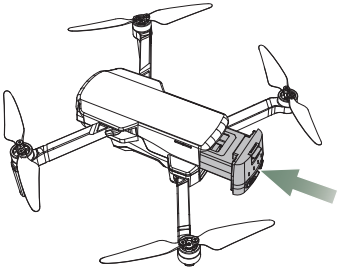


4

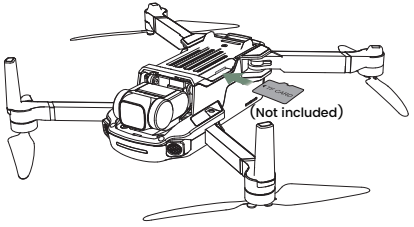


3 GET THE TRANSMITTER READY


1

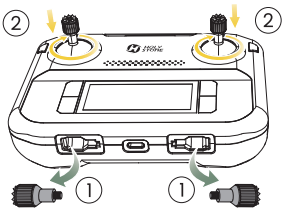

2

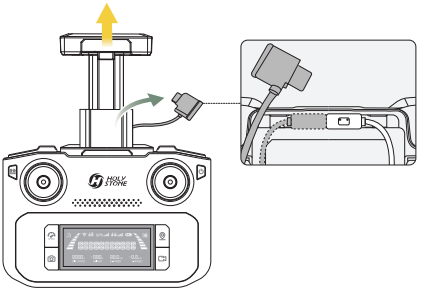


3

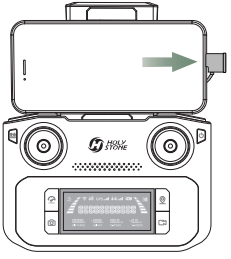


4 PAIRING


1

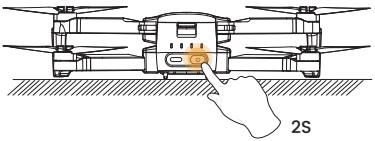

2

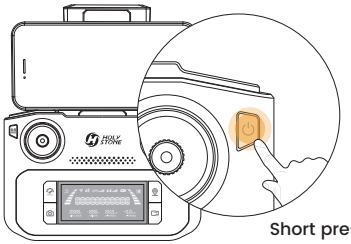


3

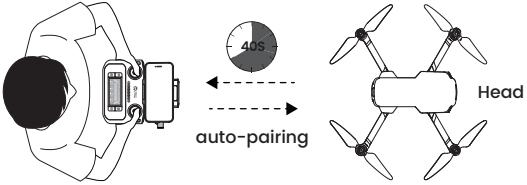

The transmitter sends out a long beep, and the drone status indicator turns solid when the pairing is done.

5 RUN HS FLY APP

1

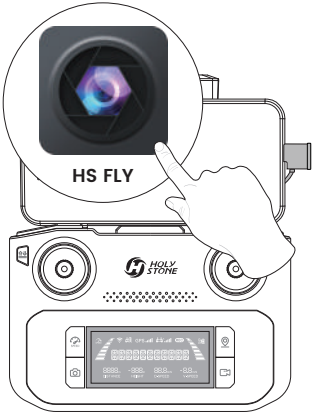


2




6 CALIBRATE THE COMPASS


1

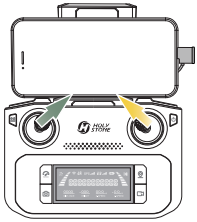

2

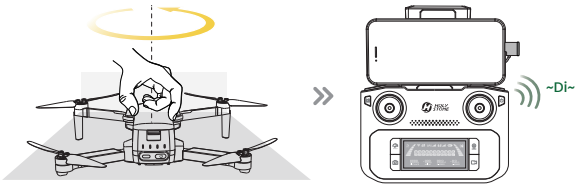


3

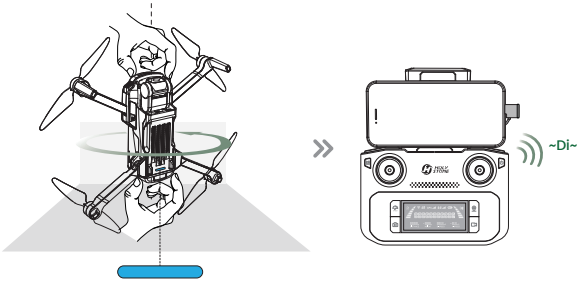

DO NOT calibrate the compass in locations with strong magnetic interference, such as near magnets, parking lots, or construction sites with underground reinforced concrete structures.


7 UNLOCK THE MOTORS

Please make sure that you only unlock and control the drone when the GPS signal icon (GPS) lights up.(that is, the GPS signal is good).

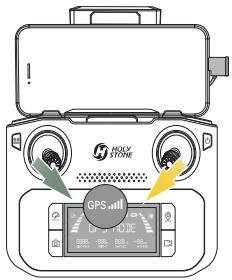

8 TAKE-OFF


Please fly the drone in an open outdoor area free of surrounding obstructions.

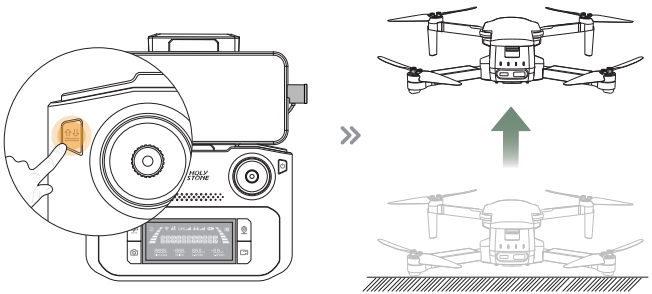


9 FLIGHT DIRECTION CONTROL

The left joystick is responsible for controlling the drone's height and orientation in flight, whereas the right joystick dictates the movements in forward, backward, and lateral directions.




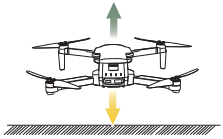









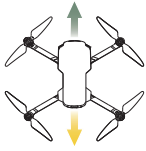



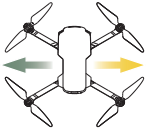

10 LANDING

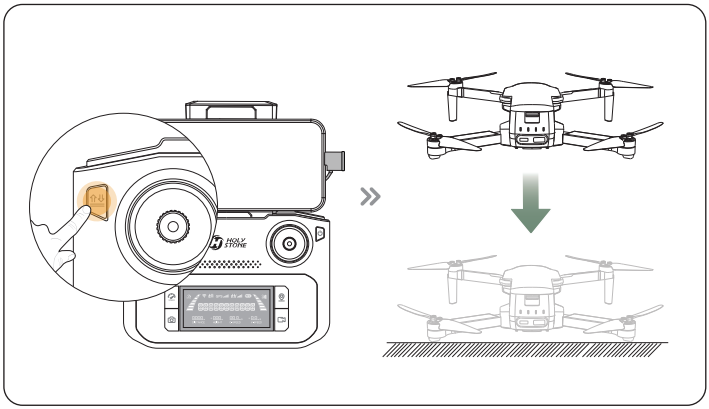


HOLY
STONE