

GEOKER Camera Network Connection and Settings

1. Computer download and install hikvision **"SADP"** software tool

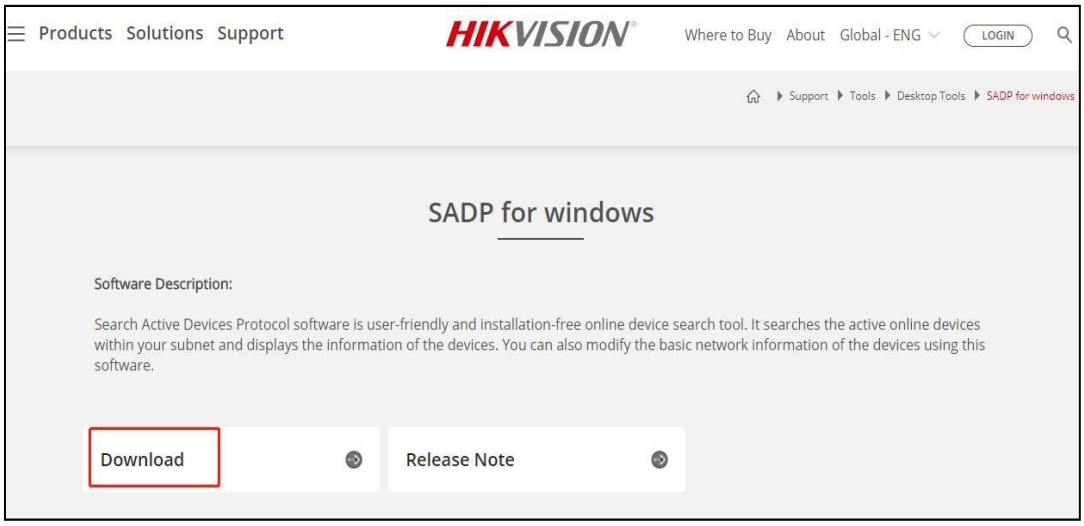


Download :**https://www.hikvision.com/en/search/?q=SADP**

2. Please keep the computer and camera on **the same LAN--Please use a network cable to connect, do not use Wifi**

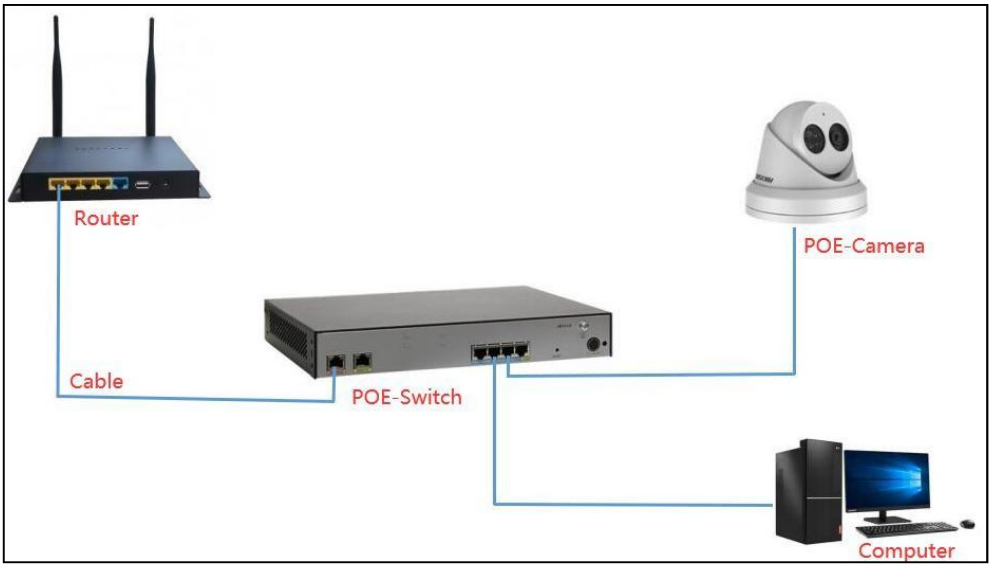



3. After installation,open the software and click the Refresh ① -- Search for the IP address of the camera ②




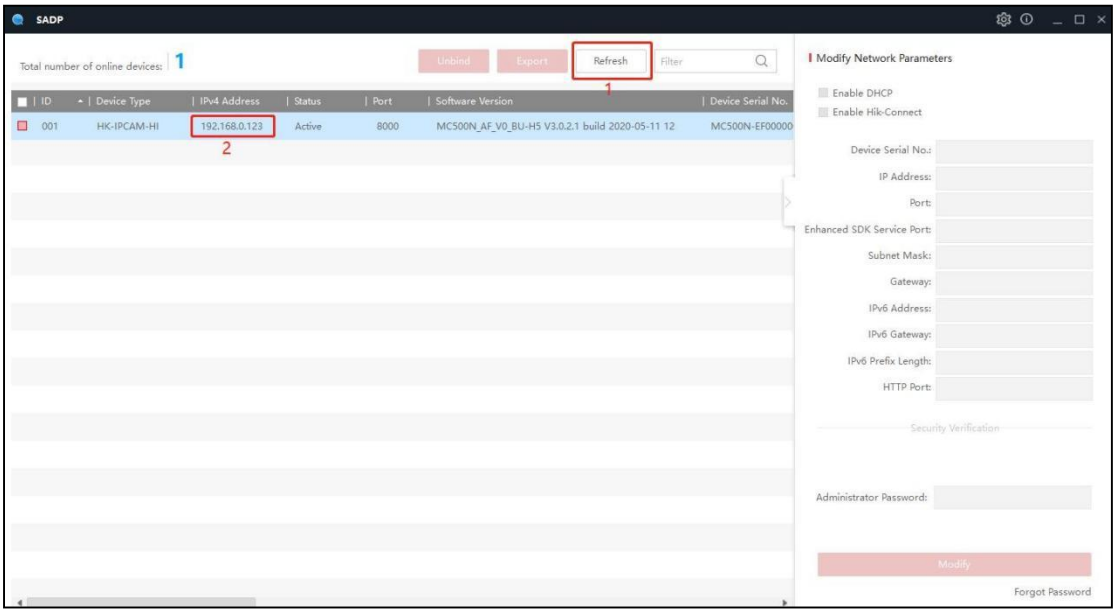

4. Query your computer IP address--Open Network and Sharing Center---Details--View your computer's **IPV4 Address,Subnet Mask and Gateway**

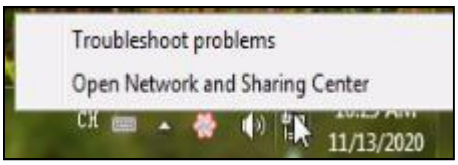

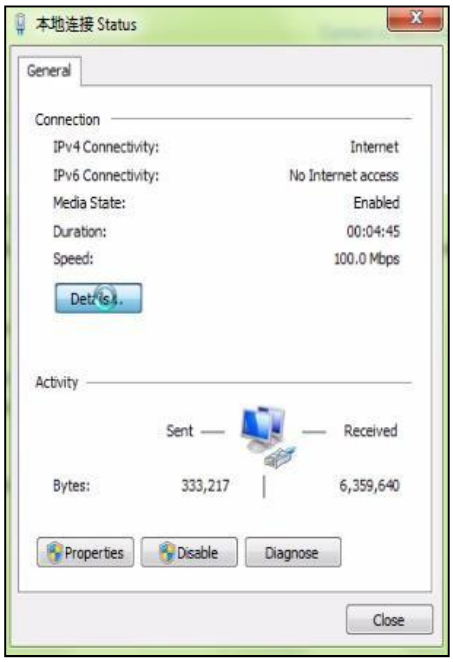

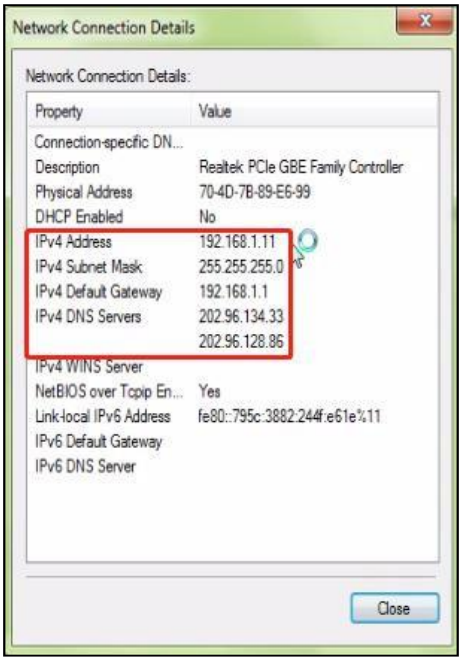


5. Modify the IP address of the camera and computer in thesame network segment


Setting method: ① Select the IP address of the camera

② Modify the IP address and gateway of the camera


③ Enter the camera password: **123456**

④ Select Modify--Parameters modification completed

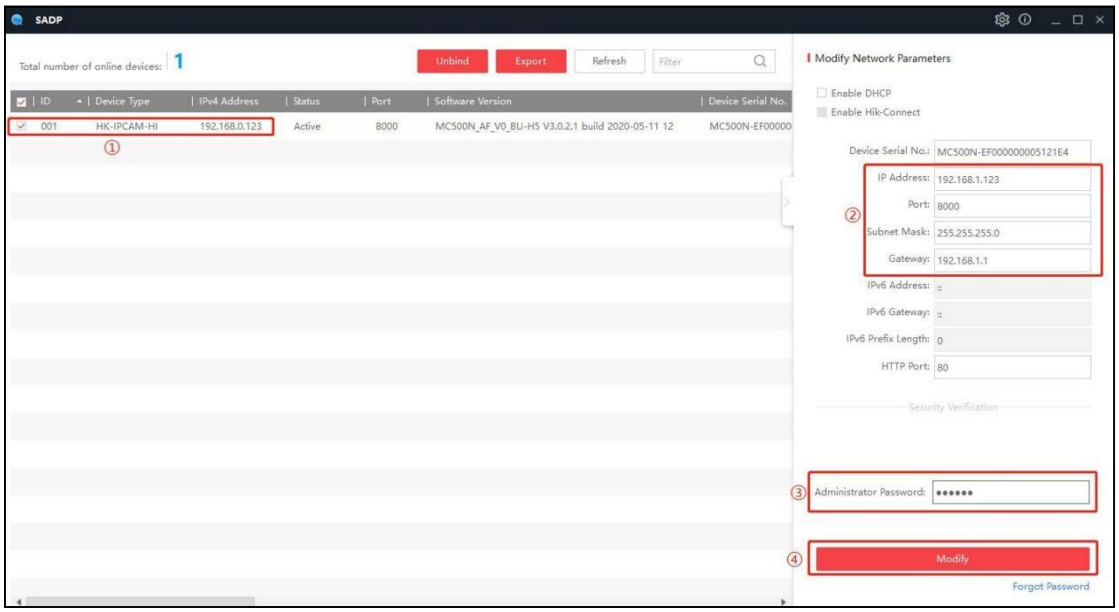


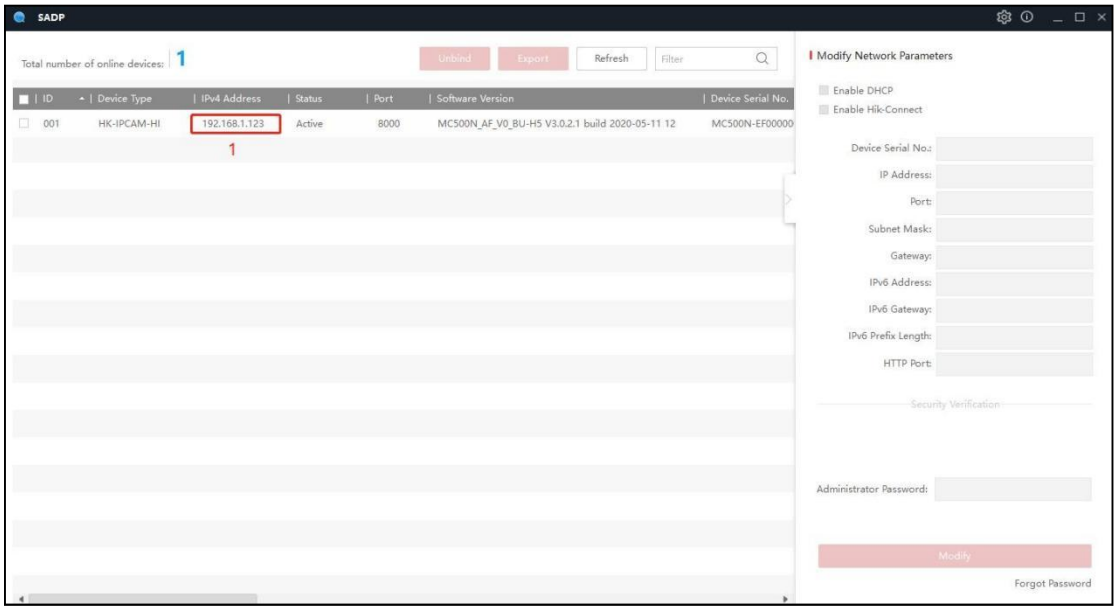

6. Double-click the camera IP address or Enter the browser to enter the camera IP address：**192.168.1.123**---Go to the login interface

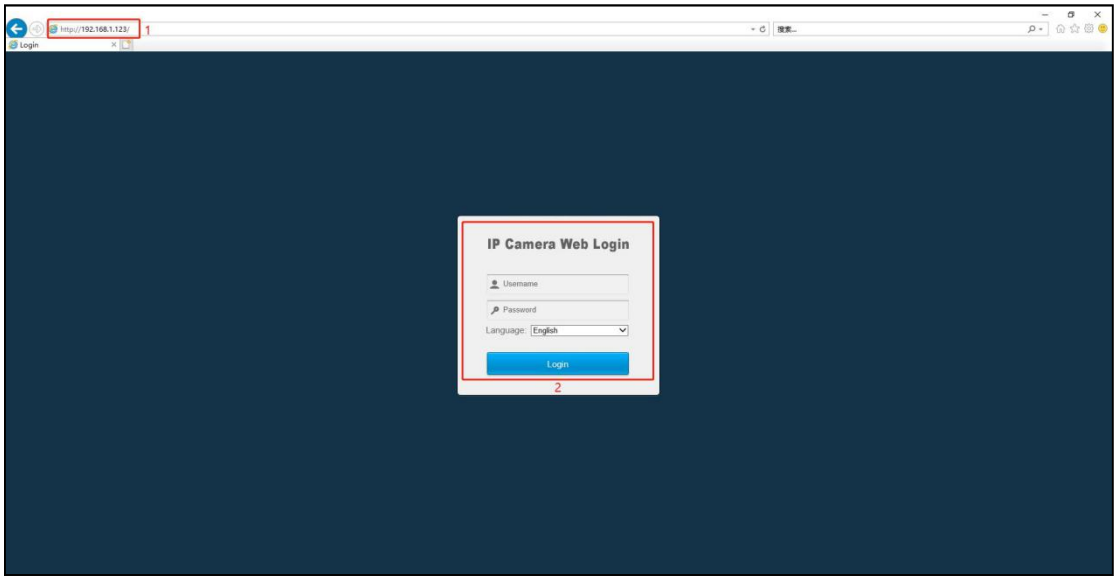

7. Enter camera **username:admin** and **password :123456**---login successful

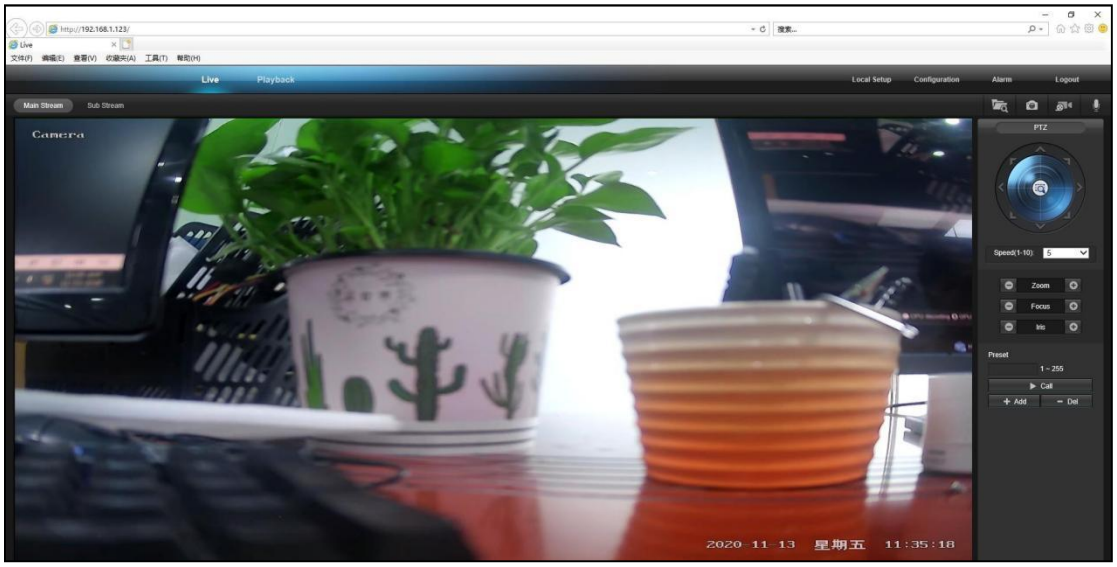

8. If you need tech support, please contact us to support@vikylin.com