
INSTALLATION INSTRUCTIONS

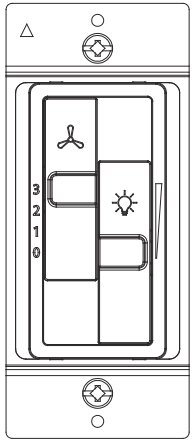

Model: TGDSFS3
Combination LED Dimmer and 3 speed Fan Control

*** Single-Pole Only**
*** Neutral NOT REQUIRED**

SPECIFICATIONS

Voltage	120VAC, 60Hz
LED/CFL	200 Watts
Incandescent/ Halogen	360 Watts
Fan	2.5A
Wire Gauge	#18 ~ #12 AWG

WARNING

Turn the power off at the circuit breaker before installing this device.

Read and understand these instructions before installing. This device is intended for installation in accordance with the National Electric Code and local regulations. It is recommended that a qualified electrician performs this installation. Make sure to turn off the circuit breaker or fuse(s) and make sure power is off before wiring the device.


Use copper wire only. No Aluminum.


INPUT: Use wires with minimum rating of 75° C (167° F)


WIRING DIRECTIONS

1. Remove the wall plate.
2. Remove existing switch from wall box and prior to disconnecting wires, identify the wires and label as needed.
3. Remove wires from existing switch.
4. Follow the diagram below to connect the TGDSFS3

TGDSFS3 dimmer/fan speed control replaces standard on/off switches and **does not require** other control modules.

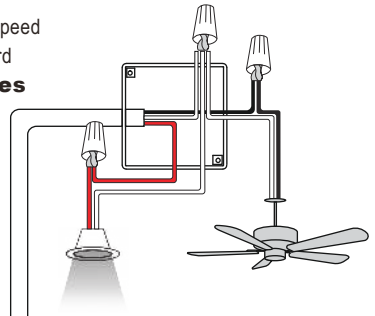


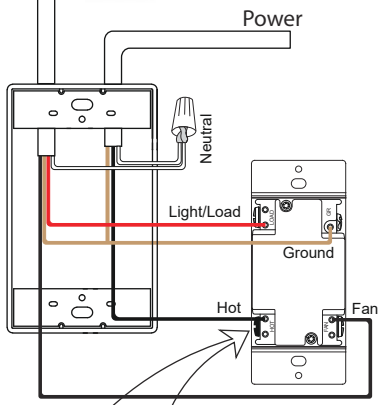

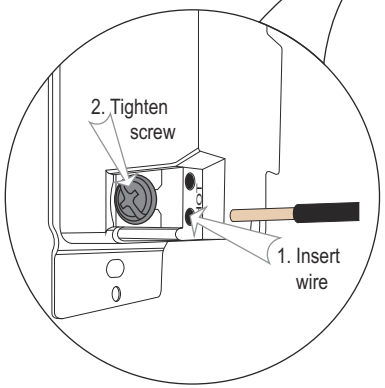


OPERATING INSTRUCTIONS

Before using this switch to control your fan, be sure to first set the speed on the ceiling fan to high. Some fan models may have a pull string attached to its side or underside. Please check the fan manufacturer's instructions on how to change fan speed.

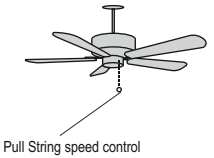

The dimming slider has an off position when you move the slider all the way down. There will be a noticeable click when you slide to turn on or off.


Be sure to use dimmable light bulbs!

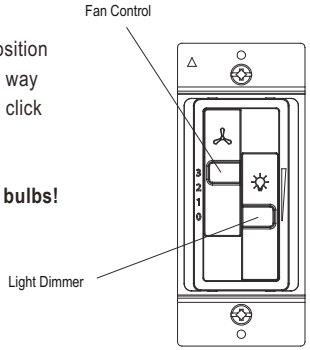

IMPORTANT NOTICE

This is a SINGLE-POLE SWITCH

You must have two load wires in the switch box and a HOT wire in order to use this switch. One load wire goes to the LIGHT and the other load wire goes to the FAN

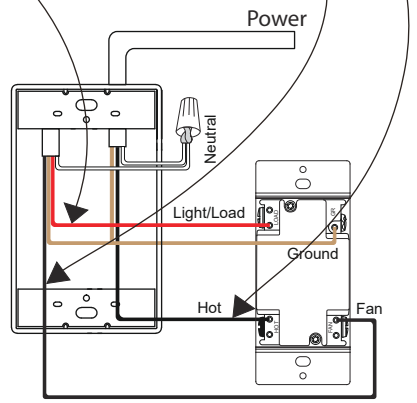

WARRANTY

This device is warranted to be free of material and workmanship defects for 1 year from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Top Greener, Inc. Warranties from other TOPGREENER products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Top Greener, Inc. shall not be liable to the purchaser or end user customer of TOPGREENER products for direct, indirect, incidental, or consequential damages even if Top Greener, Inc. has been advised of the possibility of such damages. Top Greener, Inc's total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.

c UL us LISTED

TOPGREENER®

© 2021 Top Greener, Inc. ● CA, U.S.A. ● WWW.TOPGREENER.COM ● 0207210162-01