ANPVIZ SECURITY

User Manual

HK Series
Network Turret Camera

EN Ver 2023010199

EN

Thank you very much for choosing Anpviz.

Our products are supported by the world's first video monitoring manufacturers and they have adopted military level of protection.

It is our top priority to ensure your data safety and offer you asatis factory service.

We strongly recommend that you set up an appropriate password for your device and save it also set up security questions an dreserved email to ensure you can reset password by yourself.

If you have any questions,Please feel free to email us:**support@anpvizsecurity.com**

Orvisit **https://www.anpvizsecurity.com/download/**

Please download Client software and User Manuals from our download center：

https://www.anpvizsecurity.com/downloadcenter.html

About this Manual

The Manual includes instructions for using and managing the product Picture, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website. Please use this user manual under the guidance of professionals.

Legal Disclaimer

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATOCK, HACKER ATTACK VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS HOWEVER, OUR COMPANY WILL PROVIDE TIM ELY TECH NIC AL SUPPORT IF REQUIRED. SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. OUR COMPANY SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL ANDTHE APPLICABLE LAW, TH E LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment o ffand on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver Is connected.
—Consult the dealer or an experienced radio/TV technician for help.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference.
2.This device must accept any Interference received. Including Interference that may cause undesired operation

■ EU Conformity Statement

This product and - if applicable - the supplied accessories too are marked with (£ 'CE' and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2015/35/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your Local supplier upon the purchase of equivalent new equipment or dispose of it at designated collection points. For more information, please see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste In the European Union. See the product documentation for specific battery information. The battery is marked with this symbol which may Include lettering to Indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point For more Information, please see: www.recyclethis.info.

■ Safety Instruction

These instructions are Intended to ensure that user can use the product correctly to avoid danger or property loss. The precaution measure is divided into “Warnings” and "Cautions"

Warnings: Serious Injury or death may occur if any of the warnings are neglected.
Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

Warnings: Follow these safeguards to prevent serious injury or death.	**Cautions: Follow these precautions to** prevent potential injury or material damage.

Warnings

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- In put voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 SC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket
- If smog odor or noise rise from the device, turn o ffthe power at once and unplug the power cable, and then please contact the service center.


Cautions

- Make sure the power supply voltage Is correct before using the camera.
- Do not drop the camera or subject it to physical shock,
- Do not touch senor modules with fingers. If cleaning Is necessary, use clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period, replace the lens cap to protect the sensor from d lit
- Do not aim the camera at the sun or extra bright places. Blooming or smearing may occur otherwise (which Is not a malfunction), and affect the endurance of sensor at the same time.
- The sensor may be burned out by a Laser beam, so when any Laser equipment is in using, make sure that the surface of sensor will not be exposed to the laser beam.


- Do not place the camera In extremely hot, cold (the operating temperature shall be -30°C to +60°C, or -40"C to +60*C if the camera model has an "H1 in its suffix), dusty or damp Locations, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for operating environment.
- Keep the camera away from liquid while In use.
- While in delivery, the camera shall be packed in its original packing, or packing of the same texture.

1.Appearance Description

Type I

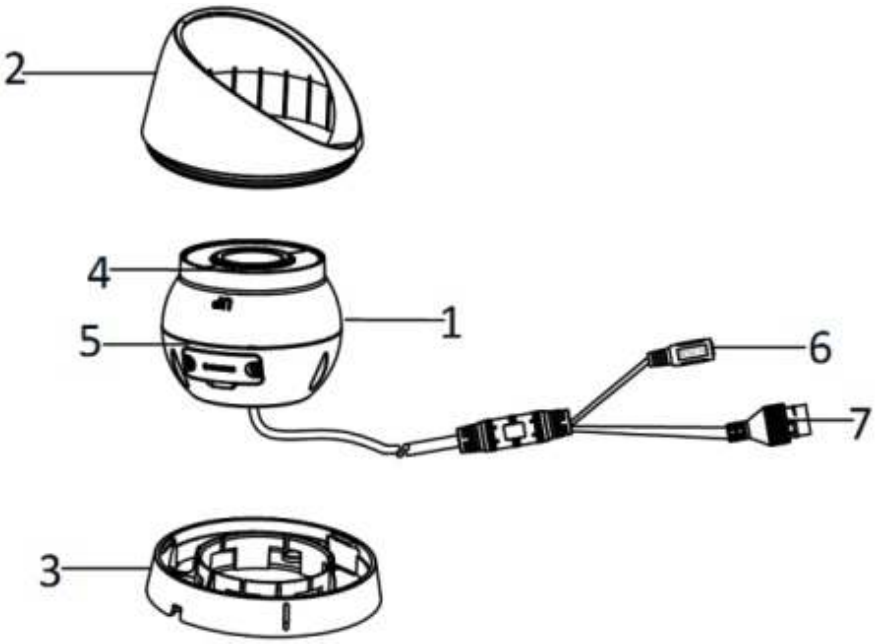

Type II

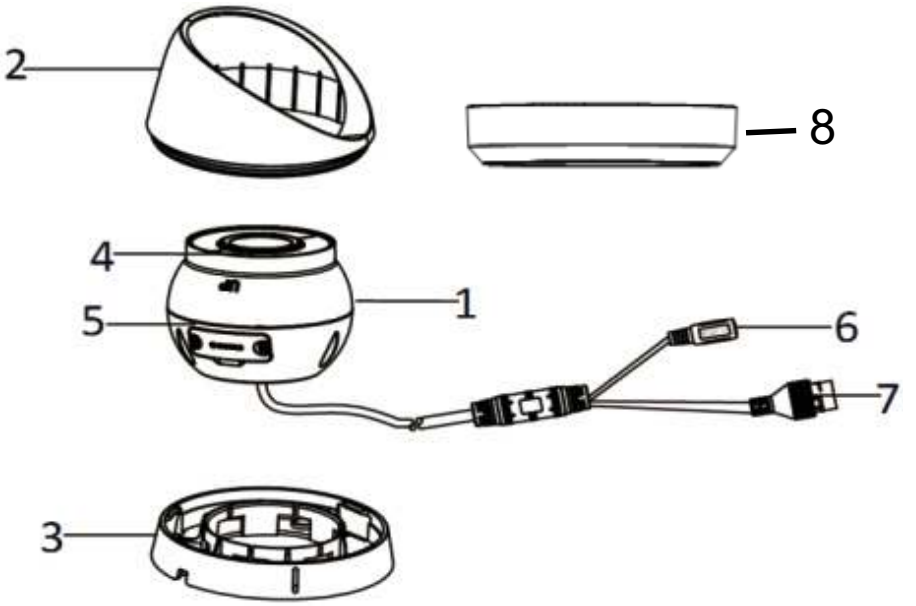

Turret Camera Overview

No.	Descripton
1	Camera Body
2	Enclosure
3	Mounting Base
4	Microphone
5	SD Card Slot/Reset Buton*
6	Network Cable
7	Power Cord
8	Trim Ring

Table Description

Notes:

- Theitems marked with the "*" are only supported by certain camera models.
- For cameras support power over Ethernet (PoE), the poweris passed along with data on Ethernet cabling.And a switch supports PoE functionis required.

2. Installation

Before you start:

- Make sure the device in the package is in good condition and all the assembly parts areincluded.
- The standard power supplyis 12 VDC or PoE Swicth , make sure your power supply matches with your camera.
- Make sure all the related equipmentis power-o ffduring the installation.
- Check the specification of the products for the installation environment.
- Make sure that the wall is strong enough to withstand four times the weight of the camera and the bracket.
- Make sure that there is no reflective surface too close to the camera lens. The IR light from the camera may reflect back into the lens causing reflection.

2.1 Memory Card Installation

Only certain camera models support memory card installation, you can follow the steps to mount and unmount the memory card.

Step:

1. Rotate the camera to expose the memory card slot.
2. Loosen the screws to remove the memory card slot cover.

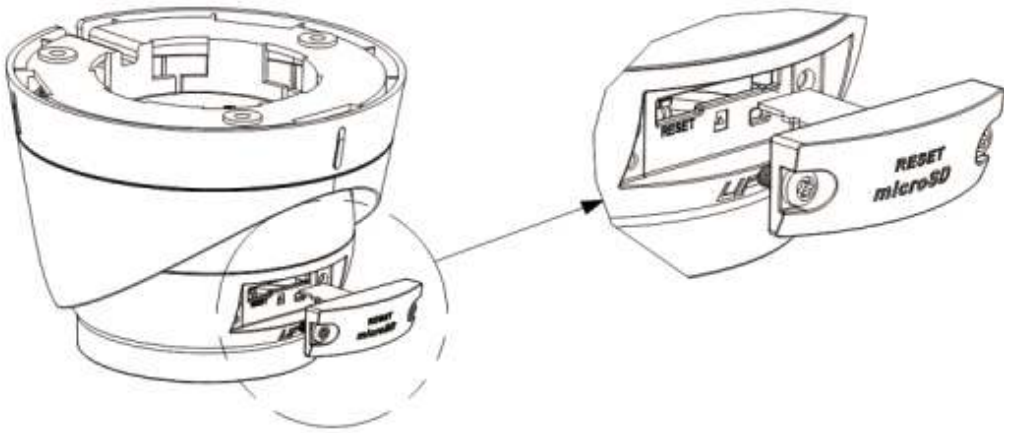


Figure 2-1 Unscrew the Cover and Insert Memory Card

1. Insert the memory card into the memory card slot.
2. (Optional)To unmount the memory card, push to get it ejected.
3. Screw the cover back to the camera.

■ 2.2 Ceiling Mounting

Before you start:

Both wall mounting and ceiling mounting are suitable for the turret camera. Ceiling mounting will be taken as an example in this section. And you can take steps of ceiling mounting as a reference for wall mounting.
This camera series shares the same installation method, we take type III/IV turret camera as the example to illustrate the installation.

Steps:

1. Paste the drill template (supplied) to the desired mounting position on the ceiling.

2. Drill the screw holes and the cable hole in the ceiling according to the drill template.


Notes:

Drill the cable hole, if adopting ceiling outlet to route the cable.

3. Disassemble the camera.

1). Rotate the camera to align the notch to one of the marks.
2). Insert a coin or another similar tool to the notch.
3). Press down the coin or another similar tool to pry the mounting base so as to separate the mounting base from the camera.

Type I

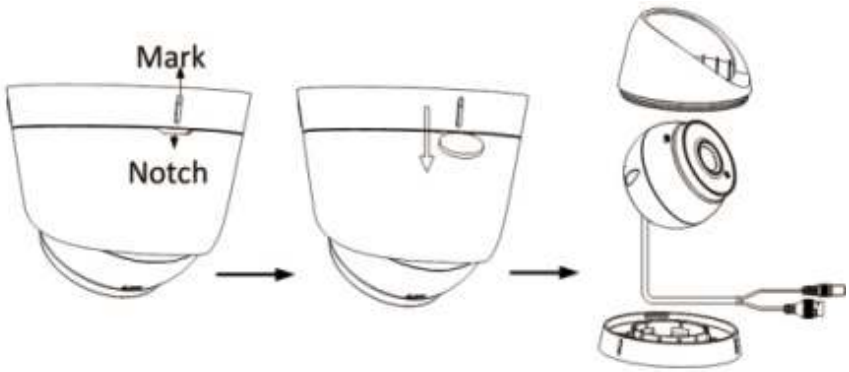

Type II


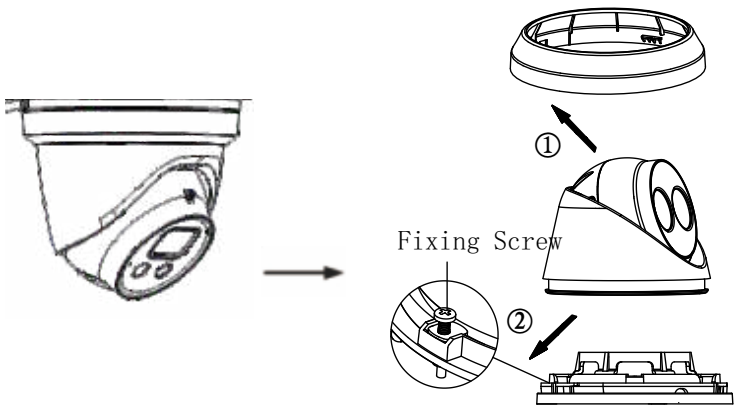



Figure Disassemble the Camera

4. Fix the mounting base to the ceiling with supplied screws.

Notes:

- In the supplied screw package, both self-tapping screws, and expansion bolts are contained.
- If the ceiling is cement, expansion bolts are required to fix the camera. If the ceiling is wooden, self-tapping screws are required.

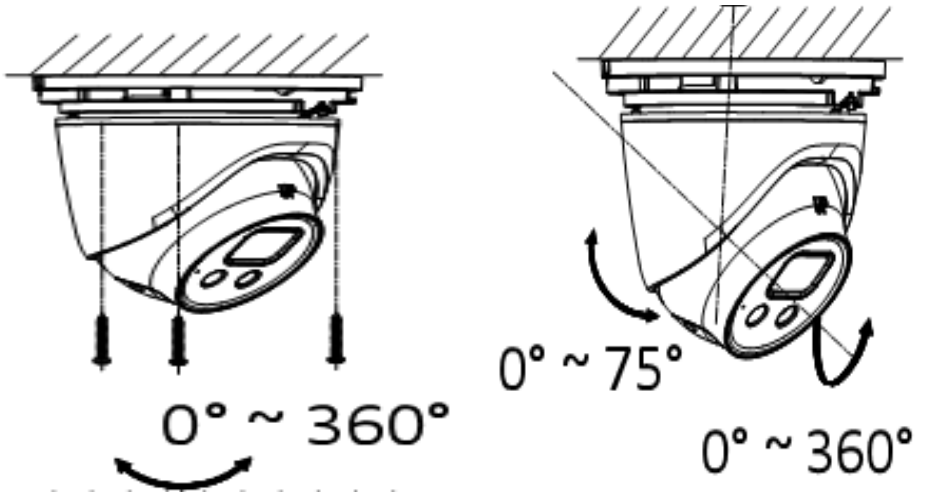

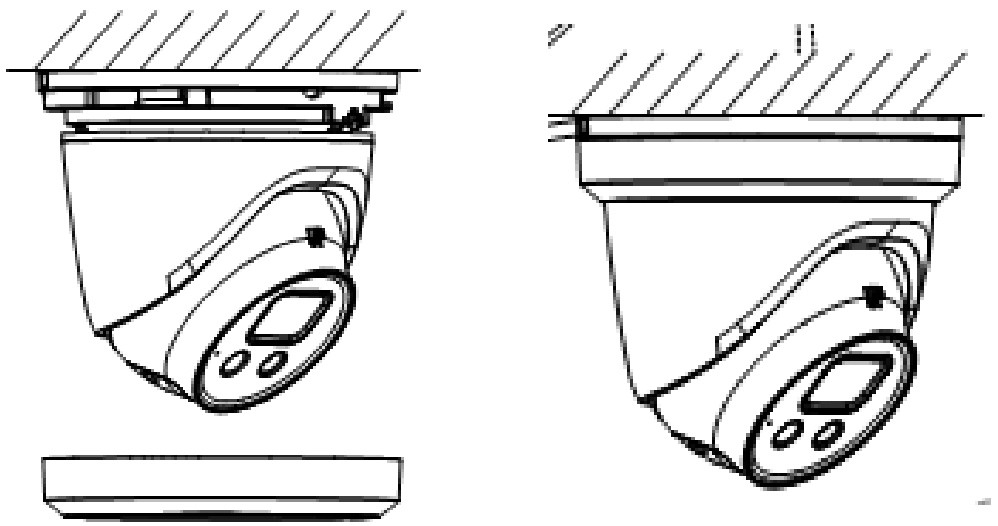

■ 2.3 Mounting with Junction Box

Before you start:

- You need to purchase a junction box separately if you adopt the mounting with a junction box.
- Both wall mounting and ceiling mounting are suitable for the turret camera. Wall mounting will be taken as an example in this section. And you can take steps of wall mounting as a reference for the ceiling mounting.

Steps:

1. Paste the drill template (supplied) to the desired mounting position on the wall.
2. Drill the screw holes and the cable hole in the wall according to the drill template.

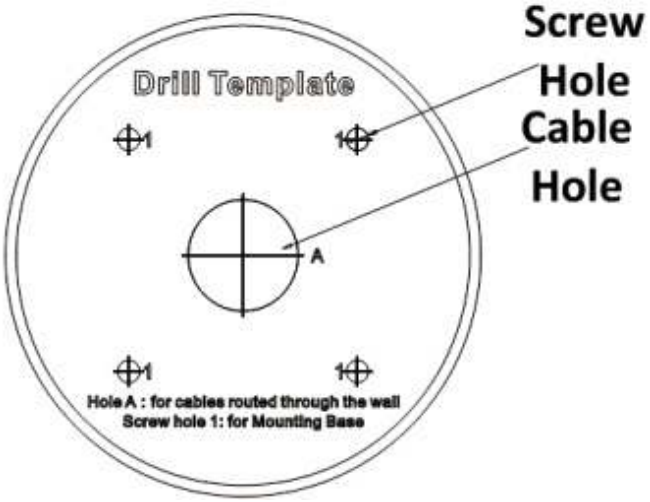


Figure 2-7 Drill Template

3. Take apart the junction box, and fix the camera's mounting base with three MP4 screws on the junction box's cover.

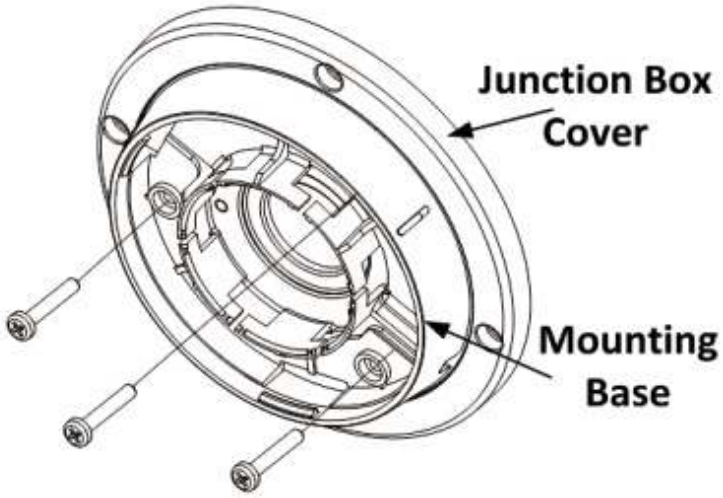


Figure 2-8 Fix screws on the junction box's Cover

4. Secure the junction box's body on the wall with four PA4 × 25 screws.

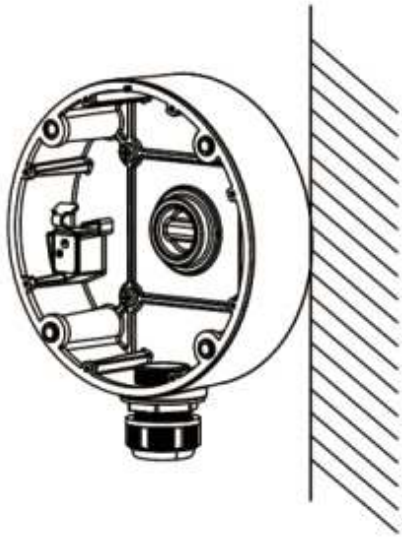


Figure 2-9 Secure the Junction Box's Body on the Ceiling/Wall

5. Combine the junction box's cover with its body with supplied screws.

6. Repeat steps 5 to 8 of 2.2 Ceiling Mounting to complete the installation.

■2.4 Mounting with Inclined Base

Before you start:

- You need to purchase an inclined base separately if you adopt the mounting with an inclined base.
- Both wall mounting and ceiling mounting are suitable for the turret camera. Wall mounting will be taken as an example in this section. And you can take steps of wall mounting as a reference for the ceiling mounting.
- Only certain camera models support this mounting method.

Steps:

1.Paste the drill template to the wall.
2.Drill screw holes and the cable hole (optional) on the wall according to the supplied drill template.

Notes:

Drill the cable hole, when adopting ceiling outlet to route the cable

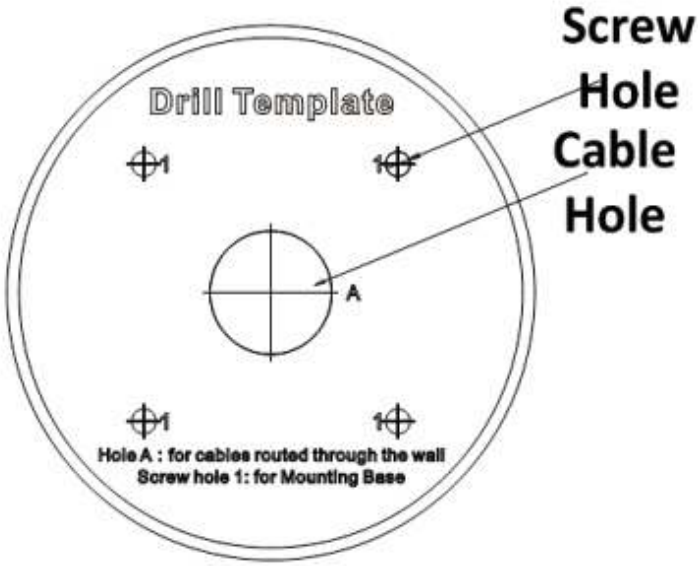


Figure 2-10 Drill Template

1. Disassemble the inclined base by the screw driver.
2. Install the turret camera's mounting base on the inclined base cover with three PM4 screws.

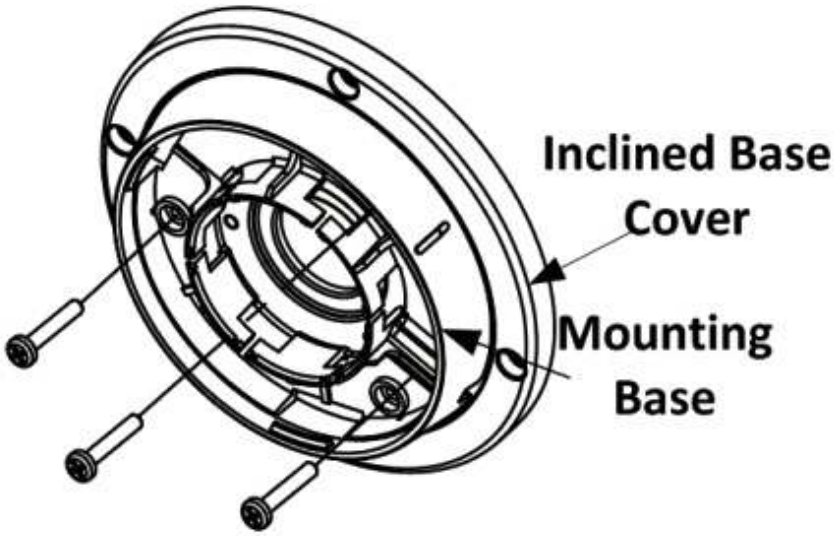


Figure 2-1 1 Fix Camera's Mounting Base

5. Install the inclined base's body on the ceiling/wall with four PA4×25 screws.

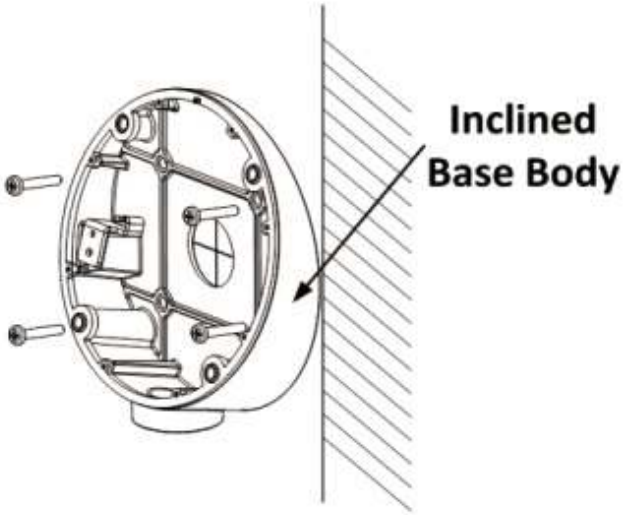


Figure 2-1 2 Fix the Inclined Base's boy on Ceiling/Wall

6. Combine inclined base's cover with its body with supplied screws.
7. Repeat steps 5 to 8 of 2.2 Ceiling Mounting to complete the installation.

■ 2.5 Wall Mounting

Note:

You need to purchase a wall mounting bracket separately.

Steps:

1. Drill four screw holes in the wall according to the holes of the bracket.
2. Install the bracket to the wall by aligning the four screw holes of the bracket with expansion screws on the wall.
3. Secure the bracket with four hex nuts and washers.

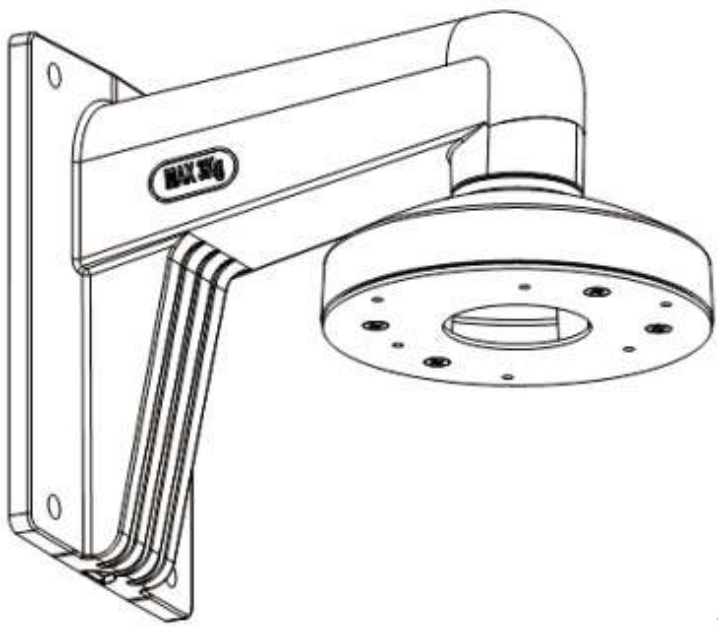


Figure 2-1 3 Install the Wall Mounting Bracket

4. Install the mounting base of the turret camera to the wall mounting bracket and secure them with supplied screws.

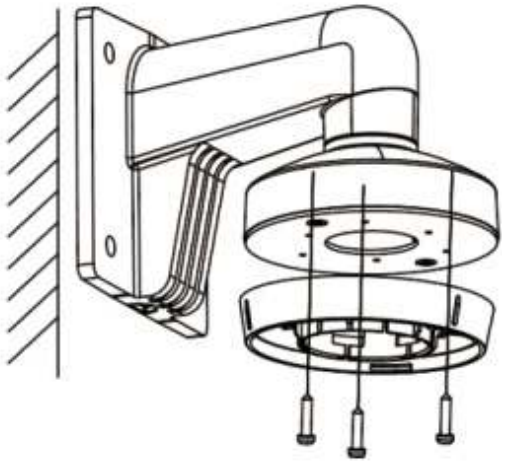


Figure 2-1 4 Install the Mounting Base on the Wall Mounting Bracket

5. Repeat steps 5 to 8 of 2.2 Ceiling Mounting to complete the installation.

■ 2.6 Waterproof Measures

If the camera is installed outdoor, you should use the waterproof accessory or tapes to waterproof the cables. Otherwise, the cables might get wet or a short circuit occurs.

■ 2.6.1 Install Network Cable Waterproof Jacket

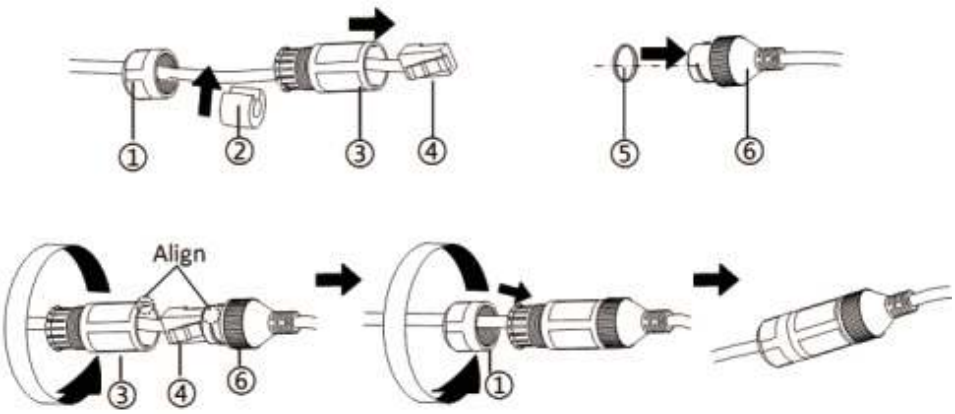


Figure 2-15 Install Waterproof Jacket

Steps:

1. Feed the network cable through ① and ③ in order.
2. Fix ② on the network cable between ① and ③.
3. Place ⑤ onto the end of ⑥, and plug the RJ45 male connector into RJ45 female connector.
4. Screw ③ to ⑥ clockwise.
5. Push ② into ③.
6. Secure ① with the ③ in clockwise direction.

■ 2.6.2 Waterproof Other Cables

After routing and connecting the cables, use the waterproof tapes to wrap up the cables. Connected cables and spare cables both should be wrapped up as the figures below.

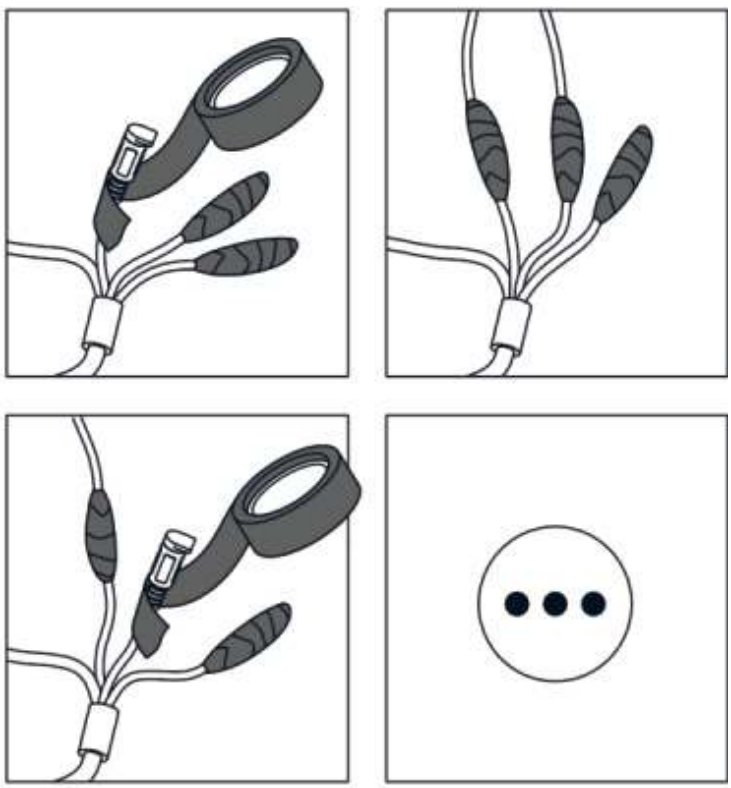


Figure 2-1 6 Waterproof Cables

3. Activate and Access Network Camera

Scan the QR code to get Activate and Access Network Camera. Note that mobile data charges may apply if Wi-Fi is unavailable

4. Operate IPCameras via pc Browser

You can configure the IPcameras In the LAN network via the IE browser.


1.Power on the camera with a DC 12 V adapteror POE Swtich and connectit to the same router as your computer with a network cable.

2.Install the SADPsoftware and search the camera.


can download SADPsoftware from our website:

www.anpvizsecurity.com/download/software&Tools-HK Series

https://www.anpvizsecurity.com/download-21725

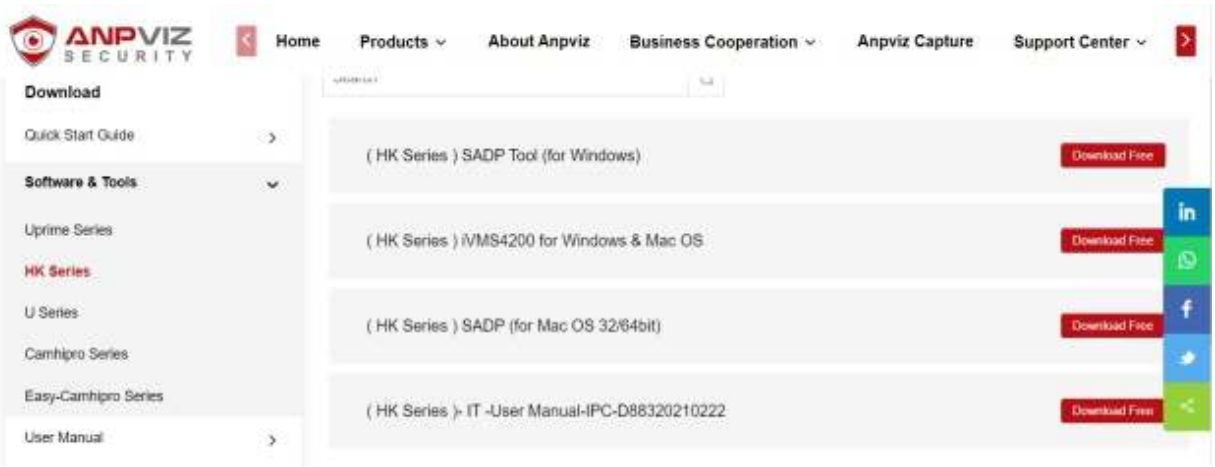

3.Check the box of the camera and then activate the camera by creating alogin password.

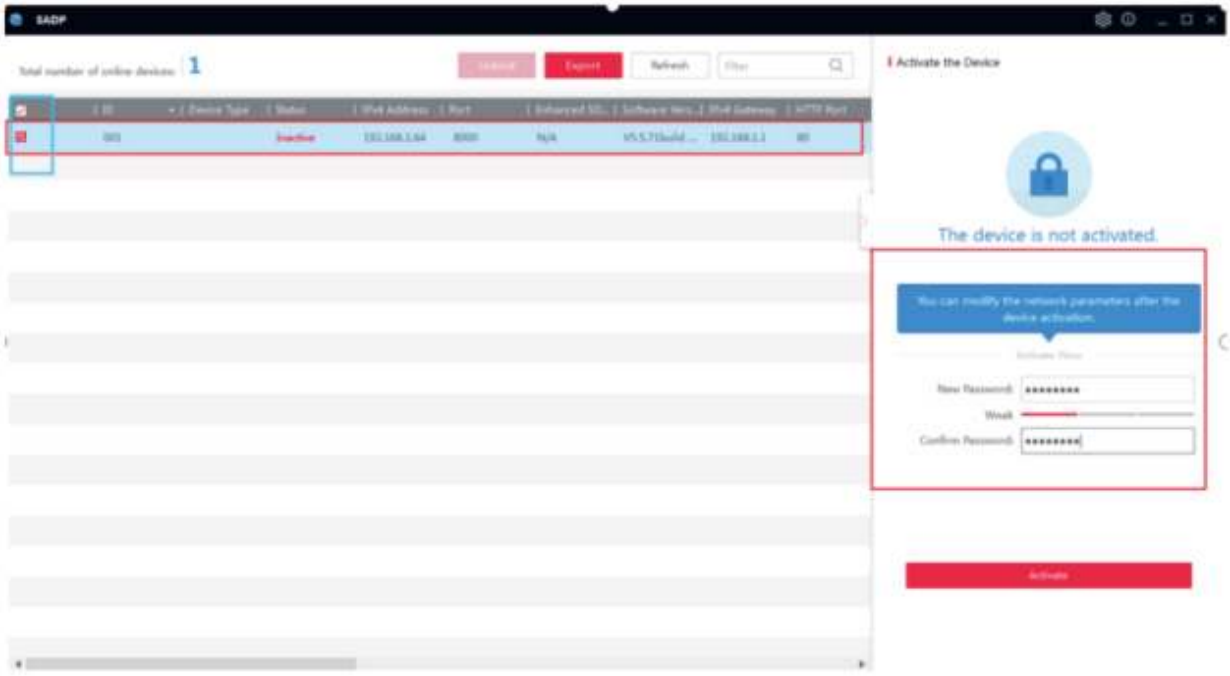


Note: If the camera is directly connected to ANPVIZ HK Series NVR, or hikvision NVR, the camera does not need to be activated, and can output images by directly connecting to the NVR POE interface through a network cable.


4.Double click the camera's address or you caninput the IPaddress on the PC browser to enter thelogin page.The default account nameis admin and the passwordis the one youjust set up.



5. Download and install the plug-in to view live video and manage the camera. Close the browser when installing the plug-in.

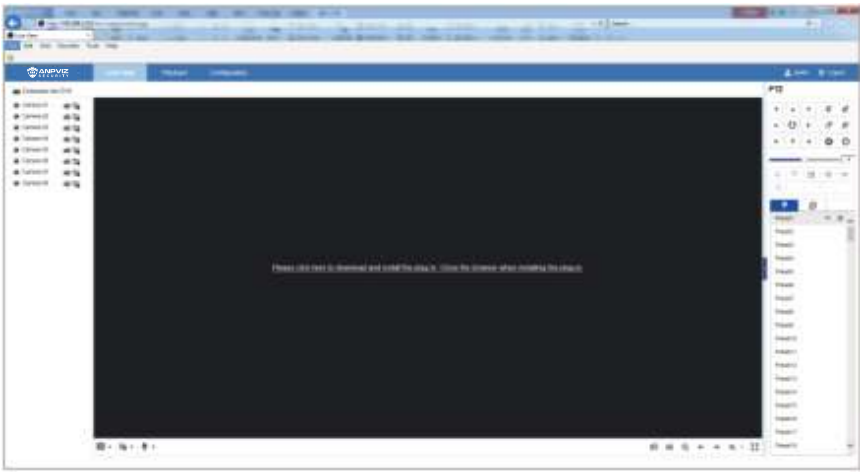

6. Re-open the pc browser andlogin the camera. Choose the channel you want to access and set up the camera by clicking Configuration.

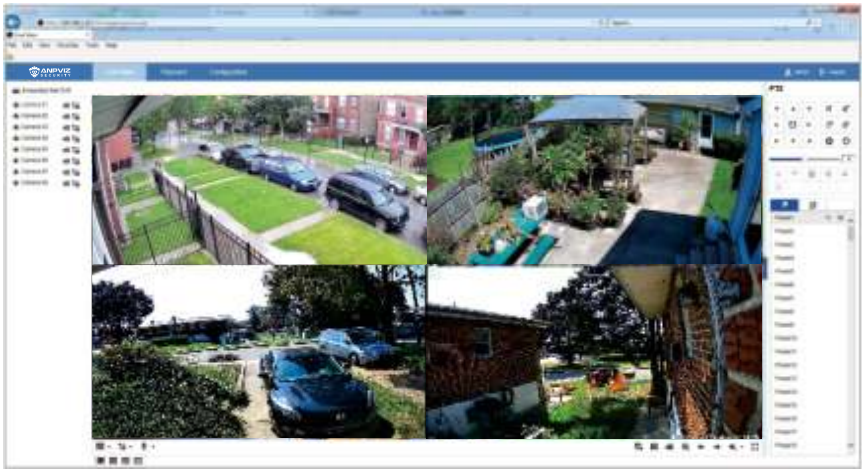

7. Alarm Setting

Login the IP address of the camera through the browser, enter the camera configuration -Event-motion detection, and set the detection area, sensitivity, alarm schedule, linkage mode, etc. The camera supports Motion2.0 AI technology, which can realize the detection target classification, detect the target Human/Vehicle video, greatly reduce false alarms, and push the Human/Vehicle alarm information more accurately and timely . Motion Detection 2.0 is on by default, it is the same with Motion Detection.



8. Record Schedule

1.Enter the Record Schedule interface.Check the Enable checkbox to enablescheduled recording.
2.Click Advanced to set the camera record parameters, includingoverwrite, pre-record, post-record, and ,stream type, etc.
3.Select a Record Type. The record type can be Continuous, Motion Detection, Alarm, Motion | Alarm, Motion & Alarm, and Event.
4.Click-and-drag the mouse on the timebar to set the record schedule. You can copy the record schedule to other days byclicking the green Copy icon on the right of each time bar.




■ 5. Remote Live Stream via Smart phones

You can view the IPcamera remotely via your mobile phone with the GuardingVisionApp.


1. Power on the camera with a DC 12 V adapter and connectit to the same router as your computer with a network cable. Make sure the router has connected to the Internet.

2. Download GuardingVisionApp from Google Play orApple Store. Click Register to sign up an account with your phone number or email address. Please click Login after you have registered the account successfully.


Note: Please select the correct country/region (the samelocation as your device) when you register an account. It cannot be changed once selected

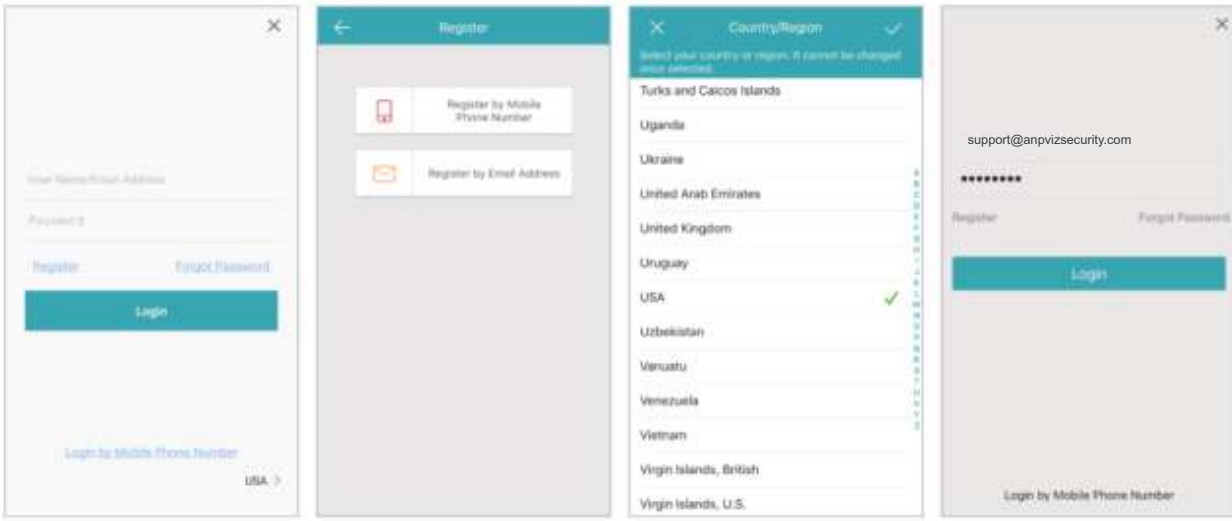

3.Select **Add Device** ⊕, or click the icon"+" in the upper right corner to add a device. Scan the camera's QR code on the device label. Click **Next** and create a password to active the device if it has not been activated.

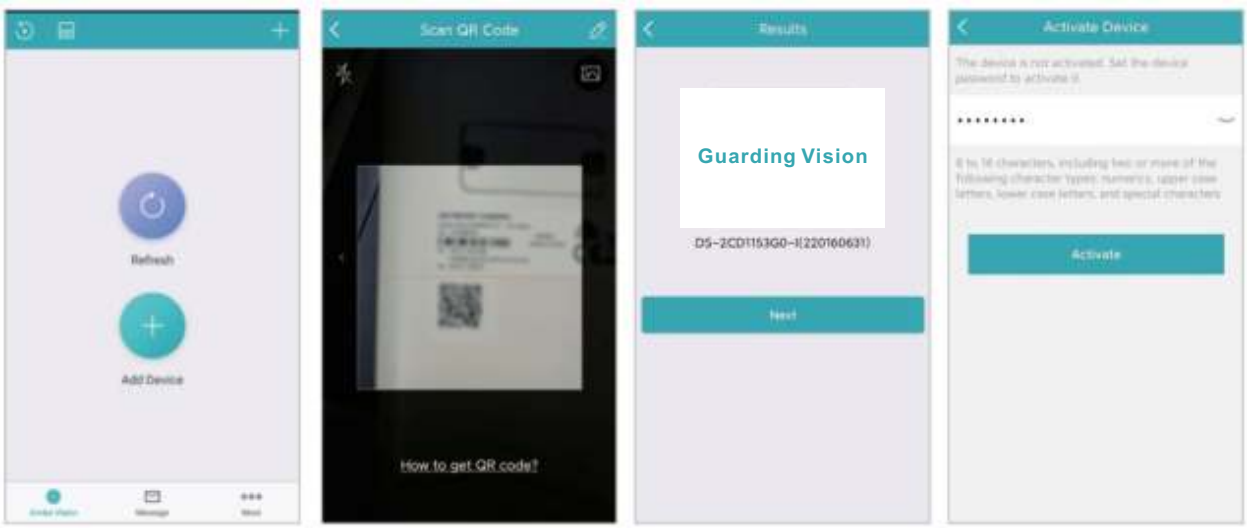


4.Click Read and Agree GuardingVision terms of service to enable GuardingVision service before continuing to add the device. Create a verification code and finish the adding process. After that, the device will be shown in the device list. Click the device name to get live view.

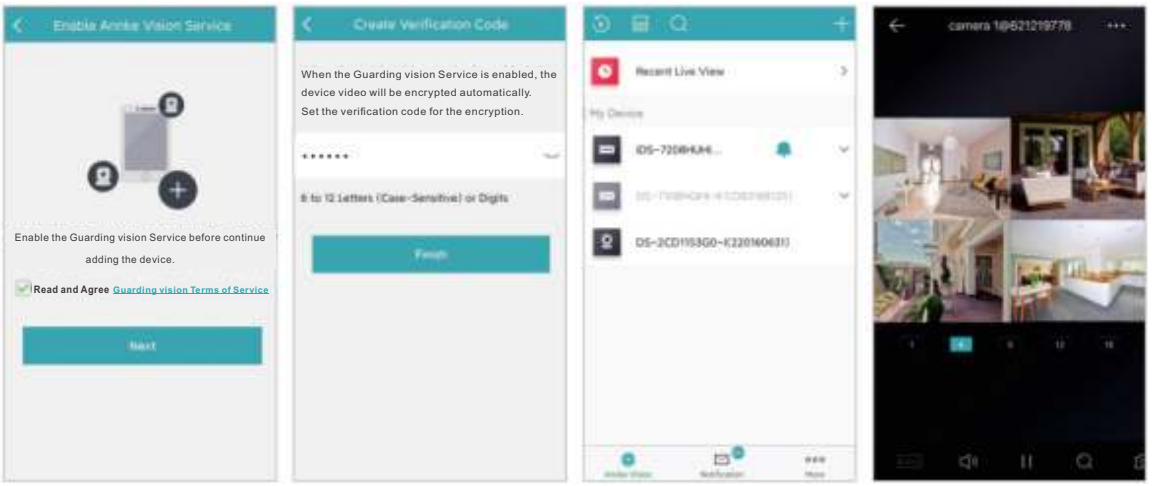



Note: For your security, a serial number can only be added by one account, but an account can be used on multiple mobile phones. You can share your device with others.

6. Mobile phone alarm push settings

1. The mobile phone opens the push permission of the guardingvision app.
2. Enter the camera menu through the app, enable the alarm push function of the cam era, set the area, sensitivity, etc.

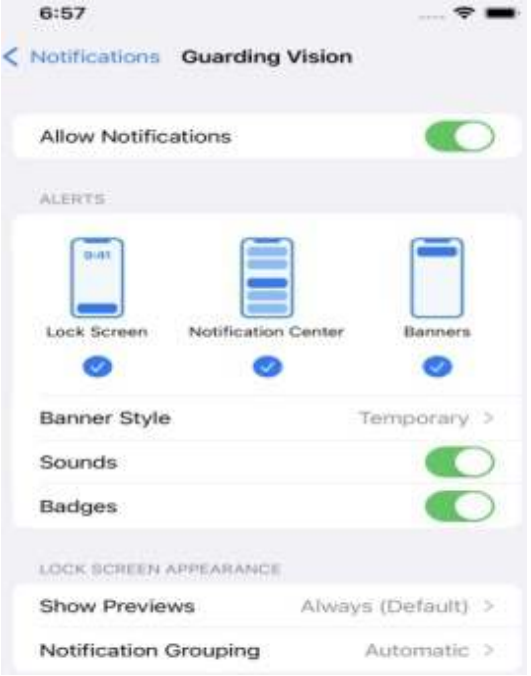

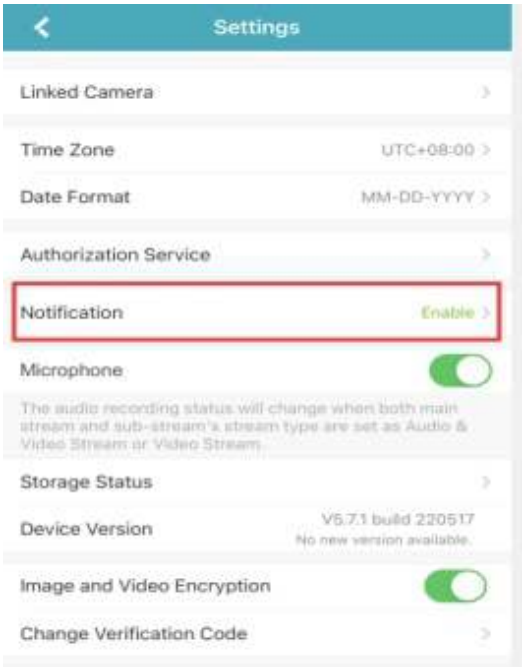

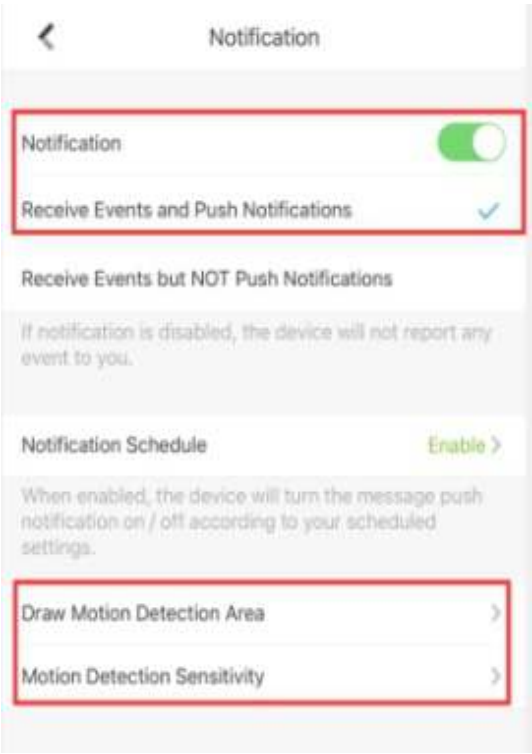




■ 6. Operate IPCamera via Computer Software

1.Power on the camera and connectit to the same router as your computer with a network cable.


2.Install the desktop software **Guarding Vision/IVMS 4200** and search the camera.

You can download **Guarding Vision/IVMS 4200** from our website:

www.anpvizsecurity.com/download/software&Tools-HK Series
https://www.anpvizsecurity.com/download-21725

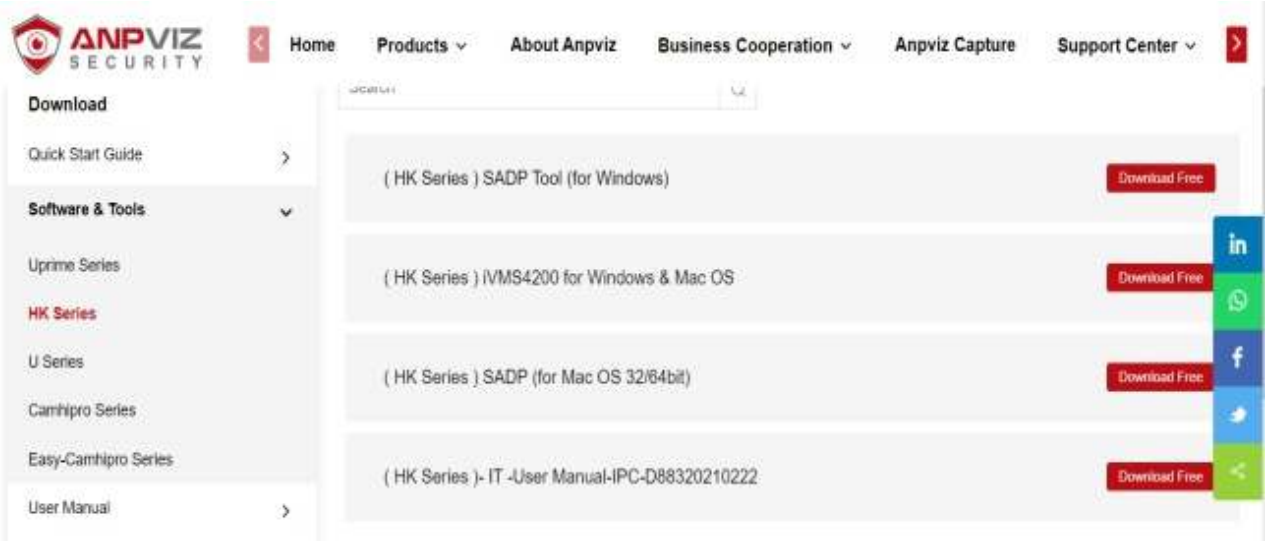


3. Launch Guarding Vision/IVMS 4200 software. The control panel and live view interface of Guarding Vision/IVMS 4200 are shown below.

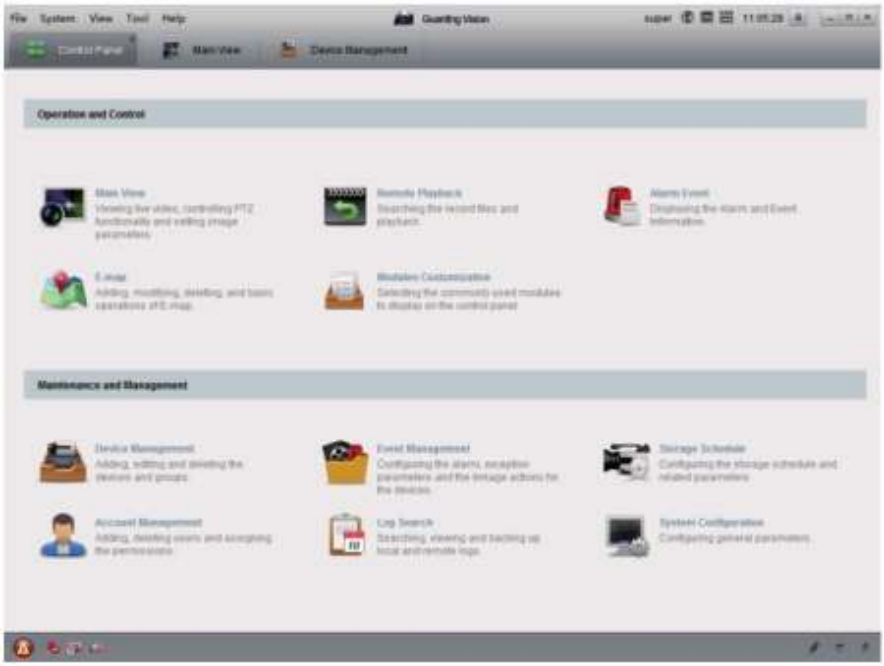

4.Go to **Control Panel-Device Management-Device**. At the bottom of the screen and in the **Online Devices** section, the screen will display all devices on the network. Create a password to active the device if the device's status is inactive.

5. Click **Add to Client**. Input Nickname, User Name and Password (the password is the same as your activated password instead of the verification code). Click **Add** to add the device to the client software (as shown in the picture below).

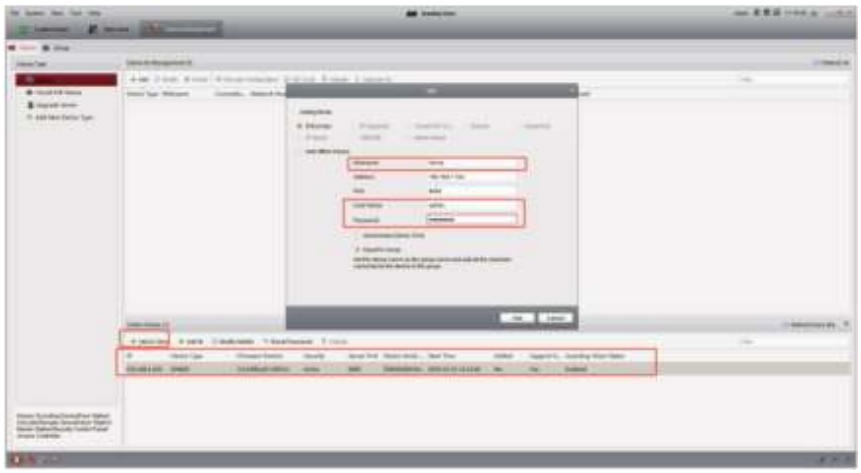


Note: If you want to access the camera remotely via the desktop software Guarding Vision, please choose **Guarding Vision/IVMS 4200 Device** and log in your cloud account to view remote live stream.

6.Go to **Control Panel-Main View.**
If you have added the IP camera, you can get a live view in the screen (as shown in the picture below).



For more information, Please press **F1** to get user manual

■7.View Live Stream with Other Software thats Supports RTSPProtocol

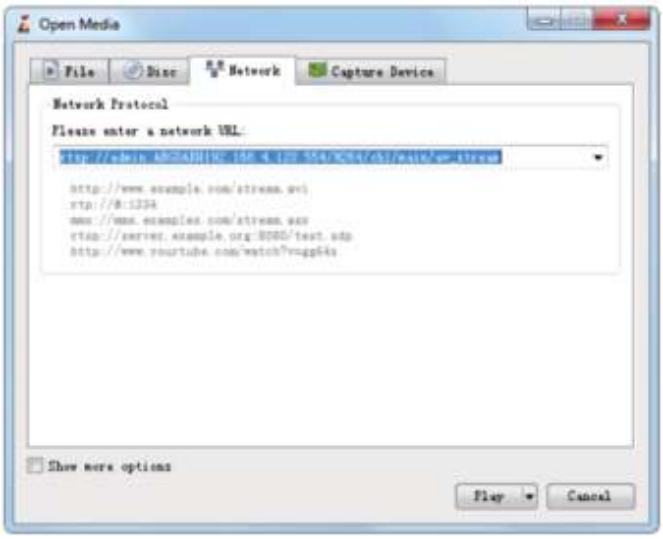




The IPcamera supports RTSPprotocol.The camera can be accessed via the VLC player. Blue Iris, tinyCam and other software that supports RTSP.
The correct description of RSTPis as below:
rtsp://<username>:<password>@<IP address of camera>:<RTSP port>/Streaming/channels/<channel number><stream number>
Username: admin (default)
Password:The passwordis thelogin password used to active your Camera.
IP:You can get the camera's IPaddress on the SADPsoftware.
RTSP Port: 554(default)
Codec: H264 (H.265)
Channel: 1 stream number: main (01) sub(02)
Fox example:
rtsp://admin:a1234567@192.168.1.48:554/Streaming/channels/101
rtsp://admin:a1234567@192.168.1.48:554/Streaming/channels/102

■ 8. Connect IP Cameras to ANPVIZ NVRs


1. Please confirm that the resolution of the IP camera is not higher than the resolution supported by the NVR. For example, the highest resolution supported by the NVR7608Q16P NVR is 8MP, and it can only be connected to an IP camera with a resolution of 8MP.
2. Make sure that the NVR is activated and can be used normally. ANPVIZ HK series cameras do not need to activate the camera.
3. Connect the IP camera directly to the PoE interface of the NVR with a network cable, wait for about two minutes, and the picture will be automatically connected.
4. Enter the NVR menu: Main Menu > Camera -> Camera > IP Channel.
5. Click the Refresh button. If the password of the IP camera has been activated and the password is different from that of the NVR, please manually change it to be the same as that of the NVR, and then connect, and wait until the status shows that the addition is successful.

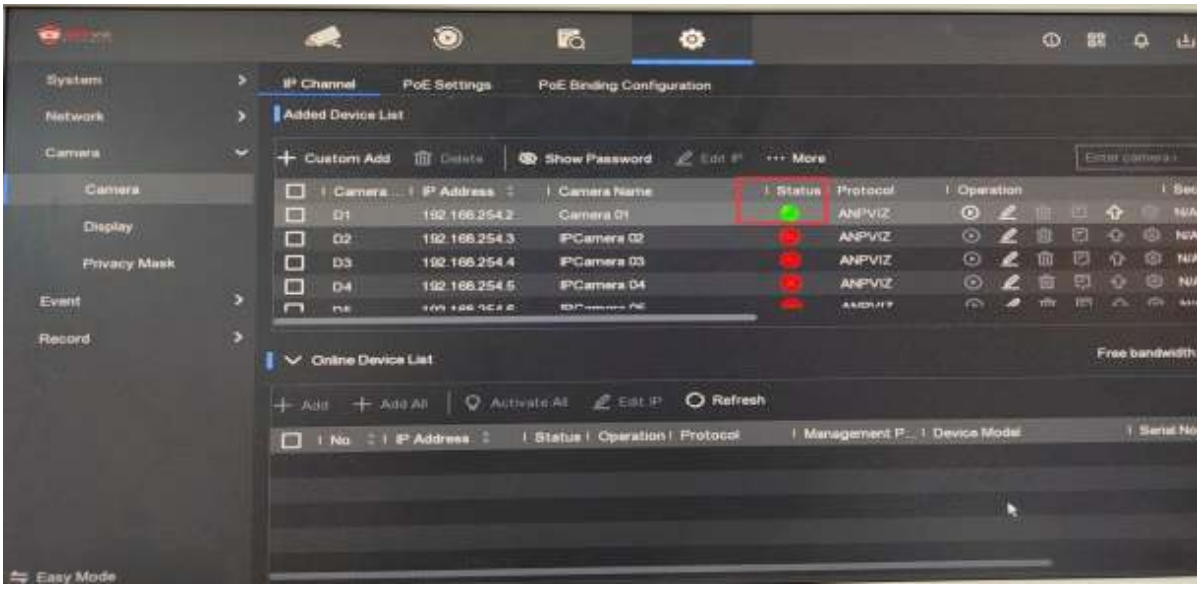


■ 9.Connect the IP Cameras to Other Brands' NVRs via ONVIF Protocol

1. Please confirm that the resolution of the IPcamerais not higher than the highest resolution that the NVR supports.
2. Power on the camera and connectit to the same router as your computer with a network cable (instead of connecting the camera to the NVR's POE port).
3. Install the SADPsoftware and then active the IPcamera. Login the camera via the PC browser.


4. After the ANPVIZ HK Series IPC camera is activated, the onvif function is enabled by default, and the onvif Username and password are the same as those of the Camera. If the connection fails, you can enter the camera menu to check, please go to Configuration -> Network -> Advanced Setting -> Integration Protocol.

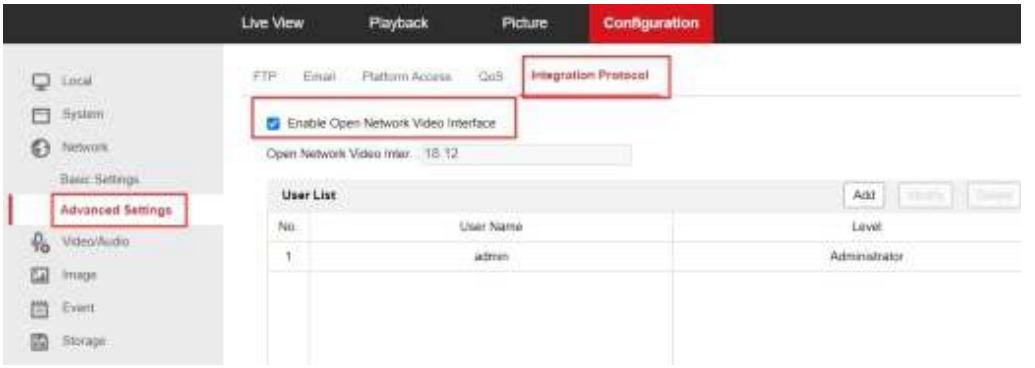


5.Add IPcamera to a third-party NVR. Here we take Dahua NVR as an example. Right click the mouse to enter the main menu. Click Setting ->CAMERA -> Device Search to detect the camera's IPaddress. Select the camera and click ManualAdd.

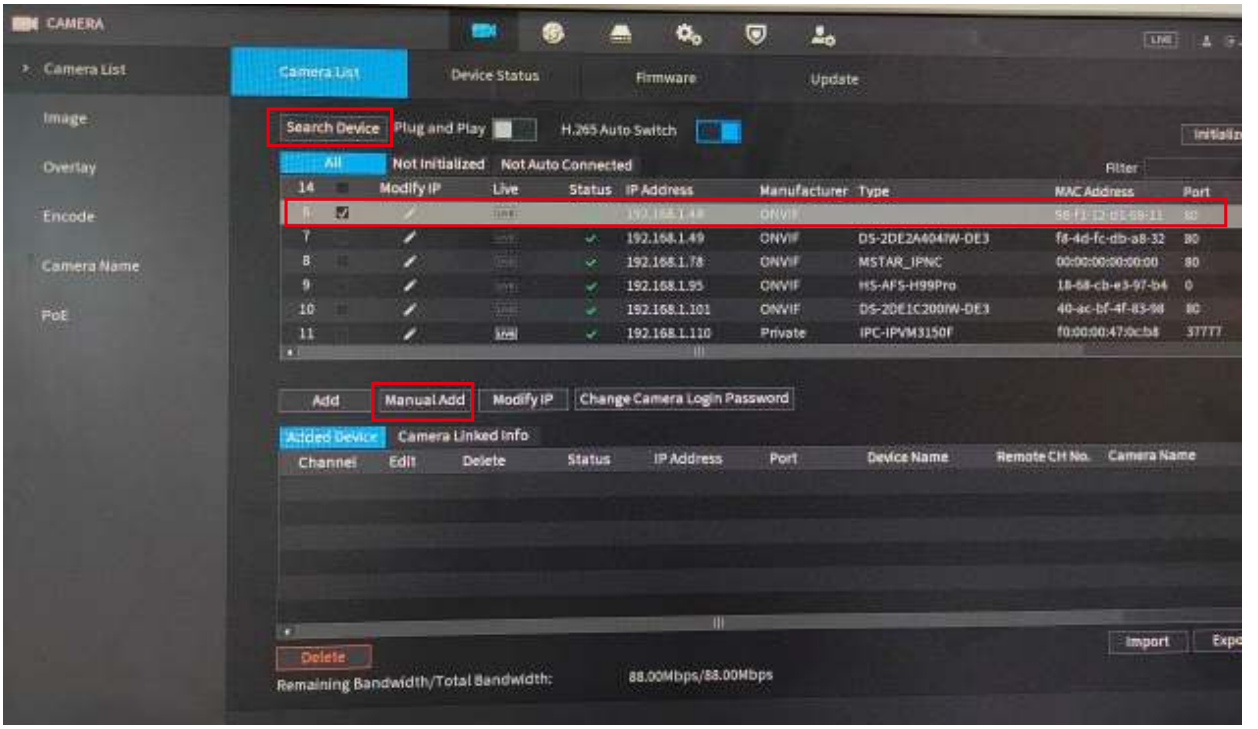

6.Input the correct ONVIF user name and password of the IPcamera (instead of the login user name and password).The status will be greenif the additionis successful. ClickApply and you will see thelive view.

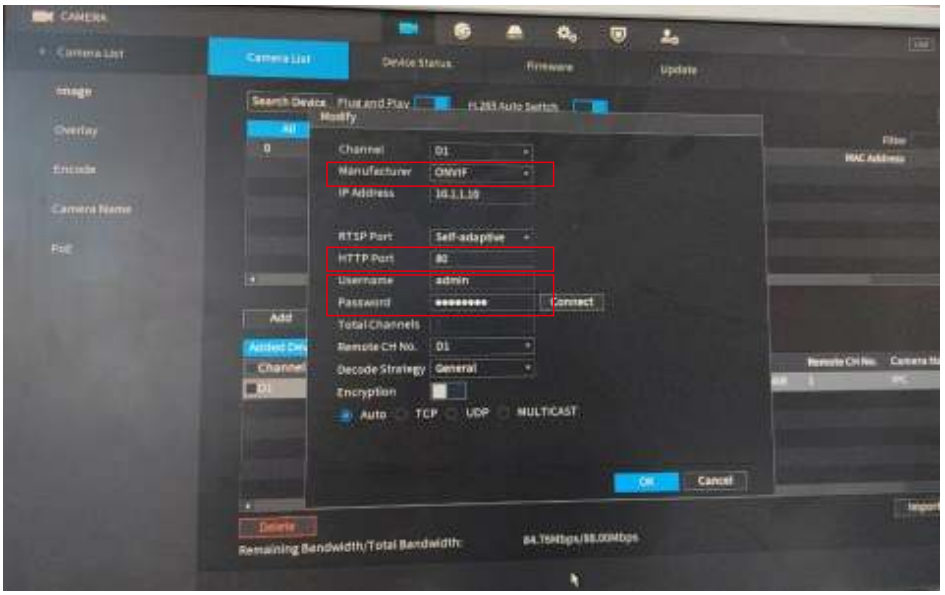

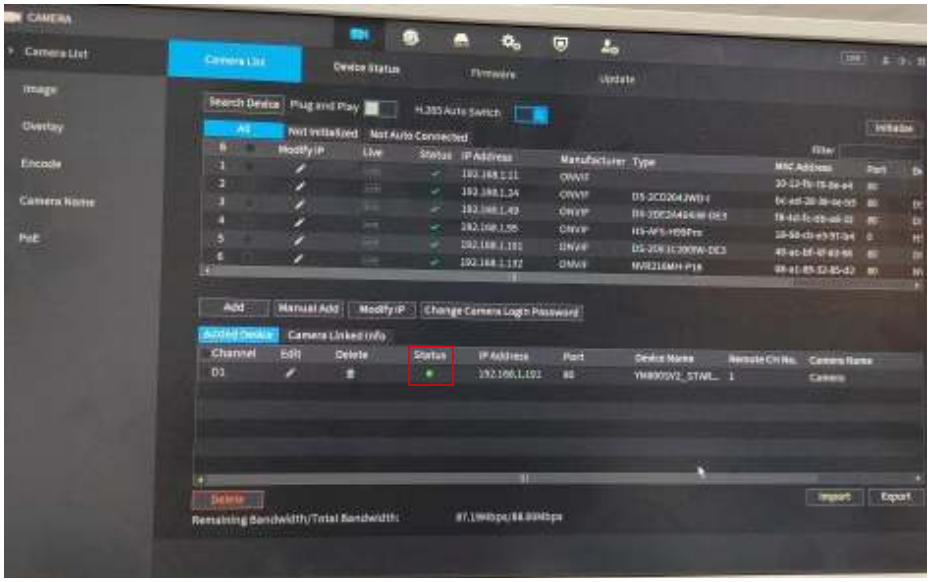

YouTube

Facebook

Anpviz Security Electronics Co.,Ltd.
Tech Support Email Address: Support@AnpvizSecurity.com
www.AnpvizSecurity.com

Madein China