
Veise

Installation Instructions of Lever (801)

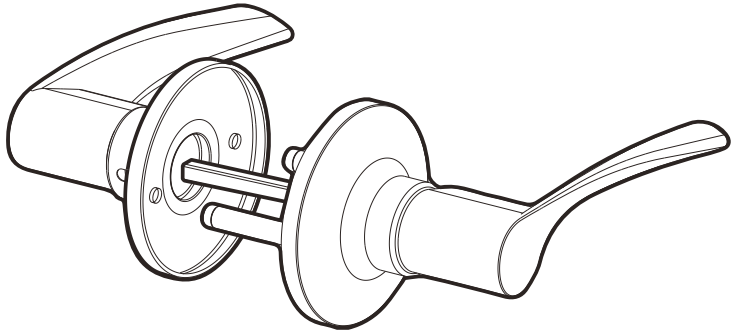

Tutorial Video

Scan the QR code to get the video.


Need Help? Contact Us!

Call us at **+1(855)400-3853** (Monday-Friday 9:00am-5:00pm PST), if you have any questions. **support@iveise.com** **iveise.com**






Content

- Parts List ---- 01
- Prepare the Door & Check Dimensions ---- 02
- Latch Adjustment ---- 03
- Install the Latch & Strike ---- 04
- Reverse Lever Direction (Optional) ---- 05
- Install Front and Rear Lever ---- 07

Installation Overview

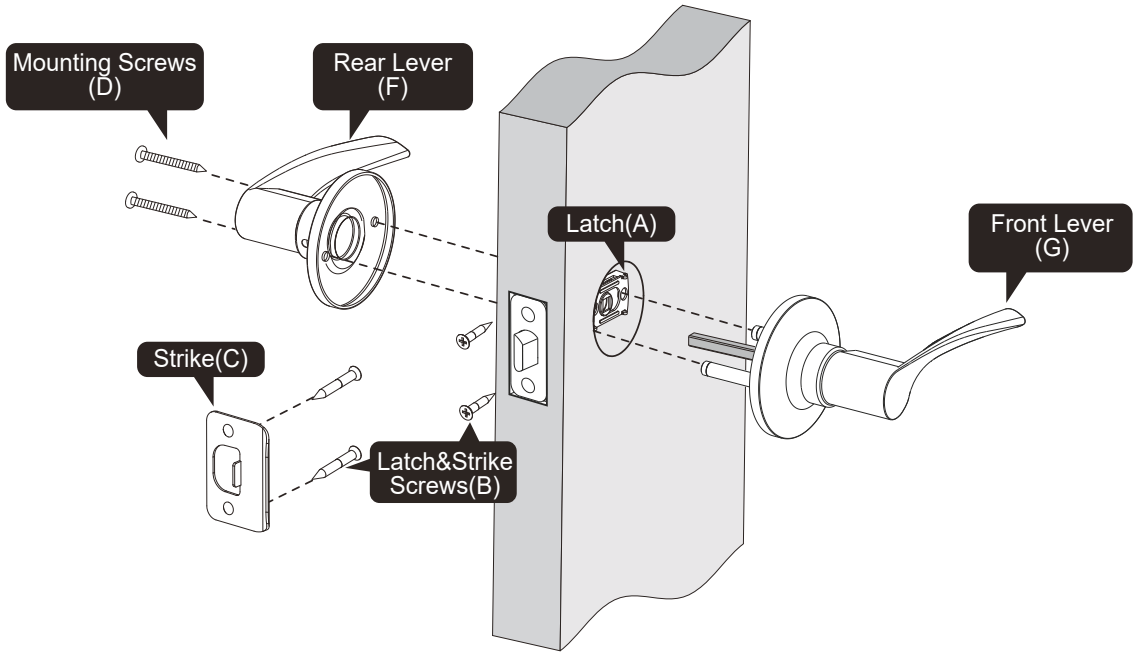

Parts List

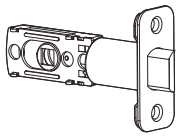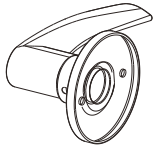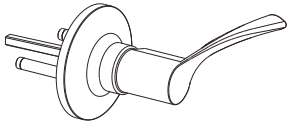Ⓐ Latch **x1** 	Ⓑ Latch & Strike Screws **x4** 	Ⓒ Strike **x1** 
Ⓓ Mounting Screws **x2**  Ⓔ Reset Tool **x1** 	Ⓕ Rear Lever **x1** 	Ⓖ Front Lever **x1** 

TOOL REQUIRED: 




Do not use an electric screwdriver during installation.


01

Prepare the Door & Check Dimensions


If your door already has the holes shown in the picture below, proceed to the next step; if your door does not have holes, use the mounting template to drill a new hole.

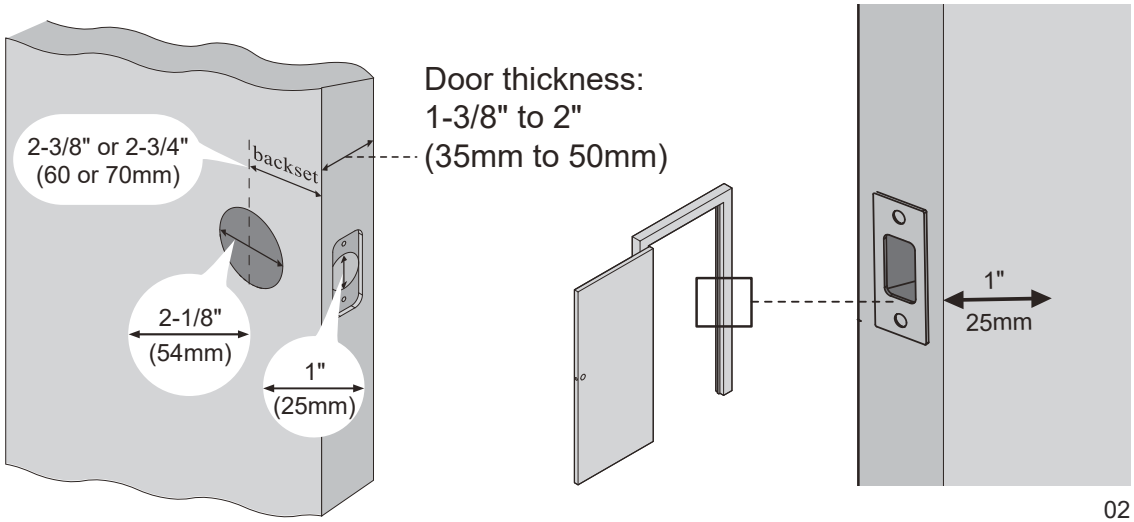

Latch Adjustment

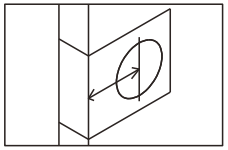



Backset is the distance from the door edge to the center of the hole in the door.

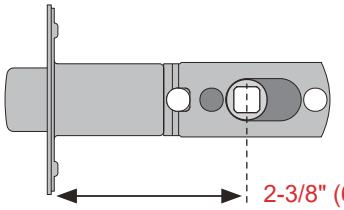


1 If the backset of your door is 2-3/8" (60mm), no need to adjust the Latch.


2 If the backset of your door is 2-3/4" (70mm), please adjust the Latch.

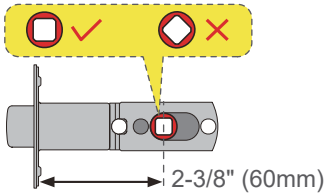

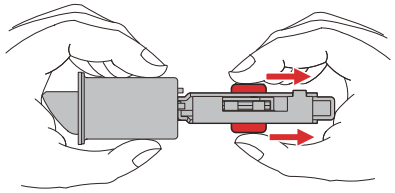


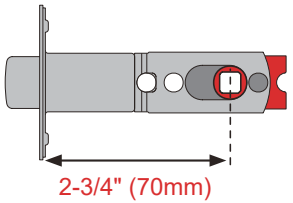

Install the Latch

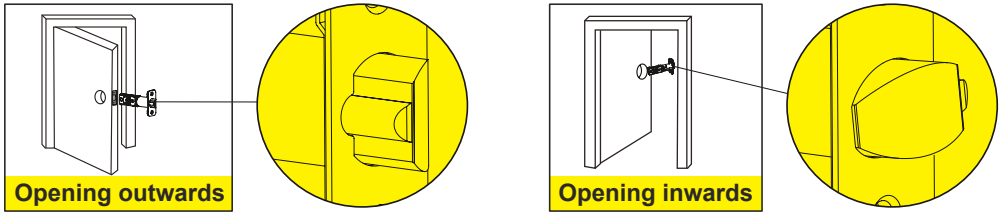


Install the Strike

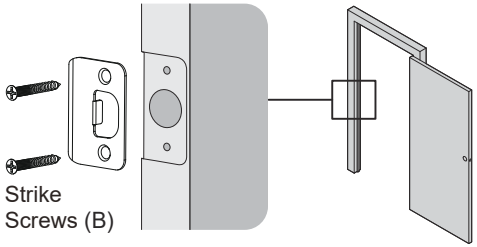

Note: The bevel of the Latch should be aligned to the bevel of the Strike.

Opening outwards

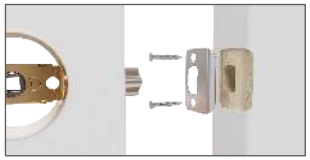

Opening inwards




Reverse Lever Direction (Optional)

IMPORTANT:
The Front Lever is installed for right-handed door in default. If your door is left-handed, please exchange the Front and Rear Lever with each other.


WARM REMINDER:
While you exchange the lever direction, the edge of inner mechanism may be a little sharp, please protect your hands from being hurt.

1 Rear Lever disassembly steps.

1. Rotate the lever and find the Joint Point of the lever through the hole on the housing.

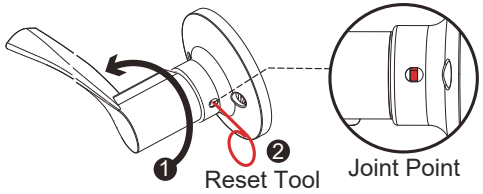


2. Press the Joint Point with the Reset Tool and pull out the lever simutaneously.

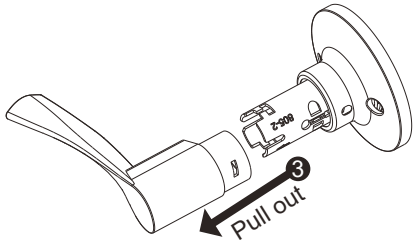


Reverse Lever Direction (Optional)

2 Front Lever disassembly steps.

1. Rotate the lever and find the Joint Point of the lever through the hole on the housing.

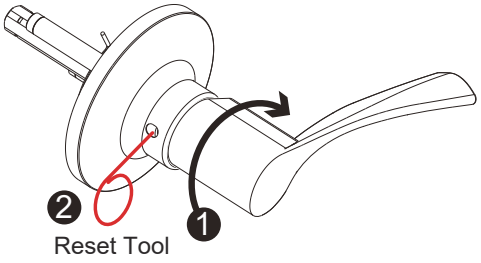


2. Press the Joint Point with the Reset Tool, till the Joint Point is pressed down completely, then pull out the lever.

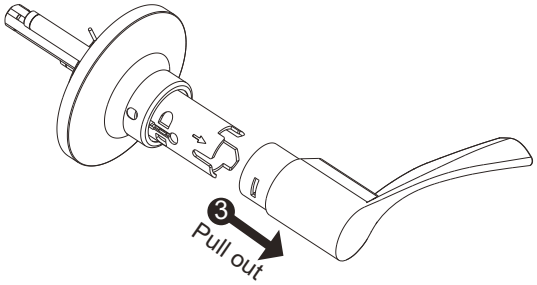


3 Exchange the lever.

Exchange the Front and Rear Lever with each other, press the lever back till firmly placed.

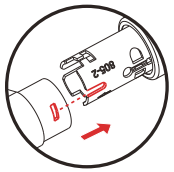


Align the hole to the inside Joint Point.

Install Front and Rear Lever

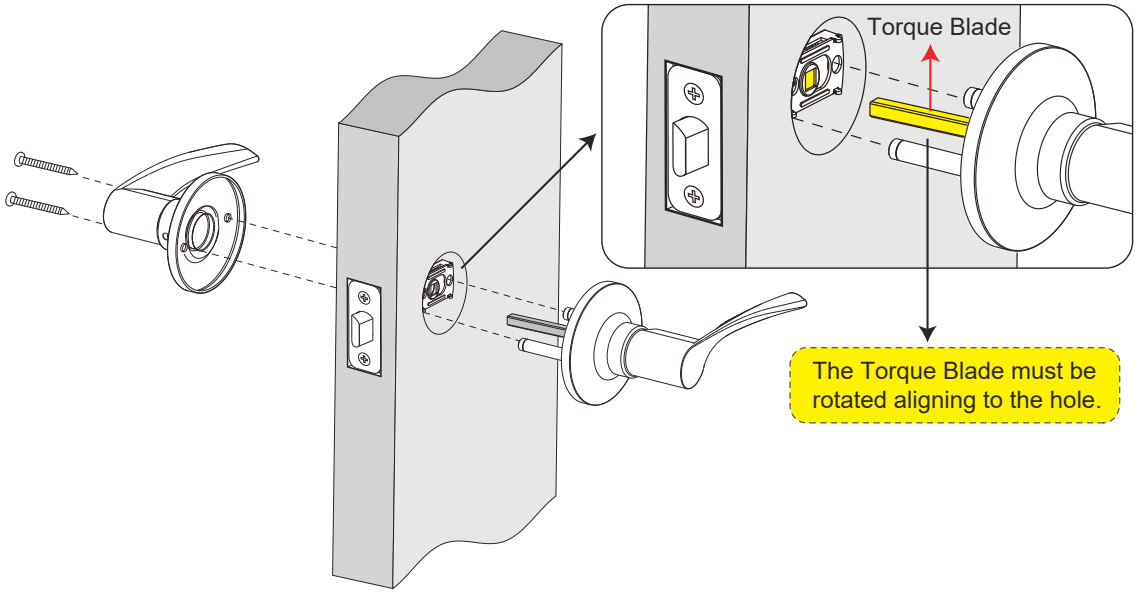

Test the Lever

Keep the door open, checking out Front and Rear Lever to test if it works smoothly.

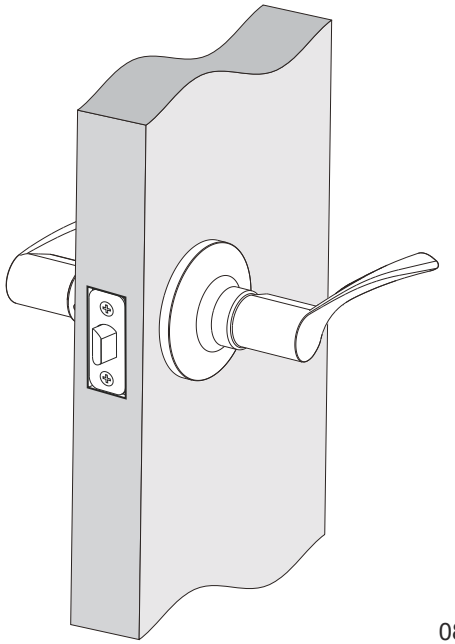

Need Help? Contact Us!

If you have any questions, please contact us at

+1(855)400-3853

(Monday-Friday 9:00am-5:00pm PST)

support@iveise.com **iveise.com**

If you have your ***order ID*, videos or images of your problem** (if necessary) ready before contacting Customer Support, we will solve your problem faster and better.