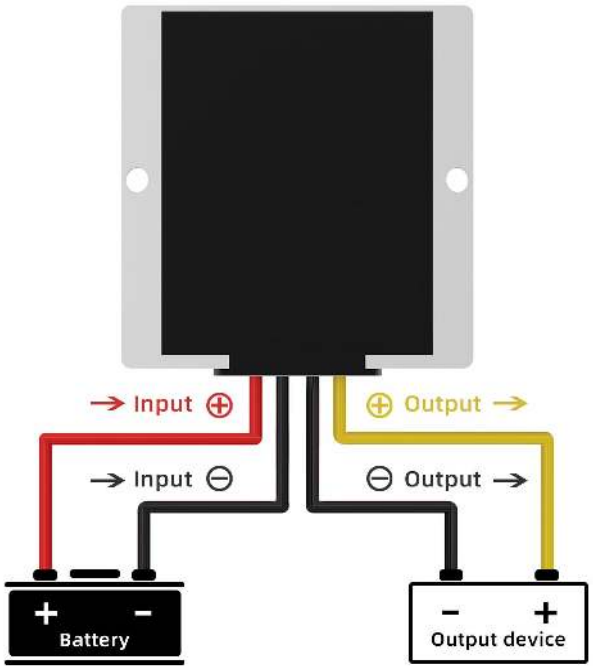


Warm Tip

ジThe load connected to the output of the power conditioner should not exceed the maximum load power listed.


スDo not reverse the polarity of the wiring. Otherwise the power supply will be burned out

ズIf there are multiple output lines, do not combine loads.

セUse a cable large enough to avoid voltage drops

ゼLeave room for the power supply to ensure long-termst able operation.

The converter can operate between -40° and 85°C. The converter is automatically protected when the case temperature exceeds 85°. When using this power supply, it should be placed in an environment with air circulation and as much cooling space as possible to extend its service life.

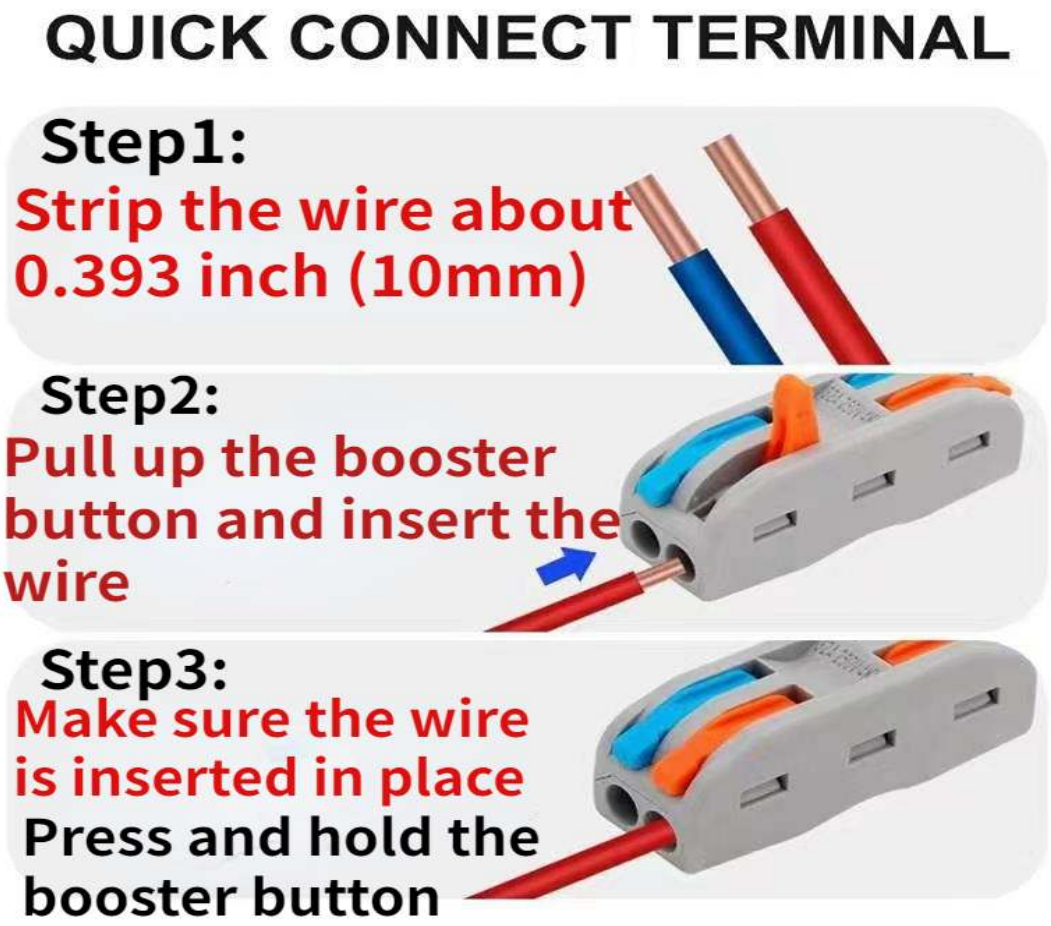

Before using the quick connect terminal [please strip the wire with the core exposed 0.4 inch (about 10 mm)], and then insert the wire into the connector, be sure to insert in place