YEEDI

YEEDI C12 PLUS
YEEDI C12 PRO PLUS

Instruction Manual

Instruction Manual ..... **EN** | **P03**

Manuel d'instructions ..... **FR-CA** | **P22**

Manual de instrucciones ..... **ES-LA** | **P41**

Important Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE. SAVE THESE INSTRUCTIONS

For Household use only

When using an electrical appliance, basic precautions should always be followed, including the following:

WARNING: Read all safety warnings and instructions.

Failure to follow the warnings and instructions may result in electric shock, fire or serious injury.

1. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
2. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
3. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
4. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
5. Please make sure your power supply voltage matches the power voltage marked on the Docking Station.
6. Do not handle plug or appliance with wet hands.
7. Non-rechargeable batteries are prohibited.
8. Do not use without dust bin and/or filters in place.
9. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
10. Do not use and store in extremely hot or cold environments (below -5℃ /23℉ or above 40℃/104℉). Please charge the robot in temperature above 0°C/32°F and below 40°C/104°F.
11. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
12. Do not operate the Appliance in a room where an infant or child is sleeping.
13. For INDOOR use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments. Do not use Appliance on wet surfaces or surfaces with standing water.

14. Do not allow the Appliance to pick up large objects like stones, large pieces of paper or any item that may clog the Appliance.
15. Do not use Appliance to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.
16. Do not use Appliance to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
17. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
18. Take care not to damage the power cord. Do not pull on or carry the Appliance or Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance over the power cord. Keep power cord away from hot surfaces. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
19. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
20. Do not use the Docking Station if it is damaged.
21. Do not use with a damaged power cord or plug. Do not use the Appliance or Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
22. Turn OFF the power switch before cleaning or maintaining the Appliance. Turn off all controls before unplugging. Always turn off this appliance before connecting or disconnecting motorized nozzle.
23. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.
24. Remove the Appliance from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
25. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
26. Please dispose of used batteries according to local laws and regulations.
27. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in

a fire.

28. When not using the Docking Station for a long period of time, please unplug it.
29. The Appliance must be used in accordance with the directions in this Instruction Manual. ECOVACS ROBOTICS cannot be held liable or responsible for any damages or injuries caused by improper use.
30. Prevent unintentional starting. Ensure the switch is in the off position before connecting to battery pack, picking up or carrying the appliance.
31. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
32. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
33. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
34. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
35. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
36. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
37. Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
38. Place the cords from other appliances out of the area to be cleaned.
39. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
40. Do not allow children to sit on the vacuum.

41. Use only as described in this manual. Use only manufacturer's recommended attachments.
42. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
43. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
44. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.
45. If the robot will not be used for a long time, fully charge the robot and power OFF for storage and unplug the Docking Station.
46. To Reduce The Risk Of Electric Shock – Do not use on wet surfaces. Do not expose to rain. Store indoors.
47. To Reduce The Risk Of Injury From Moving Parts – Unplug Before Servicing.
48. Risk Of Injury. Brush May Start Unexpectedly. Unplug Before Cleaning or Servicing.
49. To reduce the risk of injury, user must read instruction manual.
50. To Reduce The Risk Of Electric Shock – Do not use outdoors or on wet surfaces.

SAVE THESE INSTRUCTIONS

For Household use only

To reduce the risk of electric shock, this docking station has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

⎓	Direct current
~	Alternating current

This Device Complies with DHHS Radiation Rules, 21CFR Chapter 1, Subchapter J.

Device Update

Typically, some devices are updated bi-monthly, but not always so specific.

Some devices, especially those that went on sale more than three years ago, will only be updated if a critical vulnerability is found and fixed.

To disable the Wi-Fi module on the robot, power the robot ON. Place the robot on the Docking Station, making sure the Charging Contacts on the robot and the Docking Station Pins make a connection. Then, double-tap the ⊕ button.
To enable the Wi-Fi module on the robot, power the robot OFF and then back ON. And unplug the Station and plug it in again.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:


(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

MPE Requirements


To satisfy FCC / IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.


PACKAGE CONTENTS

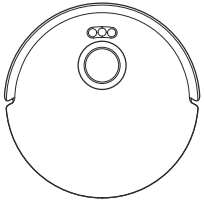

Robot

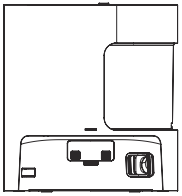


Auto-Empty Station



Side Brush



Instruction Manual

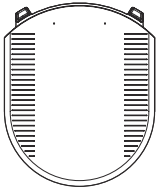

Base


OZMO Pro 2.0 Vibrating Mopping System and Vacuum Module (DKX55)



OZMO Pro 2.0
Vibrating Mopping System




Washable
Mopping Pad



Vacuum Module
(pre-installed)


Water Tank and Mopping Pad Module (DKX56)



Reservoir
(pre-installed)



Mopping Pad Plate




Washable
Mopping Pad

Note: Figures and illustrations are for reference only and may differ from actual product appearance. Product design and specifications are subject to changes without notice.

PRODUCT DIAGRAM

Robot

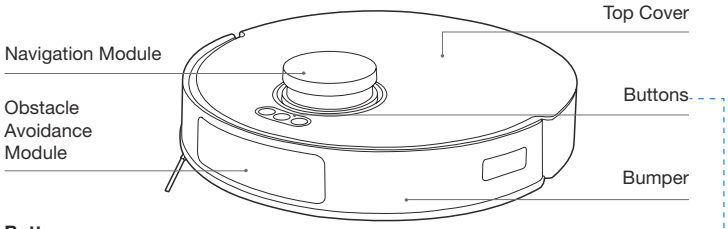


Buttons


- Short Press: Return to charge
- Short Press: Start/Pause/Continue Long Press: Power on/off
- Short Press: Start/End Spot Clean Long Press: Child Lock

RESET Button


Connect APP: Short press RESET button and follow voice prompts to connect to the App.
Restore to default settings: Press and hold RESET Button for 5 s. After you hear the voice prompt, the startup music will be played and the robot will be restored to default settings.

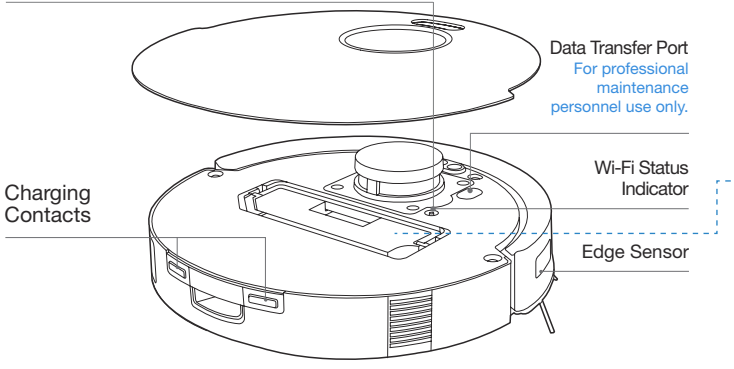


Bottom View (DKX55)

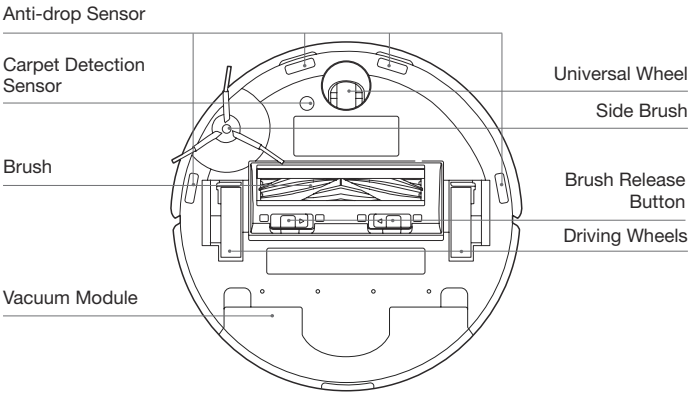


OZMO Pro 2.0 Vibrating Mopping System

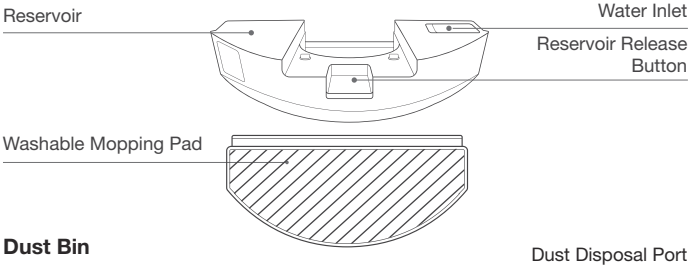


Dust Bin

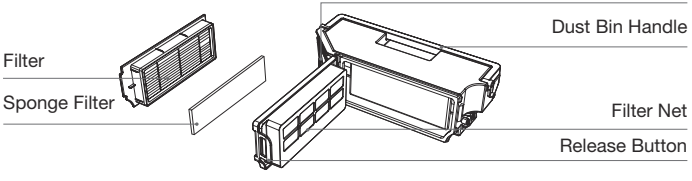


Bottom View (DKX56)

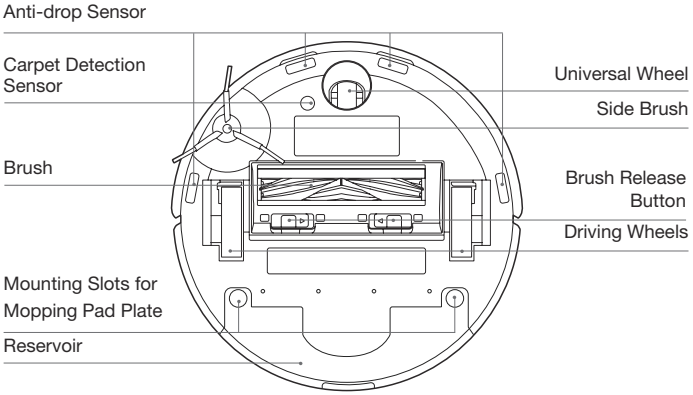


Auto-Empty Station

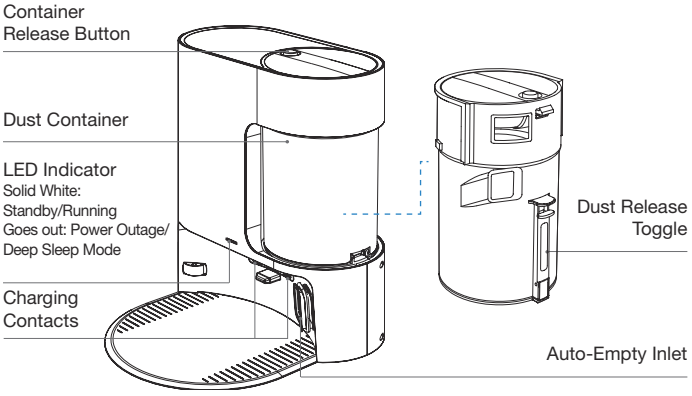

Mopping Pad Module

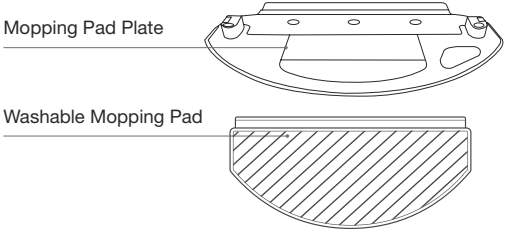

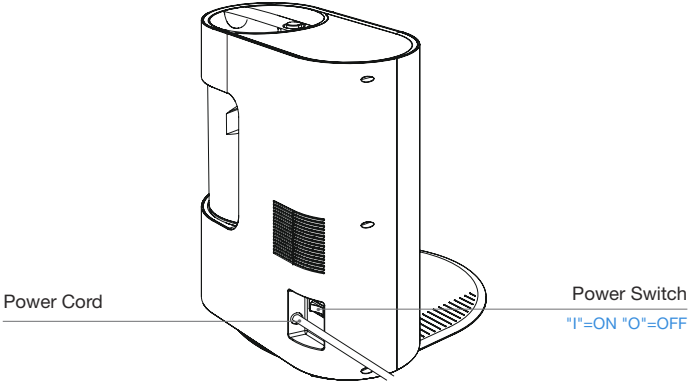


Note: Figures and illustrations are for reference only and may differ from actual product appearance. Product design and specifications are subject to changes without notice.


SENSORS

Name	Functional Description
Navigation Module	By utilizing the principle of triangulation, which involves emitting and receiving laser beams reflected by surrounding objects, precise distance measurement information between the robot and nearby objects can be calculated through algorithms. When the robot moves within a certain environment, the positions of surrounding objects are determined to create a spatial map of the robot's surroundings. The measurement range is 0.8 m.
Obstacle Avoidance Module	With three sets of infrared transmitter and receiver pairs, it operates on the principle of infrared reflection to gauge obstacle distances by signal strength. The maximum detection range is approx. 10 cm.
Anti-drop Sensor	With infrared distance measurement, the infrared sensor can detect the distance between the bottom of ROBOT and ground. ROBOT will not move forward when there are stairs in front or the identified distance exceeds the preset threshold, realizing the Anti-drop. The trigger distance is approx. 60 mm.
Carpet Detection Sensor	The ultrasound probe can emit ultrasonic waves with a frequency of 300KHZ. The energy of the ultrasonic waves is absorbed by the carpet. If the reflected energy is below the threshold, the robot recognizes the presence of the carpet. According to YEEDI lab tests, currently, over 50 types of carpets available on the market can be identified.
Edge Sensor	With infrared distance measurement, ROBOT can detect the distance between itself and objects on its right side. When there is a wall or obstacle on the right side, ROBOT will perform edge cleaning to avoid missing spots or collisions.
Anti-collision Sensor	When the transmitted signal is blocked by an obstacle, the signal receiver will not be able to receive the signal. With this principle, the robot will avoid obstacles when colliding with them.


NOTES BEFORE CLEANING

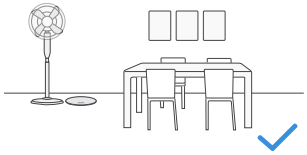

Tidy up the area to be cleaned by putting furniture, such as chairs, in their proper place.

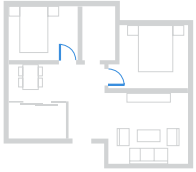

During the first use, make sure each room door is open to help ROBOT fully explore your house.

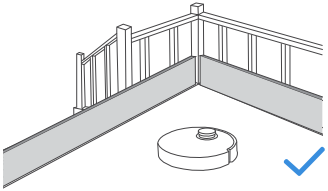

It may be necessary to place a physical barrier at the edge of a drop to stop the unit from falling over the edge.



Put away objects including cables, cloths and slippers, etc. on the floor to improve the cleaning efficiency.



Before using the product on a rug with tasseled edges, please fold the rug edges under.




Please do not stand in narrow spaces, such as hallways, and make sure not to block sensors.

QUICK START

Please remove all protective materials before use.


1 Installation

The sound of Click indicates proper installation.

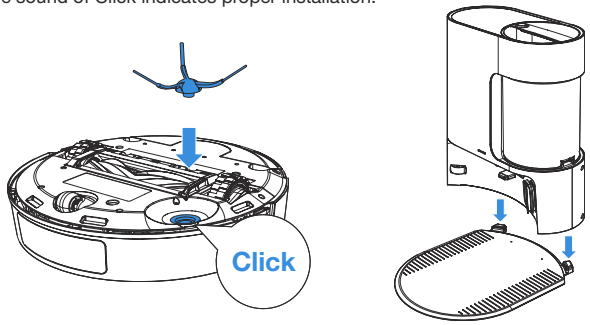

2 Place the Auto-Empty Station


Keep the area around the Auto-Empty clear of objects objects, especially with reflective surfaces.

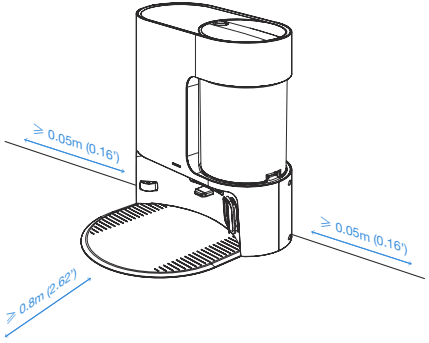

DOWNLOAD THE YEEDI APP

To enjoy all available features, it is recommended to control your robot via the YEEDI App.

1. Scan the QR Code under the Top Cover to download the App.

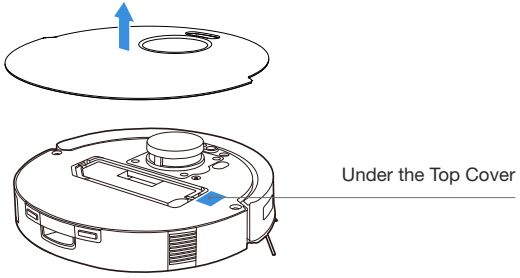


2. Search YEEDI to download the App.



POWER ON ROBOT

Press and hold ⏻ for 3 seconds to power on ROBOT.

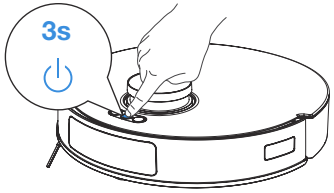

CONNECT ROBOT WITH APP

Wi-Fi Network Requirements:

- You are using a 2.4 GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.
- Please enable the WPA2 on your router.


Wi-Fi Indicator

	Flashing slowly	Disconnected to Wi-Fi
	Flashing quickly	Connecting the App
	On	Connected to Wi-Fi

Please be aware that the realization of intelligent functions such as remote startup, voice interaction, 2D map display and control settings, and personalized cleaning (depending on different products) requires users to download and use the YEEDI App, which is constantly updated. You need to agree to our Privacy Policy and User Agreement before we can process some of your basic and necessary information and enable you to operate the product. If you do not agree with our Privacy Policy and User Agreement, some of the aforementioned intelligent functions cannot be realized through the YEEDI App, but you can still use the basic functions of this product for manual operation.

CHARGE ROBOT


Short press to recall ROBOT back to the Auto-Empty Station to charge.

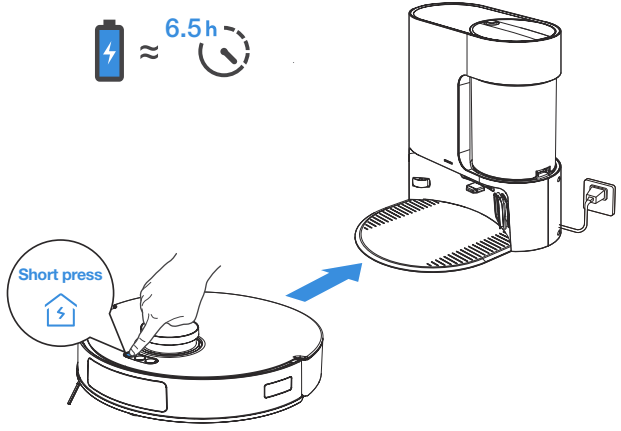

OPERATE ROBOT

Remove the Mopping Pad Plate/Module before mapping. When creating a map for the first time, please follow ROBOT to help eliminate some minor issues.
For example, ROBOT may get stuck under the furniture. Please refer to the following solutions:
① Raise your low sitting furniture if possible;
② Cover the bottom of the furniture;
③ Set up Virtual Boundary via the App.

Before first vacuuming, please make sure ROBOT is in the Charging Station and fully charged. Short press ⏻ to start cleaning and mapping.

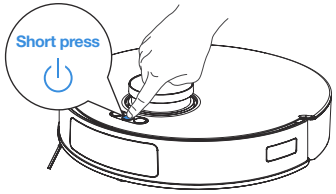

Note:
- Do not frequently remove washable mopping pads.
- Do not use a rag or any other object to scratch the Moping Pad Plate.
- When the YEEDI App prompts that the mops need to be replaced, please replace them in time. Explore more accessories at YEEDI App or at https://www.yeedi.com.

REGULAR MAINTENANCE

Maintenance Frequency


To ensure optimal performance, perform maintenance tasks and replace parts at the following frequencies:

Part	Maintenance Frequency	Replacement Frequency
Washable Mopping Pads	After each cleaning	Every 1-2 months
Side Brush	Every 2 weeks	Every 3-6 months
Brush	Every week	Every 6-12 months
Filter	Every week	Every 3-6 months
Navigation Module Obstacle Avoidance Module Anti-drop Sensors Carpet Detection Sensor Edge Sensor Bumper Charging Contacts Universal Wheel	Every week	/
Dust Container	After each cleaning	Every 1-2 months
Dust Container Filter	Every 3-6 months	Every 3-6 months/After multiple washes

Note: Explore more accessories in the YEEDI App or at https://www.yeedi.com.


Maintain Dust Bin

1

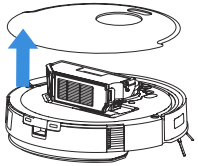




2




3



4

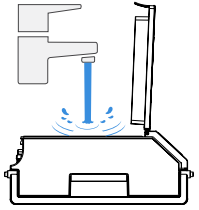

5

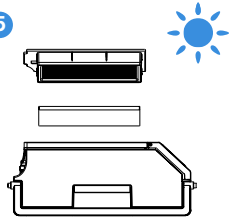


Note: Completely dry the Filter before use.
It is recommended that you purchase filters and cleaning tools from the YEEDI App store or the official YEEDI online store at https://www.yeedi.com.


MAINTAIN BRUSH AND SIDE BRUSH

Brush


1

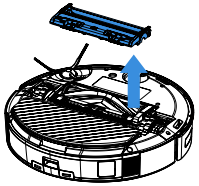

2

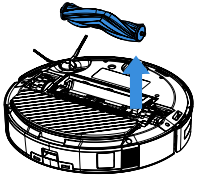



3

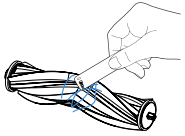

Side Brush


1

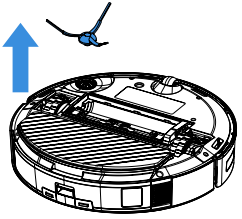

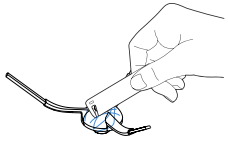


Dust Container and Its Filter

1 Press the Container Release Button, and remove the Dust Container.

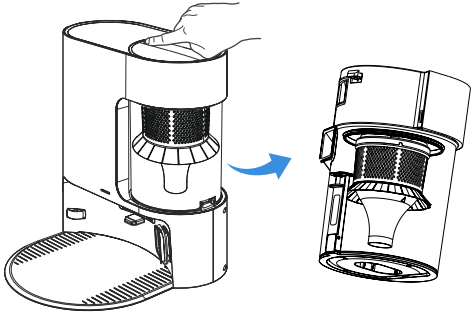


2 Press the Dust Release Toggle to open the bottom of the Dust Bin, and empty the trash.

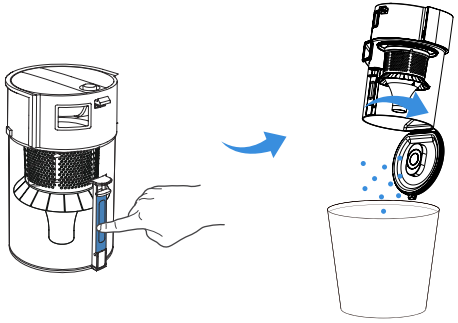


* It is recommended that you clean the Filter every 6 months. You can wash and air-dry it for reuse, or purchase a new one.

3 Twist off the top and remove the Filter.

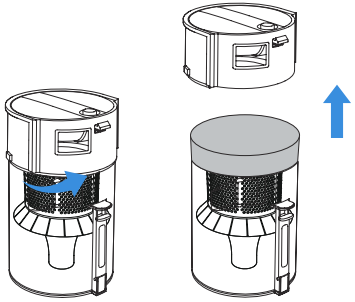


4 Remove the multi-cone structure.

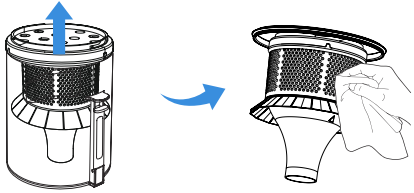

* It is not recommended to wash the multi-cone structure. If needed, you can use a wet cloth to wipe it and let it air-dry.


5 Rinse the Dust Container with water or wipe it with a wet cloth.

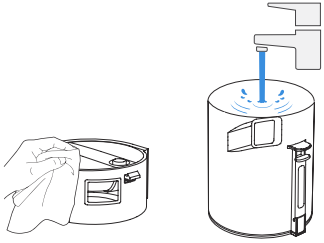


* Please make sure to air-dry the Dust Container before using it again.

MAINTAIN OTHER COMPONENTS


Navigation Module




Obstacle Avoidance Module

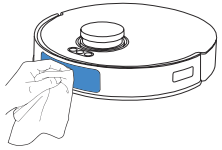


Anti-drop Sensors

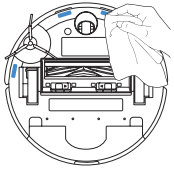


Edge Sensor

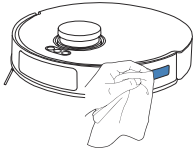


Bumper

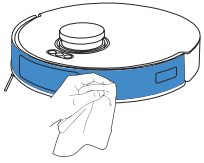


Charging Contacts

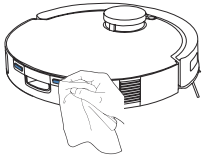

Universal Wheel

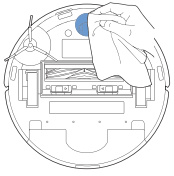


Driving Wheels

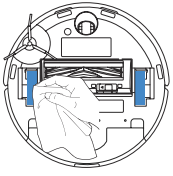

Storage

Press the Power Button for 5 s to power the robot off.
Make sure to fully charge and power OFF the robot before storing it. Recharge it every 1.5 months to prevent the battery from over-discharging.

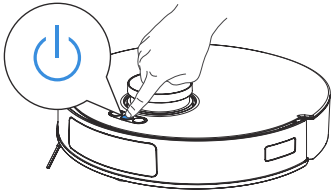

Please note that the robot cannot charge when powered OFF.
* when the robot is not in use, it is recommended to keep it powered ON and charging, to prepare for the next cleaning cycle.
* If the battery becomes over-discharged or remains unused for an extended period, the robot may not charge properly. In this case, please contact us for assistance. Do not attempt to disassemble the battery on your own.

TROUBLESHOOTING

No.	Malfunction	Possible Cause	Solution
1	The robot is not able to connect to YEEDI App.	Incorrect Wi-Fi username and password entered.	Make sure to enter correct Wi-Fi username and password entered.
		The robot is not within range of your home Wi-Fi signal.	Make sure that the robot is within range of your home Wi-Fi signal.
		The robot is not in the configuration state.	When the robot is powered on, press the RESET Button and release it after hearing the voice prompt for starting network setup. The Wi-Fi indicator will flash, indicating that the robot is in the configuration state.
		You are not using a 2.4GHz or 2.4/5 GHz mixed network.	The robot currently does not support 5 GHz networks. Please use the 2.4 GHz or 2.4/5 GHz options instead.
		Incorrect app installed.	Please download and install the YEEDI App.
2	The map is lost.	The map might be lost if you move the robot when cleaning.	Move the robot to the front of the Station to retrieve the map. Find the restored map in **Map Management** and tap “Use This Map” to retrieve it. If this issue persists, please restart mapping.
3	Unable to create the furniture map in the App.	The robot does not start cleaning from the Station.	The robot must start cleaning from the Station.
		Moving the robot during cleaning might cause the map to be lost.	During cleaning, do not move the robot.
		Auto cleaning is not finished.	Make sure the robot automatically return to the Station after cleaning.
4	No signal found. Unable to return to the Station.	The Station is incorrectly placed.	Please place the Station correctly according to the instructions in the [CHARGE ROBOT] section.
		The Station is out of power or manually moved.	Check whether the Station is connected to the power supply. Do not manually move the Station.
		The robot does not start cleaning from the Station.	It is recommended that the robot start cleaning from the Station.
		The charging route is blocked. For example, the door of the room with the Station is closed.	Keep the charging route clear.
5	The robot returns to the Station before it has finished cleaning.	The room is so large that the robot needs to return to recharge.	Please enable Auto Resume. For more details, please follow the App instructions.
		The robot is unable to reach certain areas blocked by furniture or barriers.	Tidy up the area to be cleaned by putting furniture and small objects in their proper place.


No.	Malfunction	Possible Cause	Solution
6	The robot is unable to charge.	The Station is not connected to the power supply.	Make sure the Station is connected to the power supply and its indicator light is on.
		The robot's Charging Contacts are not fully in contact with the Station's.	Make sure that the robot's Charging Contacts have full contact with the Station's, and the button flashes. Check whether the robot's and Station's Charging Contacts are dirty. Please clean these parts according to the instructions in the [RUGULAR MAINTENANCE] section.
		The battery temperature is too high or too low.	Please charge and use the robot within the temperature range of 0-40°C.
		The battery over-discharges due to prolonged periods of non-use.	It is recommended that you use this product regularly. If charging issues occur due to prolonged non-use, please contact customer service for assistance.
7	The robot is very loud during cleaning.	The Brush/Side Brush is entangled, or the Dust Bin/Filter is blocked.	It is recommended to clean the Brush, Side Brush, Dust Bin, Filter, etc. regularly.
		The robot is in Strong Mode.	Switch to Standard Mode.
8	The robot gets stuck while working and stops.	The robot is tangled with objects on the floor (electrical wires, curtains, carpet fringing, etc.)	The robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
		The robot might be stuck under furniture with an entrance of similar height.	Please raise the furniture, set a physical barrier, or set a Virtual Boundary via the YEEDI App.
9	During cleaning, the robot may encounter issues like a disorderly route, biased movement, repeated passes over the same spots, and missing small areas. (If a large area is temporarily missed, rest assured that the robot will autonomously return to ensure thorough cleaning.)	Objects such as wires and slippers placed on the ground may obstruct the robot.	Before cleaning, please tidy up scattered wires, slippers, and other objects on the ground as much as possible. If there is any area missed during cleaning, the robot will correct it automatically. Please refrain from interfering (such as moving the robot or blocking its route).
		The Driving Wheels may slip on the ground when the robot climbs steps, thresholds, and door bars, which can affect its ability to navigate the entire home environment.	It is recommended to close the door of the affected area and cleaning it separately. After cleaning, the robot will return to its starting location. Please feel confident in using this method.
		On freshly waxed or polished floors, as well as smooth tiles, there may be less friction between the Driving Wheels and the floor.	Please wait for the wax to dry before cleaning.
		Due to different home environments, some areas cannot be cleaned.	Tidy up the home environment to ensure that the robot can enter for cleaning.
		The Navigation Module may be dirty or blocked by foreign objects.	Wipe it with a clean, soft cloth or clear any foreign objects.


No.	Malfunction	Possible Cause	Solution
10	After returning to the Station, the robot does not empty its Dust Bin.	Manually moving the robot back to the Station might not trigger the Auto-Empty function.	It is recommended to let the robot return to the Station on its own. Please do not manually move it.
		In Do Not Disturb mode, the robot will not empty the dust after returning back to the Station.	Turn off Do Not Disturb in the YEEDI App or manually start dust-emptying.
		If the above possible causes have been ruled out, components of the Station may be abnormal.	Please contact customer service for assistance.
11	Auto-Empty unsuccessful.	The outlet of the Dust Bin is blocked by foreign objects.	Remove the Dust Bin and clear the foreign objects on the outlet.
12	Dust leakage occurs during working.	The outlet of the Dust Bin is blocked by foreign objects.	Remove the Dust Bin and clear the foreign objects on the outlet.
13	The Reservoir/Dust Bin drops off.	It is not properly installed.	Make sure it clicks into place.
14	Driving Wheels are stuck.	Driving Wheels are tangled or obstructed by foreign objects.	Rotate and press the Driving Wheels to check for any wrapping or obstruction by foreign objects. If any foreign objects are found, please clean them promptly. If this issue persists, please contact customer service for assistance.
15	The robot fails to perform Auto Resume.	The robot is in Do Not Disturb mode.	The robot cannot perform Auto Resume in Do Not Disturb mode.
		The robot does not automatically return to the Station.	Auto Resume will not take effect if you manually move the robot back to the Station.
16	The cleaning task is not conducted at the scheduled time.	The schedule has been canceled.	Reschedule the cleaning task.
		The robot's battery is low.	Charge it.
		The robot is in Do Not Disturb mode.	The robot cannot perform scheduled cleaning in Do Not Disturb mode.

TECHNICAL SPECIFICATIONS

Model	**DKX55/DKX56**		
Rated Input	20 V ⎓ 1 A	Charging Time	6.5 h
Auto-Empty Station	**CH2403**		
Rated Input	120 V ~ 50-60 Hz 8 A		
ROBOT Dimensions (L*W*H mm)	353*351*96		
Auto-Empty Station Dimensions (L*W*H mm)	356*451*380		

Note: Technical and design specifications may be changed for continuous product improvement.
Explore more accessories at https://www.yeedi.com.



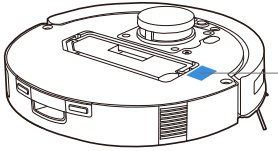

Please use the mobile camera to scan the QR code and obtain the user guide.