
USX-MOUNT®

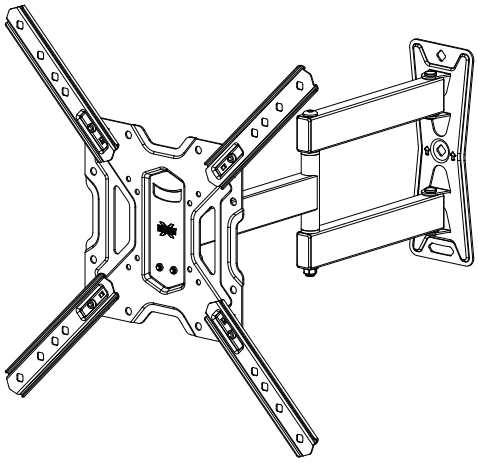

XMM006-2
INSTRUCTION MANUAL

For 26-55" TV


If you have any questions along the way, just message to us. We're ready to help!

USA-B3

⚠ CAUTION: PLEASE READ ENTIRE MANUAL PRIOR TO USE AND SAVE THESE INSTRUCTIONS

Before getting started, let's check below lists to make sure it is just right for you!

1 Check your TV VESA is within Min and Max size

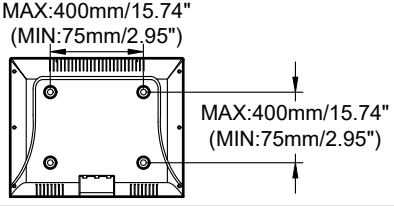

No? This mount is NOT compatible.

Yes? Perfect !

2 Does your TV (including accessories) weigh MORE than 77 lbs. (35 kg)?




No? Perfect – you may continue.

Yes? This mount is NOT compatible.


⚠ CAUTION: DO NOT exceed the maximum weight indicated. This mounting system is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories, causing possible injury.

3 What is your wall made of?

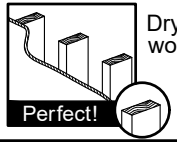

Drywall with wood studs?

⚠ CAUTION: DO NOT install into drywall alone

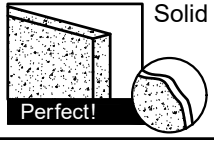

Solid concrete

? Unsure?

Message to us via Amazon.

4 Do you have all the tools needed? (NOT INCLUDE)



Tape Measure | Pencil | Screw driver | Electric Drill | Socket Wrench

Wood Stud Install: Stud Finder | 5/32 in. (4.0 mm) Wood Drill Bit


Concrete Install: 3/8 in. (10 mm) Masonry Drill Bit | Hammer

5 CAUTION


- This product is designed for use in wood stud, solid concrete walls - DO NOT install into drywall alone
- The wall must be capable of supporting five times the weight of the TV and mount itself
- Do not use this product for any purpose not explicitly specified by manufacturer
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use

Dimensions


TV INTERFACE

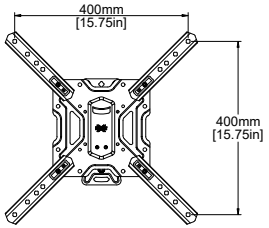


WALL PLATE




3-D

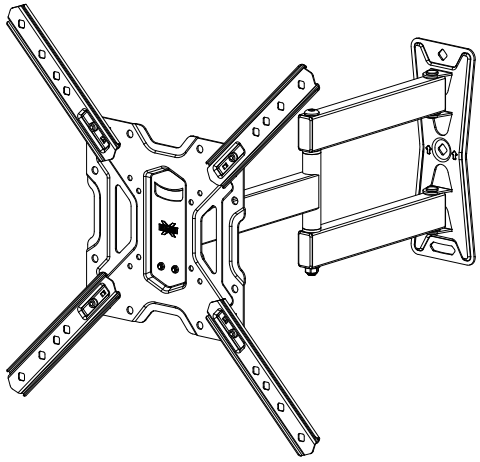


FULLY ASSEMBLED MOUNT

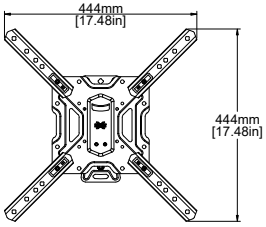

TOP VIEW - EXTENDED

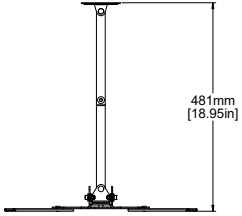

SIDE VIEW - RETRACTED




Parts and Hardware

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service.
Never use damaged parts!

NOTE: Not all hardware included will be used.


Parts and Hardware for STEP 1

Extended arms



06 x4

TV plate

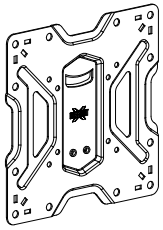

07 x1

Allen Key



02 x1


M6x8mm Bolt



03 x4

TV Screws

M4x12mm




a x4

M4x30mm




d x4

M6x12mm




b x4

M6x35mm




e x4

M8x25mm



c x4


M8x45mm



f x4

Spacers

M8x22mm



g x4

10mm




h x4

2.5mm



i x8

M6x17mm



j x4

Washers

M4



k x4


M6



l x4


Parts and Hardware for STEP 2

Wall Plate

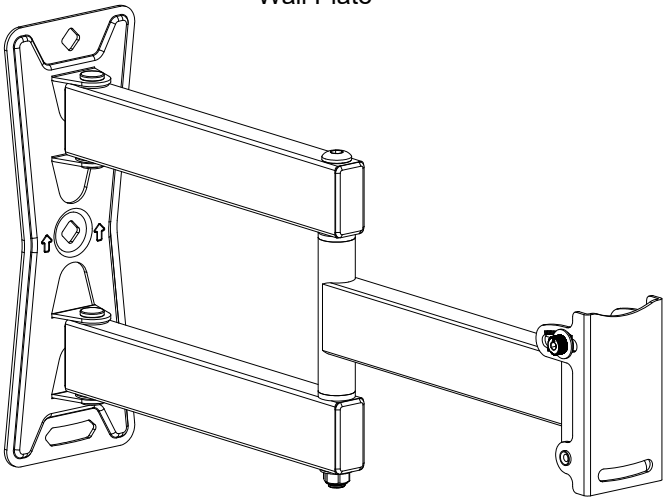

05 x1

Lag Bolt M7x55mm

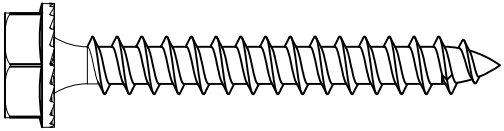

01 x3

Concrete wall anchor (NOT INCLUDED)



Concrete Wall Anchor
Ø10x50mm 3pcs


Contact us and message to us to have these additional pieces shipped directly to you.

M6x10mm Bolt



04 x2

Level x1

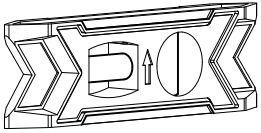

Velcro x3




STEP 1 Attach TV Plate to TV

1-1 Choose Configuration


If your TV VESA size is above 200*200mm, you need to assemble extended arms 06 onto TV plate 07 using bolts 03 and Alley key 02 per below option 3 - option 6 shown.

Option 1

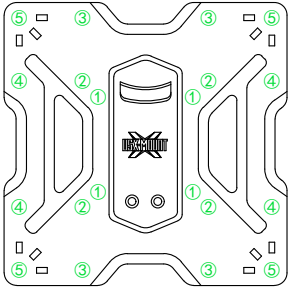


① 75X75
② 100X100
③ 100X200
④ 200X100
⑤ 200X200

Option 2

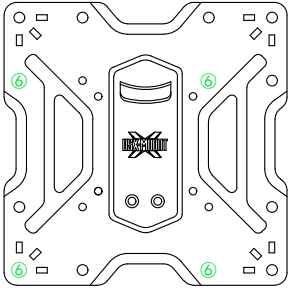


⑥ 150X150

Option 3

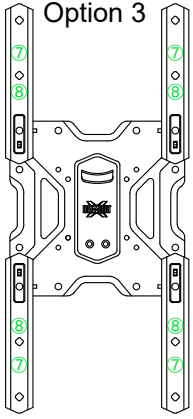


⑦ 200X400
⑧ 200X300

Option 4

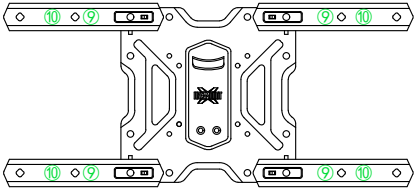


⑨ 300X200
⑩ 400X200

Option 5

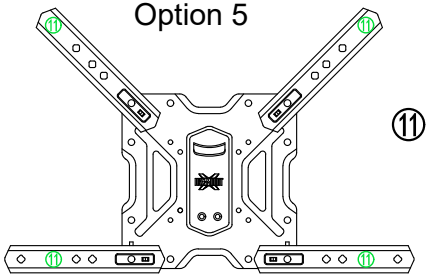


⑪ 400X300


Option 6

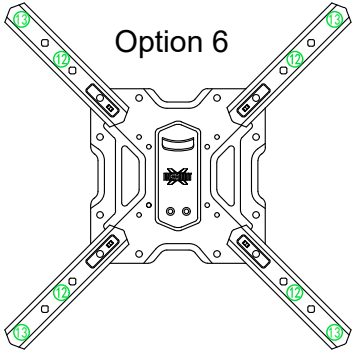



⑫ 300X300
⑬ 400X400

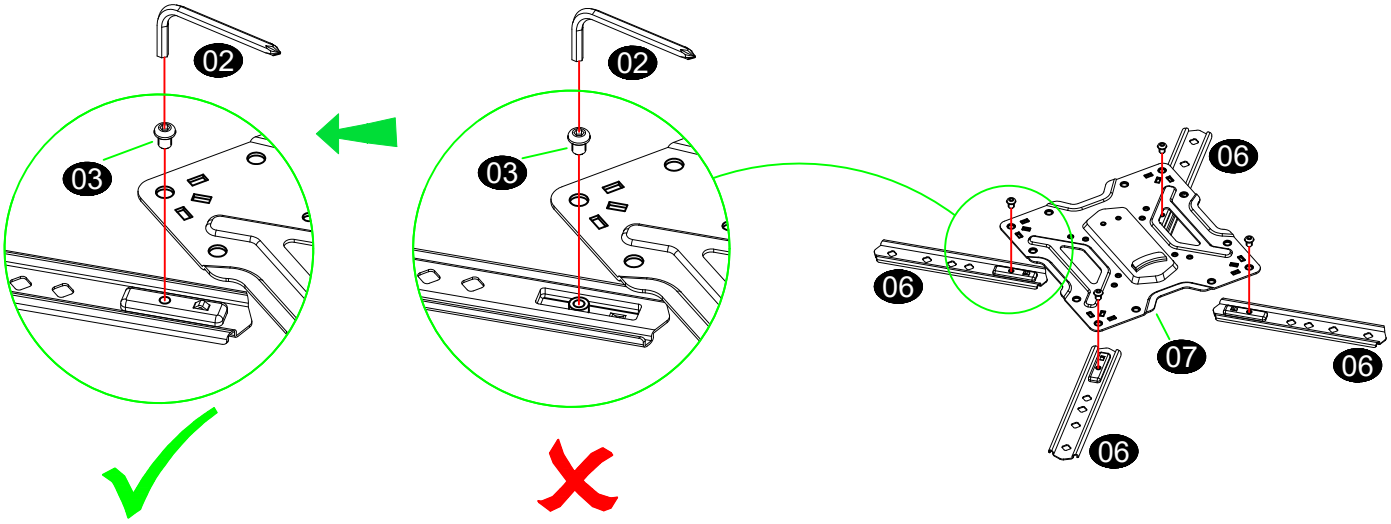



1-2 Select TV Screws

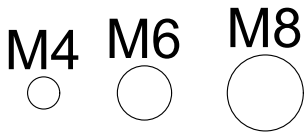


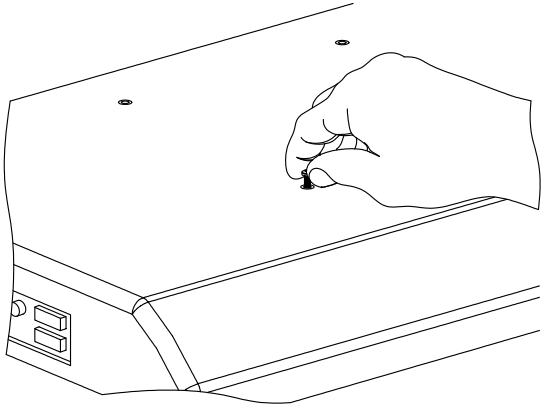


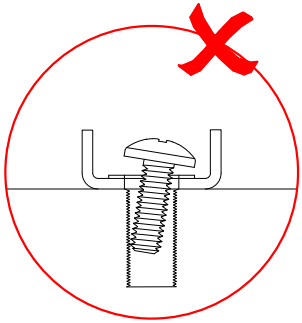

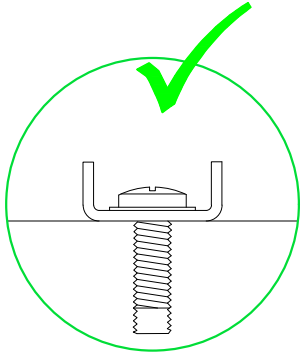

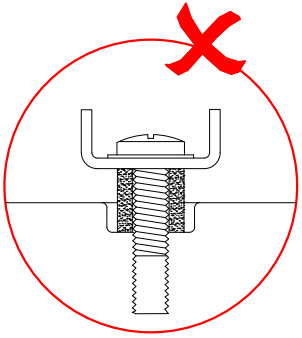


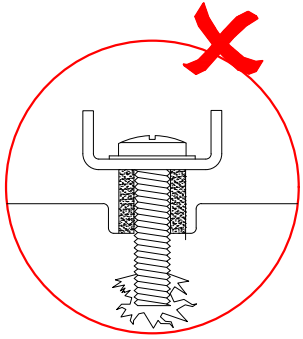

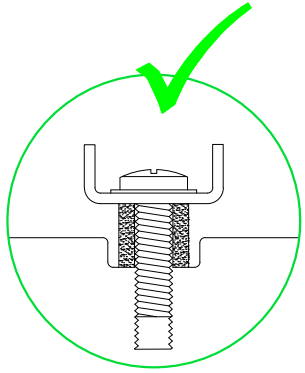


1-3 Need Spacer?

Ⅰ No, choose suitable screws and washers.

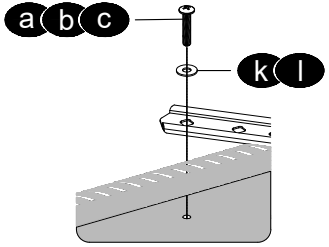

screw c is connected with TV Brackets 06 directly,do not need to be connected with Washers k l .


Ⅱ Yes, choose suitable screws, washers and spacers.

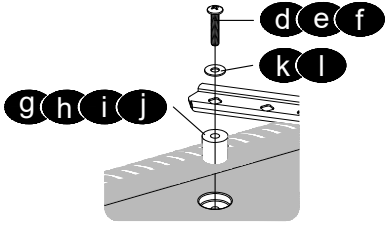


screw f is connected with TV Brackets 06 directly,do not need to be connected with Washers k l .


Tips: If you need to combine M6/M8(c/e/f) screws with 2.5mm spacers(i), you have to remove the inner circle.

1-4 Attach the TV Plate

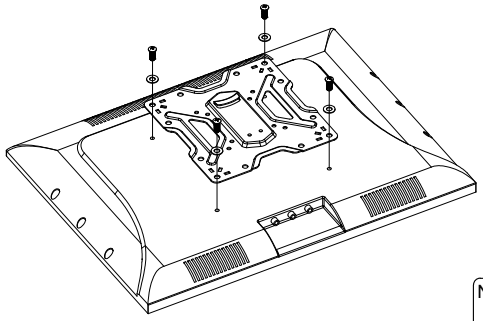

VESA≤200X200mm

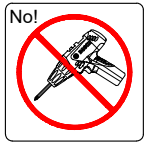

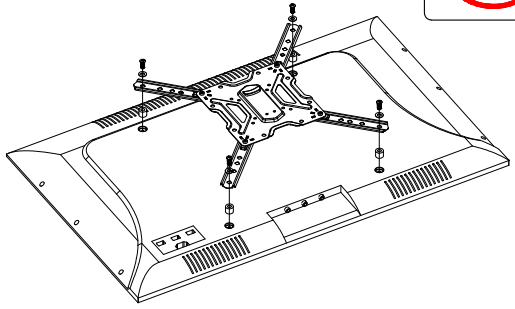

200X200mm<VESA≤400X400mm


Please ensure that all four screws enter the VESA hole before tightening all screws during installation.


STEP 2A Attach Wall Plate to Wall Wood Stud Option

⚠CAUTION: Avoid potential personal injury or property damage!

- Drywall covering the wall, must not exceed 5/8 in. (16 mm)
- Minimum **wood stud** size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- Stud center must be verified

1. Locate your studs. Verify and mark the center of the stud by finding the stud edges using a thin nail, or an edge to edge stud finder.
2. Position the wall plate 05 at your desired height and line up the holes with your stud center line. Level the wall plate and mark the hole locations.

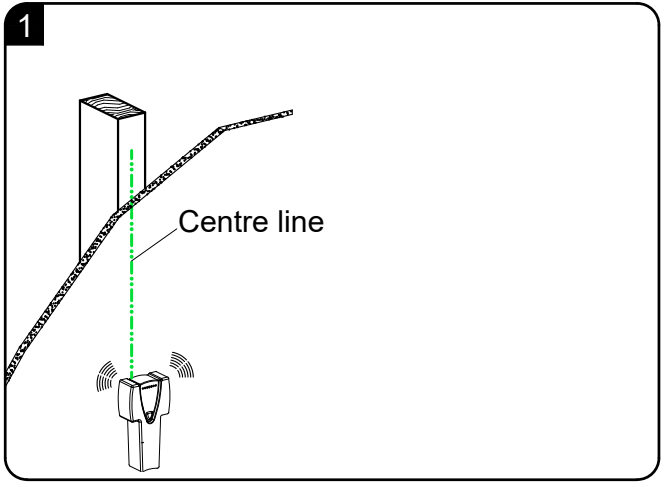

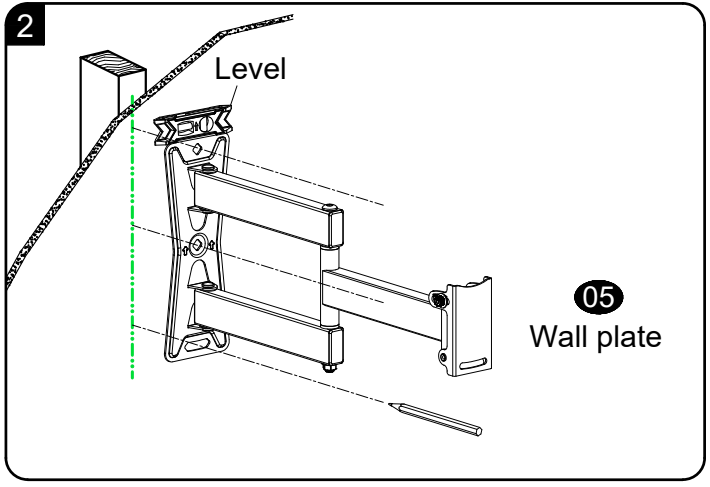


3. Drill pilot holes using a 5/32 in. (4.0 mm) diameter drill bit.


❗IMPORTANT: Pilot holes must be drilled to a depth of 2.36 in. (60 mm). Be sure to drill into the center of the studs.

4. Install wall plate 05 using three lag bolts 01. Tighten the lag bolts only until they are pulled firmly against the wall plate.

⚠CAUTION: Improper use could reduce the holding power of the lag bolt.
DO NOT over-tighten the lag bolts.

Go to STEP 3 on PAGE 14

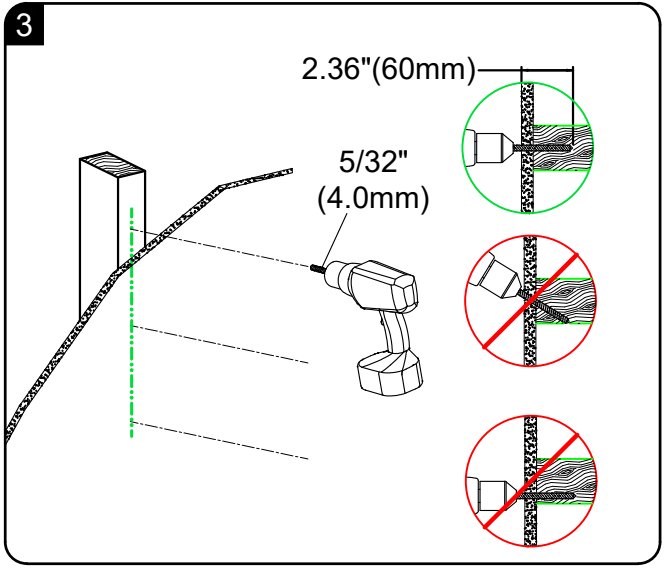

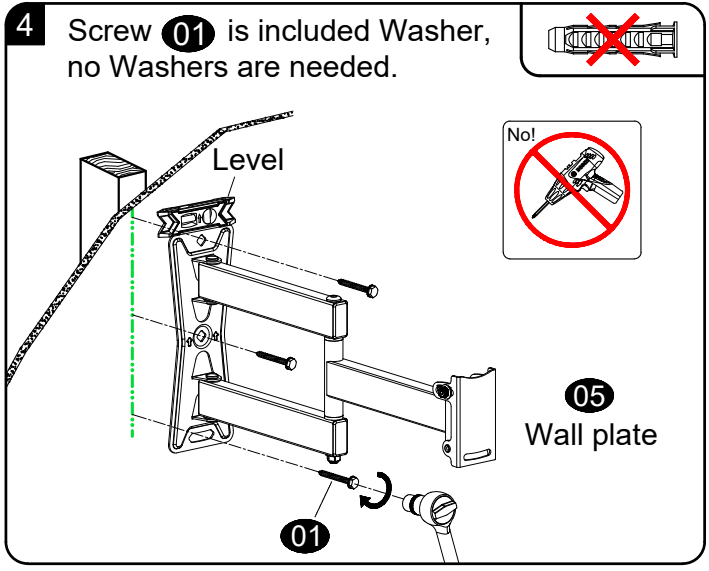


STEP 2B Attach Wall Plate to Solid Concrete Wall


⚠ CAUTION: Avoid potential personal injury or property damage!

- Mount the wall plate assembly 05 directly onto the concrete surface
- Minimum **solid concrete** thickness: 8 in. (203 mm)

1. Position the wall plate 05 on the wall at your desired height. Level the wall plate and mark the hole locations.
2. Drill 3 pilot holes using a 3/8 in. (10 mm) diameter masonry drill bit.

❗ IMPORTANT: Pilot holes must be drilled to a depth of 2.36 in. (60 mm).

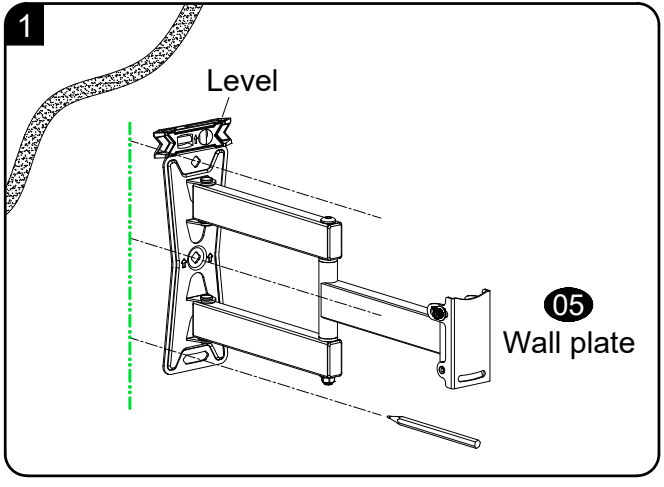

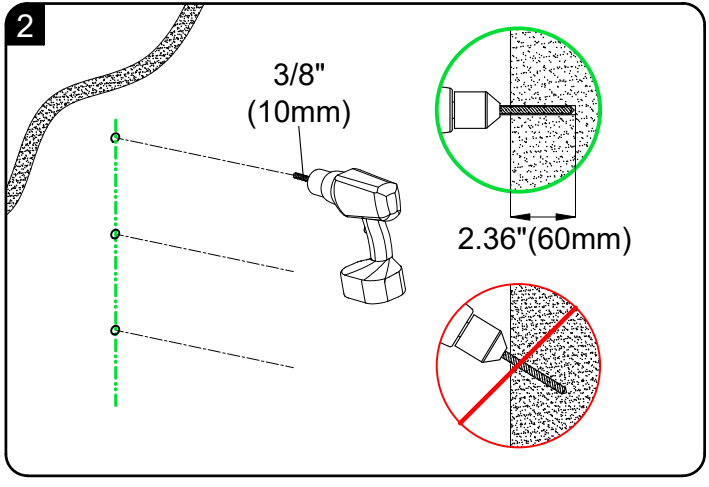



3. Insert 3 anchors.

⚠CAUTION: Be sure the anchors are seated flush with the concrete surface.

4. Insert wall plate 05 using three lag bolts 01.Tighten the lag bolts only until they are pulled firmly against the wall plate.


⚠CAUTION: Improper use could reduce the holding power of the lag bolt.
DO NOT over-tighten the lag bolts.

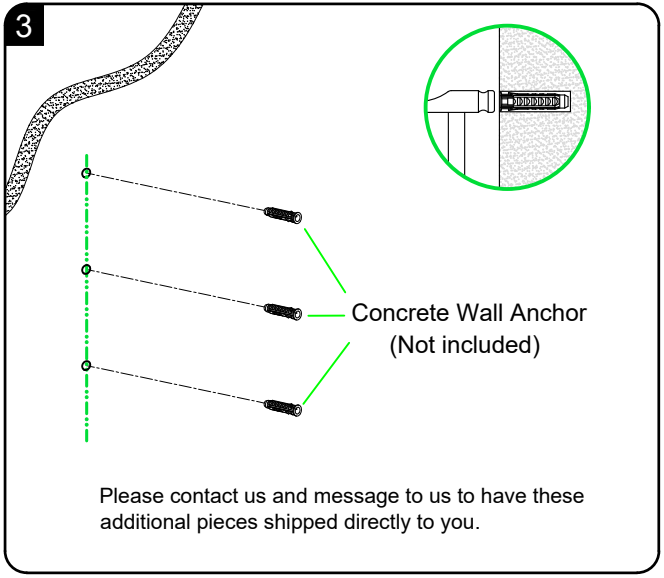

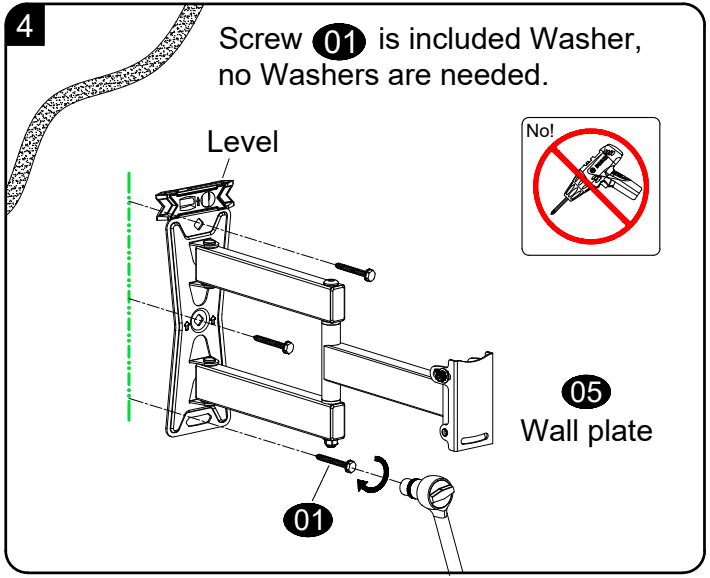


STEP 3 Wall Plate Installation Integrity Test

Before hanging TV, please try to pull the mount to make sure that it has been assembled on the wall tightly.

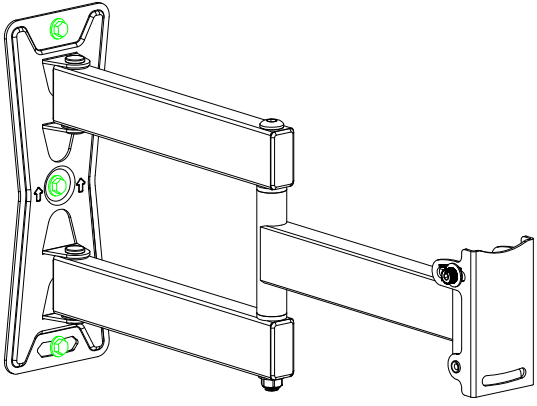


05
Wall plate

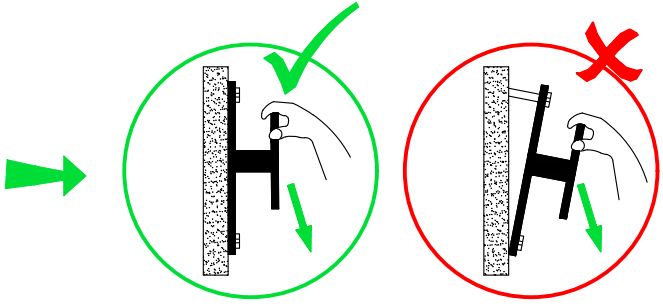


77 LBS (35 kg)

STEP 4 Hang and Secure TV to Wall Plate

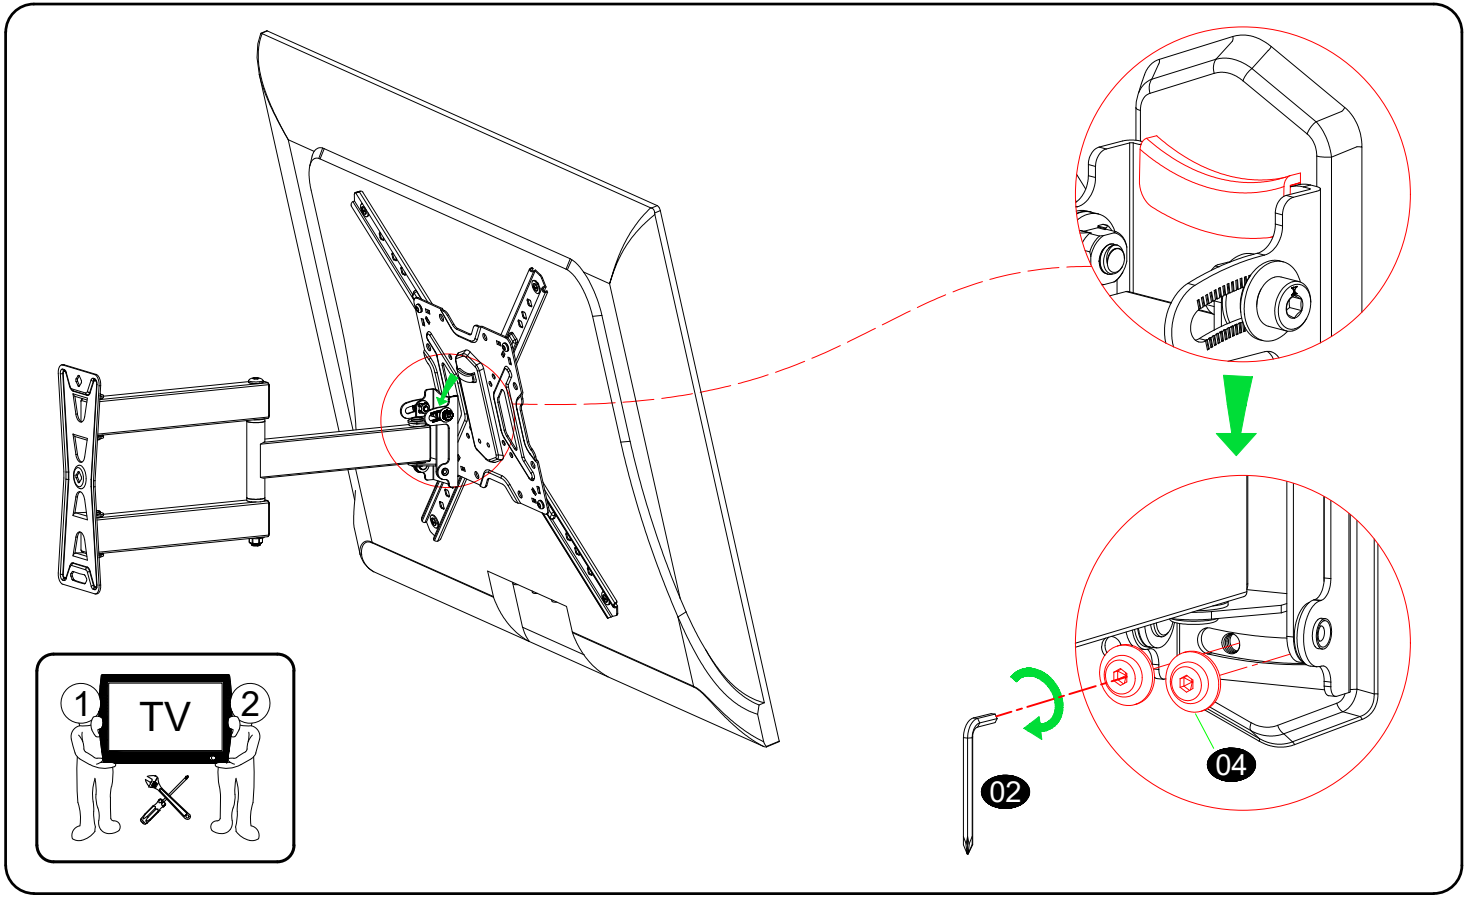


STEP 5 Adjustments

5-1 TV leveling adjustment (±4°):
Loosen 2 leveling bolts on the rear of TV plate by maximum 2 turns, adjust to level, and retighten to secure.

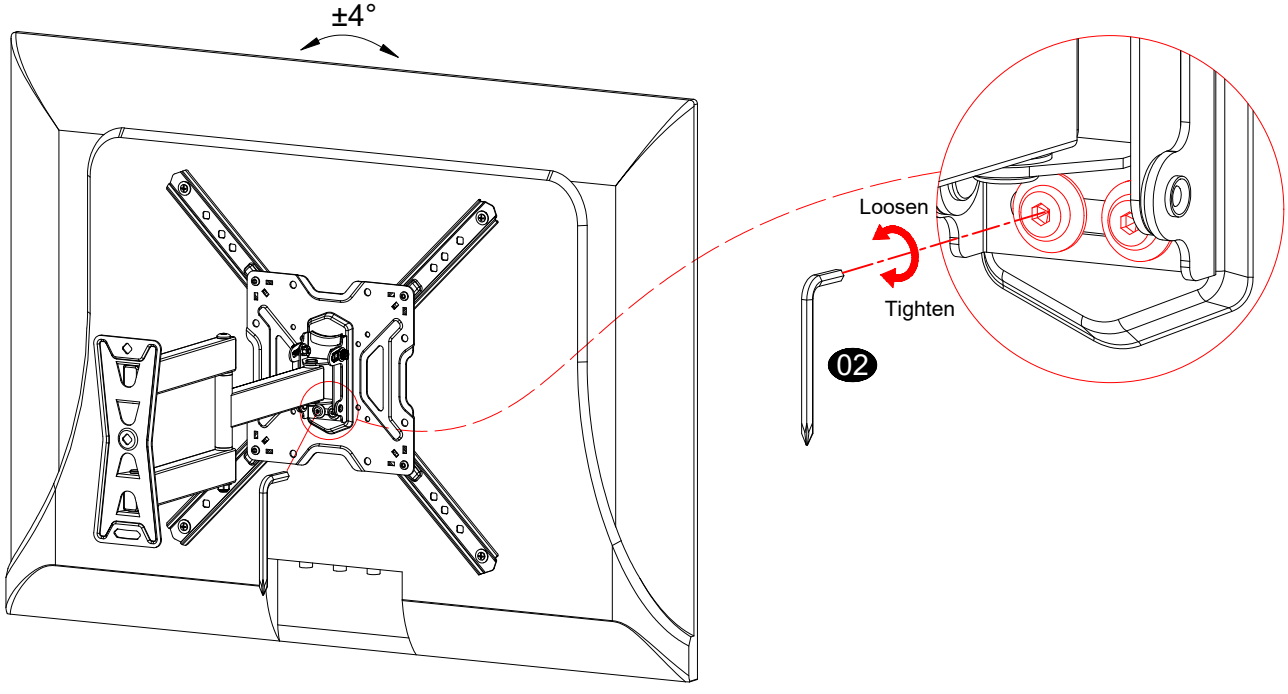

5-2 Tilting angle adjustment (+5°/-15°):

Pull TV to your desired angle then fasten 2 tilting bolts with allen key 02.

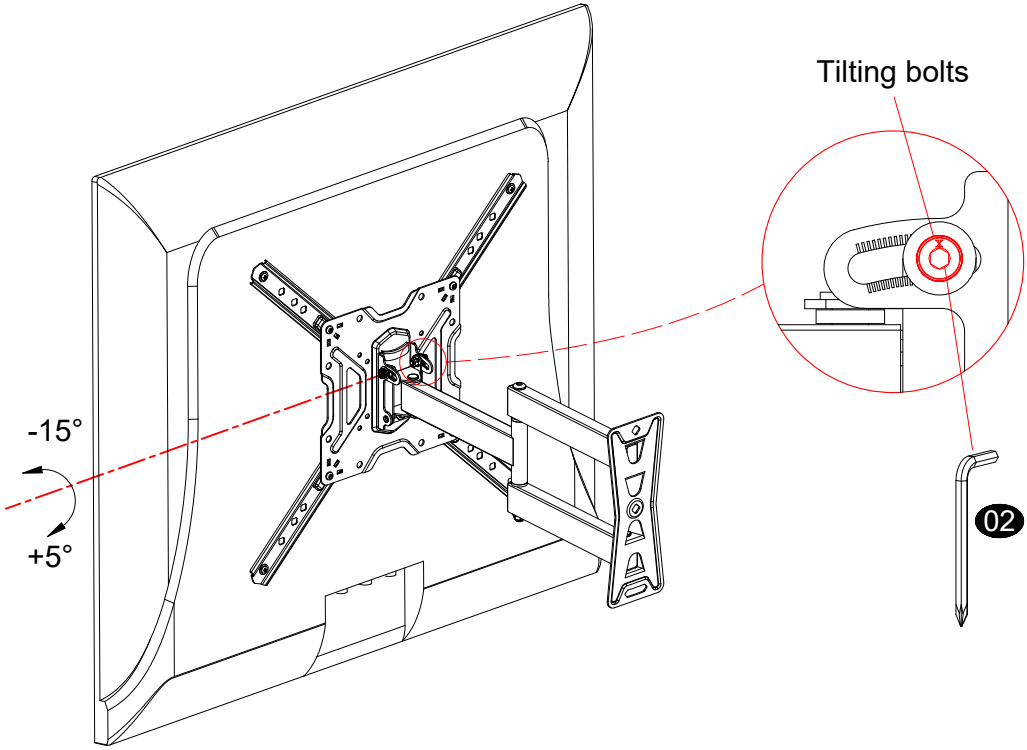

5-3 Cables manage:

Manage TV cables orderly and guide them through the velcros.

