
CERA+

Portable Espresso Machine


USER MANUAL

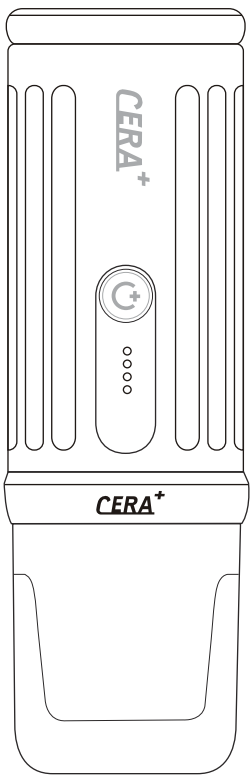

PCM03S

Thank you for purchasing (CERA+) portable espresso maker.
Please read the user manual carefully before use and
keep it for future reference

Product Components and Accessories

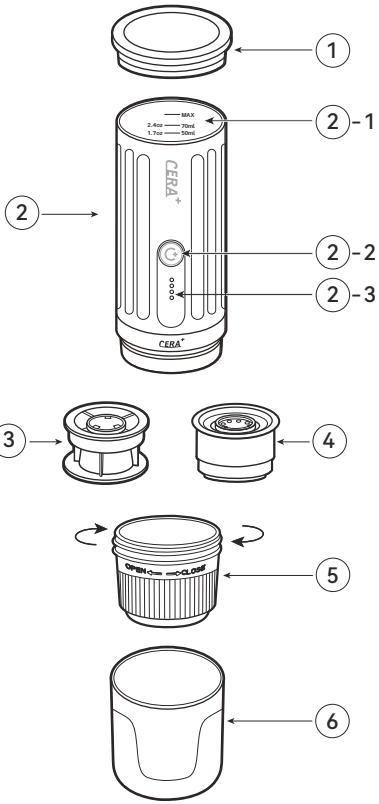

CERA+

EN

① Lid

② Coffee Maker Body

②-1 Water Tank

②-2 Power Button And Button Light

②-3 LED Indicator

③ Capsule Adapter

④ Ground Coffee Filter Basket

⑤ Filter Holder

⑥ Coffee Cup

⑦ Type-C Charging Cord

⑧ Ground Coffee Spoon & Tamper

⑨ Cleaning Brush

⑩ Espresso Dosing Funnel

Product Parameter:

Portable Espresso Maker	
Style	CERApresso
Model No.	PCM03S
Water Tank Material	304 Stainless Steel
Extraction Pressure	Standard 9 Bar, Max 20 Bar
Net Weight	716g
Built-In Battery	13500mAh
Charging Power	10- 30 W; Supports Fast-Charge Protocols QC 2.0 and PD 3.1
Power	150W
Extraction Temp	92℃ / 198℉
Capacity	Max.80mL
Heating Function & Extraction Way	Offline
Compatibility	NS Capsule / Ground Coffee


Nespresso(NS) is a third party owned brand and has no relationship with CERA+

Safety Notice

Please read the following safety guidelines carefully and retain this manual for future reference. Improper use may result in injury or damage to the machine.


- Before each usage, always check if the machine is in good condition. Do not use the machine if it appears damaged.
- Keep the machine and all packaging materials out of reach of children.
- Do not expose the machine to fire, direct sunlight, or high temperatures.
- Do not place the machine in a stove, oven, microwave, or dishwasher.
- Do not attempt to disassemble, repair, or replace any parts yourself.
- Make sure there is water in the water tank before operating. Do not use the machine with an empty tank, as it may cause damage.
- Only use purified drinking water. Do not fill the tank with milk, juice, or any other liquids.
- Only allow individuals familiar with this manual to operate the machine. Improper use may result in scalding.
- Keep the device in a level position during heating to prevent splashing.
- Do not open the cap during heating, as this may lead to hot liquid splashing.
- After use, wait a few minutes before removing the capsule to avoid burns.
- Do not flip or tilt the machine during or after operation.
- Ensure the Filter Holder is securely tightened before each use to prevent leakage.
- If the device will not be used for an extended period, recharge the machine every 3 months, and maintain the battery above 50%.

Charging

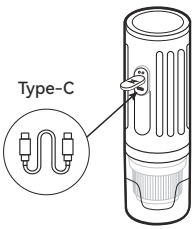

- Use an adapter that supports QC2.0 and PD3.1 fast charging protocols for charging. It is not recommended to use a charger with output below 10W.
- Use a Type-C Charging Cord charging cable to charge the battery. During charging, the indicator lights will gradually illuminate based on the charging progress, and the button light will stay solid white. When the battery is fully charged, all indicator lights will be on and will turn off after one minute. The button light will turn solid green until the charging cable is unplugged.
- Charging Time:
  30W: 2 hours/20W: 3 hours/10W: 6 hours

Charging Level

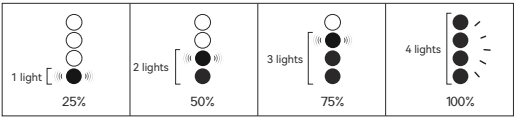

Indicator & Button Light

Instruction	Press the power button once to display the battery level	Charging	Fully Charged	Heating	Extracting
Pattern					
Status	**Button light shows white** (Indicator lights display the corresponding battery level)	**Button light shows solid white** (Indicator lights are in blinking mode and display the corresponding battery level)	**Button light shows solid green** (All indicator lights stay on for 1 minute, then turn off)	**Button light shows solid red** (Indicator lights are in blinking mode and display the corresponding temperature level)	**Button light shows white in blinking mode** (Indicator lights display a chasing effect in a loop)

Instruction for Use

* Please check the power status before first use (Press the power button once to check the battery level).
* If the coffee maker fails to extract coffee after multiple consecutive extractions using hot water, try turning the Filter Holder about a quarter turn to loosen it, then tighten it again.



Brewing with Coffee Capsule

1




First, check if the battery is sufficiently charged by pressing the power button once to view the battery level.



Please fully charge before first time use.

2



Please unscrew and remove all the accessories.

3




Place the coffee capsule into the capsule adapter and gently press the edges of the capsule to pierce the bottom, ensuring smooth extraction.



Insert the capsule adapter into the Filter Holder(Aluminum side facing down).

4

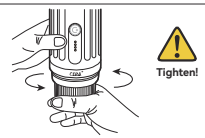


Tighten the Filter Holder onto the coffee maker body (Note: If the Filter Holder is not properly tightened, extraction may fail or leakage may occur).



Attach the coffee cup

5


Open the lid, add purified water, and close the lid (Note: DO NOT fill water beyond the max level).

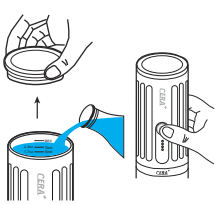


Direct Hot Water Extraction
Quickly press the power button twice or press and hold for 1 second to start extraction.

* During extraction, a single tap on the power button will stop the extraction.

6

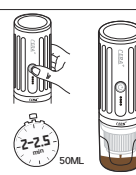

Extraction After Heating
Press and hold the power button for 1 second; the buzzer will beep once to indicate heating has started. After 2 to 2.5 minutes, the machine will beep again and begin extraction automatically. During heating, the indicator light will display the current temperature. Please refer to the temperature guide below.



* During extraction, a single tap on the power button will stop the extraction.

Use ground coffee to extract espresso

1




First, check if the battery is sufficiently charged by pressing the power button once to view the battery level.



Please fully charge before first time use.

2



Please unscrew and remove all the accessories.

3



Remove the ground coffee filter basket lid.



Attach the Espresso Dosing Funnel. Scoop 14-16 grams of finely ground coffee into the Basket, then tamp it using the bottom of the Spoon.



Place the Ground Coffee Filter Basket into the Filter Holder.

4




Tighten the Filter Holder onto the coffee maker body (Note: If the Filter Holder is not properly tightened, extraction may fail or leakage may occur).



Attach the coffee cup

5


Open the lid, add purified water, and close the lid (Note: DO NOT fill water beyond the max level).

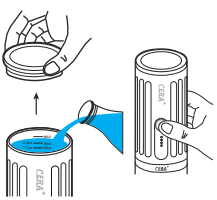

Direct Hot Water Extraction
Quickly press the power button twice or press and hold for 1 second to start extraction.

* During extraction, a single tap on the power button will stop the extraction.

6

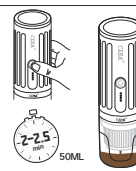

Extraction After Heating
Press and hold the power button for 1 second; the buzzer will beep once to indicate heating has started. After 2 to 2.5 minutes, the machine will beep again and begin extraction automatically. During heating, the indicator light will display the current temperature. Please refer to the temperature guide below.



* During extraction, a single tap on the power button will stop the extraction.


How Many Cups of Coffee Can Be Made with One Full Charge?

* Recommended use 50ml of water to extract one shot of espresso	
Use 50ml of room-temperature water for heating and extraction	50ml 8Cups，80ml 5Cups
Direct Hot Water Extraction	500 Cups

Extraction Failure (No Coffee Output or Water Leakage)

Possible Cause	Recommended Solution
Grind size too fine	Use properly ground coffee.
Too much coffee grounds in the ground coffee filter basket	It is recommended to use 14-16 grams of ground coffee.
Over-tamped coffee grounds	With the proper amount of coffee grounds, gently tamp the grounds until the filter cap can be properly installed.

Troubleshooting

Possible Cause	Recommended Solution
Malfunction may occur after prolonged periods of non-use	Method One: ① Empty the water tank and turn the device upside down with the water outlet facing upward. ② Pour a small amount of cold water into the water outlet. ③ Double-Press the button and repeat several times until air is continuously expelled from the outlet. 
	Method Two: ① Fill the water tank with cold water. ② Double-Press the button. ③ Gently press the water outlet repeatedly until water flows out. 

Status	Possible Cause	Recommended Solution
Indicator light flashes continuously four times (or three beeps at once)	Battery level is too low.	Recharge fully before using again.
One beep, then extraction starts	The start button was held down too long during heating, causing an unintended extraction cycle.	As soon as you hear the beep and see the first indicator light turn on, release the start button.
Two beeps, indicator light flashes quickly twice	The battery's over-temperature protection has been triggered.	Wait for 5 minutes, then try extracting again.
Three beeps, indicator light flashes quickly three times	The dry-boil protection has been triggered. (no water-detected)	Add water to the water chamber.
Irregular longshort beeps (three total); Indicator light alternates flashing	Open-Circuit or Short-Circuit Detected	Please contact customer service.

Few Cream

Material	Possible Cause	Recommended Solution
Ground Coffee	The coffee beans or preground coffee are not fresh.	Use freshly roasted coffee beans or freshly ground coffee.
	Grind size is too coarse.	Select the proper coffee grind size.
	There is too little coffee grounds in the coffee basket.	Increase the amount of coffee grounds; It is recommended to use 14-16 grams of coffee.
Coffee Capsules	Coffee capsules are not fresh.	Please use the coffee capsules before the expiration date.
	Not install properly.	Firmly push the capsule into the capsule adapter, then correctly place the capsule adapter into the locking cup and tighten the portafilter.

Water leaks When Operating

Possible Cause	Recommended Solution
Portafilter not fully tightened	According to our instructions, ensure the capsule adapter / ground coffee filter basket is correctly installed with the portafilter and tightened securely.
The sealing ring is loose	Check whether the sealing ring that contacts the capsule adapter / ground coffee filter basket or the water-blocking ring at the bottom of the ground coffee filter basket is properly installed.

Not Heating

Indicator Light Status	Possible Cause	Recommended Solution
Lights display in a top-to-bottom looping sequence.	Pressing the power button for too long: If held for 5 seconds, It will directly activate the extraction program. (Equivalent to a doubleclick function)	DO NOT press the power button for too long. Press and hold the power button for 1 second, and heating will start after you hear one beep.

Clean and Maintenance

- After each use, remove the capsule or coffee grounds and clean the capsule adapter or ground coffee filter basket.
- Run the machine empty by pouring hot purified water into the water tank, then quickly press the power button twice. Repeat this process to clean the inside of the machine. There may be a small amount of water remaining in the water tank —empty and dry it.
- Clean the coffee machine body with a slightly damp soft cloth. DO NOT clean the machine body in a dishwasher or immerse it in water.
- DO NOT use detergents.
- It is recommended to clean the machine once a week.
- Accessories can be rinsed with water.

CERA+

Take happiness with you

Please feel free to contact us anytime at

support@ceraplus.net

Thank you for your trust and support in our product !

Zhuhai Luckyman Technology Co., Ltd

Add: No.3 Building, No.611 Huawei Road, Zhuhai, GD, China

Web: www.luckychina.net / www.ceraplus.net

Tel: +86 - 756 - 3353269

MADE IN P.R.C