
REACH ANYWHERE

Press the MultiFLEX® Lock Release button to lower the angle of the wand to increase your reach.

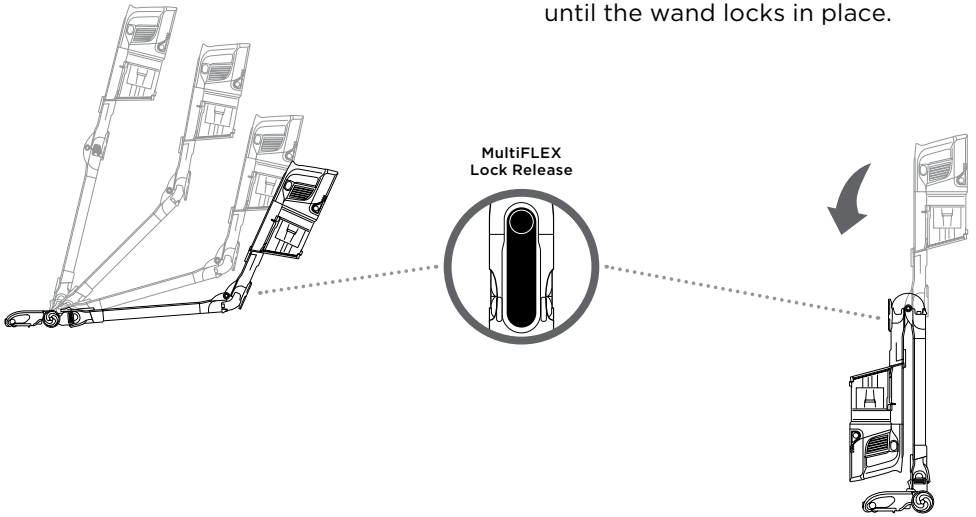


STORE ANYWHERE

Press the MultiFLEX Lock Release button and fold the handheld vacuum forward.


To vacuum, lift up the handheld vacuum, until the wand locks in place.

EMPTYING THE DUST CUP

1. To empty dust cup, first disconnect the handheld vacuum from the wand by pressing the Wand Release button and pulling up on the handheld vacuum.

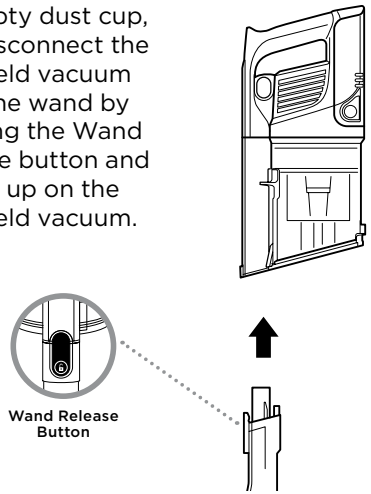

2. Position dust cup over a trash bin and slide the lid release button forward.

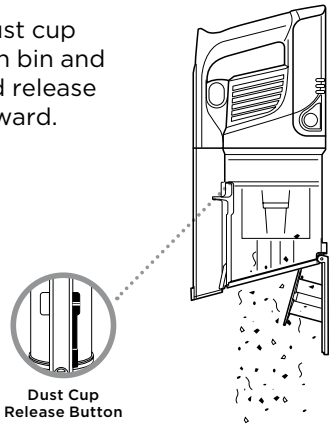

Shark

©2020 SharkNinja Operating LLC.
DUOCLEAN, MULTIFLEX, and SHARK are registered trademarks of SharkNinja Operating LLC.
VERTEX is a trademark of SharkNinja Operating LLC.

IZ462H_QSG_MP_Mv2

Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

duoclean® POWERFINS

Shark VERTEX™

DuoClean® PowerFins Cordless Vacuum with Self-Cleaning Brushroll

QUICK START GUIDE




For questions, visit us online at **sharkclean.com**


IZ462H

WHAT'S INSIDE:

- A Handheld Vacuum
- B MultiFLEX® Wand
- C DuoClean® PowerFins Floor Nozzle
- D Crevice Tool
- E Pet Multi-Tool
- F Anti-Allergen Brush
- G Lithium-Ion Battery (Pre-Installed)
- H Charger
- I HEPA Post-Motor Filter (Pre-Installed)

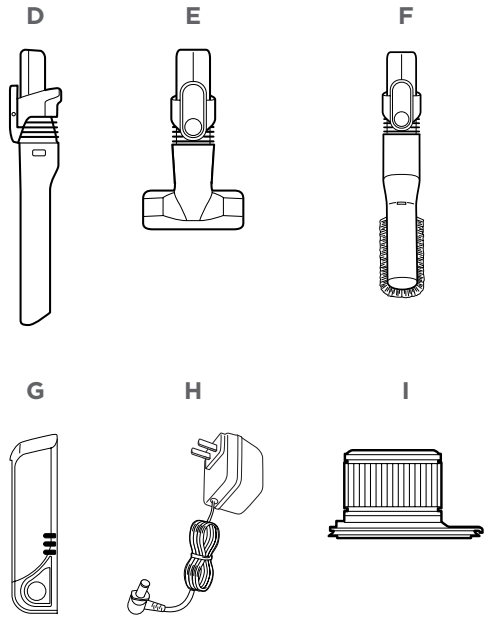


ASSEMBLY

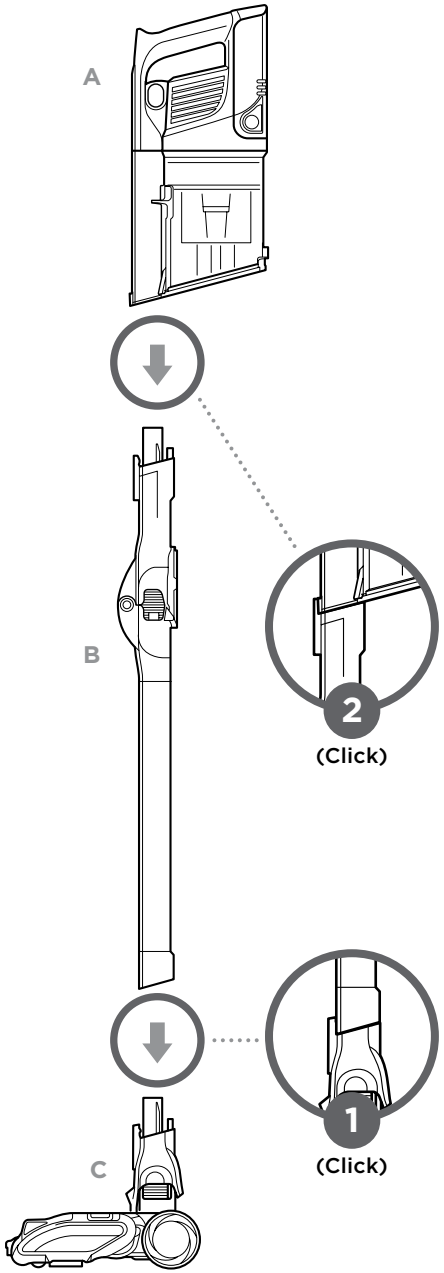

For additional parts and accessories, visit sharkclean.com

POWER SETTINGS

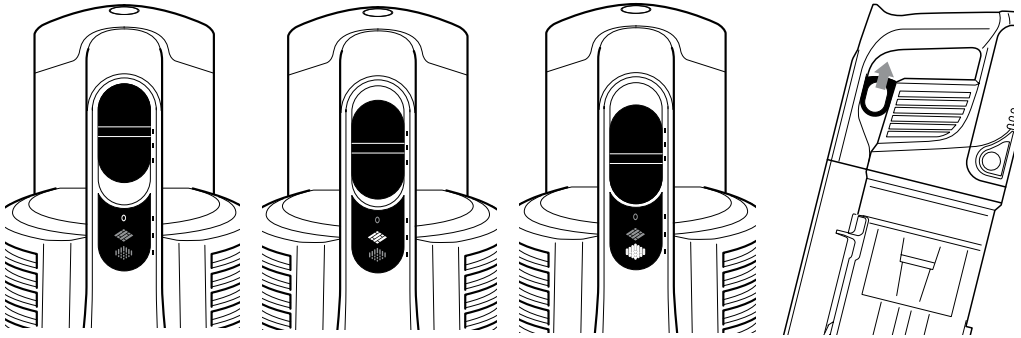

OFF	HARD FLOOR SETTING	CARPET SETTING	BOOST MODE
Slide switch to the top to turn off power. To begin vacuuming, slide switch to the appropriate setting.	Slide switch to the middle. The brushrolls spin slowly to clean hard floors and low-pile area rugs.	Slide switch to the bottom. The brushrolls spin faster to pick up debris below the surface of your carpets.	For an added boost in power, pull the **Trigger** on the handheld vacuum. Release it to return to standard power.

LITHIUM-ION POWER PACK


In Use

Full Charge | Mid Charge | Low Charge | Nearly Empty | No Charge

Charging

Low Charge | Mid Charge | Nearly Full | Full Charge


NOTE: *Full charge takes approximately 3 hours.*

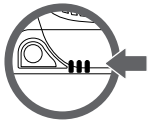

Battery Indicator Lights


NOTE: The Lithium-Ion Power Pack battery comes partially charged. Charge fully before first use, then run the battery down until it is completely out of power. This will condition the battery so the LED indicators will work properly.

CHARGING

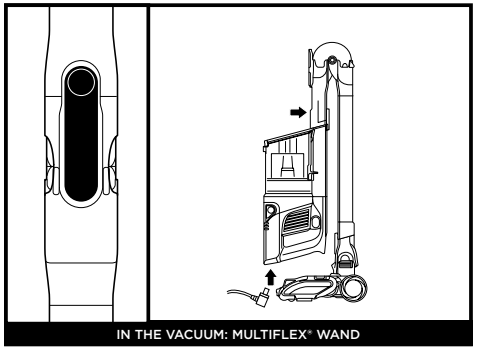

IN THE VACUUM: MULTIFLEX® WAND

To put the vacuum in storage mode, press the **MultiFLEX Lock Release** button while folding the handheld vacuum forward until the wand clicks and locks. Plug the charger into the charging port on the battery.

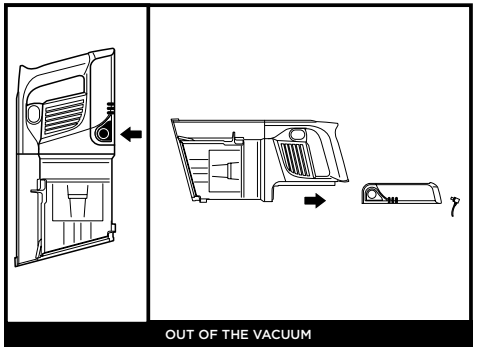

OUT OF THE VACUUM

To remove the battery, press the **Battery Release** button and slide out the battery. Plug the charger into the charging port on the battery.