

POE NVR System Manual (Optimized)

Version：POENVR50623

English

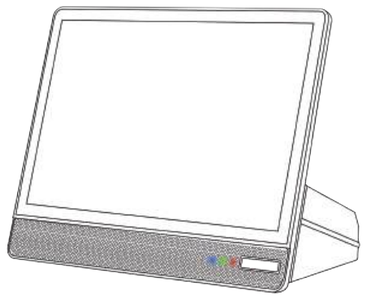

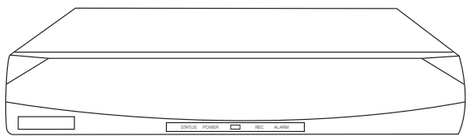

Thank you for choosing our POE NVR system. Please read this manual carefully before installation to ensure proper setup and optimal performance.

Before You Begin：

1. Check that all parts are included and undamaged.
2. Connect the system to a monitor and test the display.
3. Watch the setup tutorial by scanning the QR code below.

POE NVR System

https://youtu.be/8t0v6GUzrDA

4. Use a high-definition TV or PC monitor. (Laptop screens or all-in-one PCs are not recommended.)
5. Change the system password:
   - Right-click on the monitor screen.
   - Go to "System Setup" → "System Admin" → "User."
   - Set and confirm a new password (max. 8 characters).

Note: Product appearance may vary slightly depending on batch.

Safety Instructions：


1. Do not install the NVR in hot, humid, dusty, or greasy environments.
2. Ensure good ventilation and do not block air vents.
3. Keep the device dry and placed on a stable surface.
4. Unplug the unit during long-term disuse or relocation.
5. Power off before cleaning. Use a dry, soft cloth only.
6. Immediately disconnect the power if smoke, strange smells, or unusual behavior occurs.

1. Product Parameters

POE Security NVR Specification	
Name	POE NVR
Video Input	4/8/16 Channels – 5MP / 8MP / 12MP
HDMI Output	1ch – 1024x768, 1080P, 4K @ 30Hz
VGA Output	1ch – 1024x768 to 1920x1080
Recording Mode	Manual / Scheduled / Motion / Alarm
Playback	4 Channels
Storage	1 SATA, up to 6TB per HDD
Network Interface	1x RJ45 100M
USB Ports	2x USB 2.0
Power Consumption	15W (without HDD)
Working Temp / Humidity	-4°F~140°F / 10%–90% RH
Dimensions	258 × 210 × 42 mm
Power Supply	DC 48V 2A / 52V 2A

2. System Components

8/16 Channel POE NVR ×1
POE NVR Power Supply (DC 48V) ×1
Network Cable (3 ft / 0.9m) ×1
HDMI Cable ×1
USB Mouse ×1
Hard Drive (Pre-installed, if purchased with HDD) ×1
Manual ×1
Stickers × 4/8

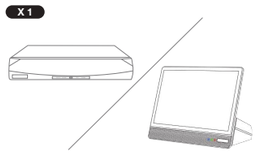

X 1 — 8/16 Channel POE NVR



X 1 — Hard Drive(pre-install, if you purchase kit with hard drive)



X 1 — POE NVR Power Supply 48V DC



X 1 — Network Cable & USB Mouse




X 1 — HDMI Cable




X 1/2 — Manual & Sticker

The appearance of the product may vary depending on the configuration.

3. Installation Settings

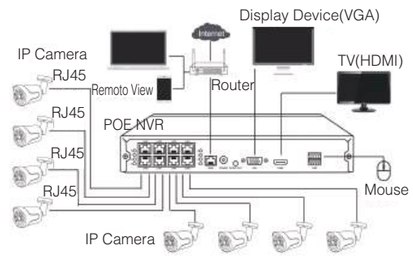

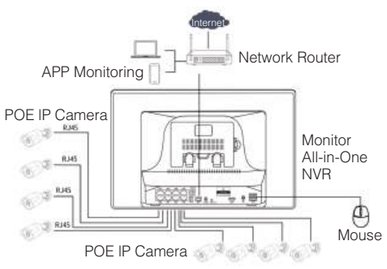


3.1 Connect the NVR to the power adapter.


3.2 Connect the NVR to a monitor using an HDMI or VGA cable.

⚠ Note:
Use a TV or PC monitor; avoid laptops or all-in-one PCs.

3.3 Plug the USB mouse into the NVR's USB port.

POE NVR System

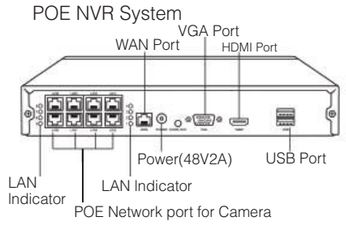


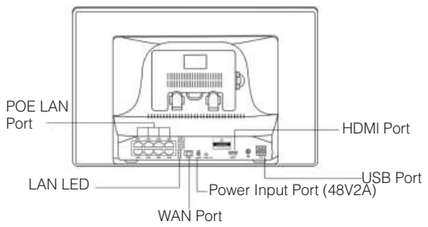

Interface Description:

WAN Port: Connects to the Internet.
POE Network Ports: For IP camera connections.
HDMI Port: Connects to HDTV.
VGA Port: Connects to a PC monitor.
USB Ports (x2): Connects to a USB mouse or storage device.
Power Input: DC 48V / 2A.
RJ45 Ports: For wired camera connections. Cameras are pre-paired. For re-pairing, see section 3.5.

3.4 Use a network cable to connect the NVR to your router.





3.5 Cameras will connect automatically if pre-configured. You can also add them manually.





3.6 Install the app by scanning the QR code or searching "HonestView" or "EseeCloud" on the App Store or Google Play.

Device Requirements: iOS 9.0+ / Android 5.1+

Honestview APP

Backup App: "Eseecloud"

3.6.1 App Installation & Login


1. Download and install the app.
2. Register using your phone number or email address.



3. Tap "+" to add a device.



4. Scan the QR code on the NVR.

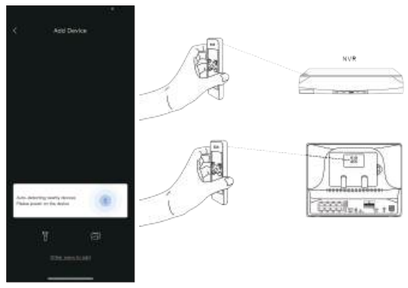

5. Enter a device name to complete the pairing.




3.7 Playback & Notifications

1. Tap "Info" to view alarm messages.
2. Tap "News" to view motion alerts.



Device Screen

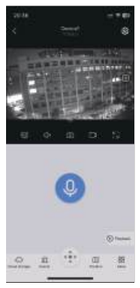

Remote Monitoring




Remote Talk

3. Tap "Playback" to view recorded footage.



Alarm Information

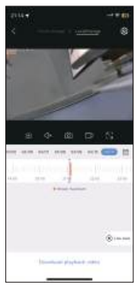

Storage Playback



Other Functions

4. Connecting Third-Party ONVIF Cameras

4.1 Steps for Version V2.5

1. Right-click the screen and select "Video Management."
2. Choose "ONVIF" from the "Protocol" dropdown and click "Search."
3. When cameras appear, click "Add."
4. Once video displays, click "OK."

4.2 Steps for Version V2.6

1. Click the "+" button on the bottom toolbar.
2. Select "ONVIF" protocol and click "Search."
3. Click "Add All."
4. Return to the preview screen. Once the camera feed appears, setup is complete.



Watch video tutorials:

Version V2.5

https://youtu.be/b7zfCN8hFTo

Version V2.6

https://youtu.be/8t0v6GUzrDA

Customer Support


Before returning the product or leaving a review, please contact our customer support team.
We are committed to addressing your questions and concerns promptly and providing satisfactory solutions.


If you have any questions, feel free to reach out!

Manual del Sistema NVR POE (Optimizado)

Version：POENVR50623

Español

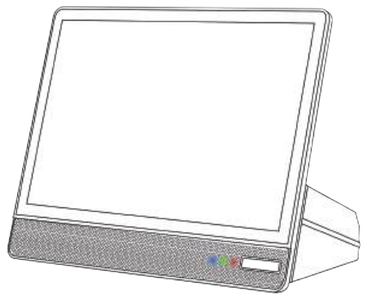

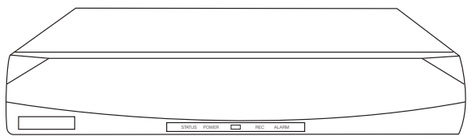

Gracias por elegir nuestro sistema NVR POE. Le recomendamos leer este manual cuidadosamente antes de la instalación para garantizar una configuración y funcionamiento óptimos.

Antes de Comenzar:
1. Verifique que todos los componentes estén incluidos y sin daños.
2. Conecte el sistema a un monitor y verifique que muestre imagen.
3. Mire el video de instalación escaneando el código QR.

Sistema POE NVR

https://youtu.be/VNbz3ARwLB0

4. Use un televisor o monitor HD (no se recomienda usar laptops o PCs todo-en-uno).
5. Cambie la contraseña del sistema:
   - Haga clic derecho en la pantalla.
   - Vaya a "Configuración del Sistema" → "Administrador" → "Usuario".
   - Establezca y confirme una nueva contraseña (máx. 8 caracteres).

Nota: La apariencia del producto puede variar ligeramente según el lote.


Instrucciones de Seguridad:
1. No instale el NVR en lugares calurosos, húmedos, polvorientos o grasientos.
2. Asegure buena ventilación. No bloquee las rejillas.
3. Mantenga el equipo seco y en una superficie estable.
4. Desconecte durante traslados o largos períodos sin uso.
5. Apague antes de limpiar. Use solo un paño seco y suave.
6. Desconéctelo si detecta humo, olores extraños o fallas.

1.Parámetros del Producto

Especificaciones del NVR de Seguridad POE	
Nombre	POE NVR
Entrada de Video	4/8/16 canales – 5MP / 8MP / 12MP
Salida HDMI	1 canal – hasta 4K @ 30Hz
Salida VGA	1 canal – hasta 1920x1080
Modos de Grabación	Manual / Programado / Movimiento / Alarma
Reproducción	4 canales
Almacenamiento	1 SATA, máx. 6TB por disco
Red	1 x RJ45 100M
USB	2 x USB 2.0
Consumo de Energía	15W (sin disco)
Temperatura / Humedad	-20°C ~ 60°C / 10%–90% RH
Dimensiones	258 × 210 × 42 mm
Fuente de Alimentación	DC 48V 2A / 52V 2A

2.Componentes del Sistema

NVR POE de 8/16 Canales ×1
Fuente de Alimentación (DC 48V) ×1
Cable de Red (3 ft / 0,9 m) ×1
Cable HDMI ×1
Ratón USB ×1
Disco Duro (preinstalado si lo adquirió) ×1
Manual ×1
Pegatinas × 4/8

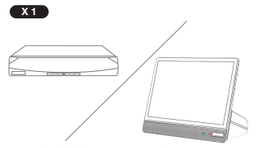

NVR POE de 8/16 Canales



Disco Duro (preinstalado, si adquirió el kit con disco duro)



Fuente de Alimentación POE NVR 48V DC



Cable de Red de 3 pies y Ratón USB




Cable HDMI




Manual y Pegatinas

La apariencia del producto puede variar según la configuración.

3.Configuración de Instalación

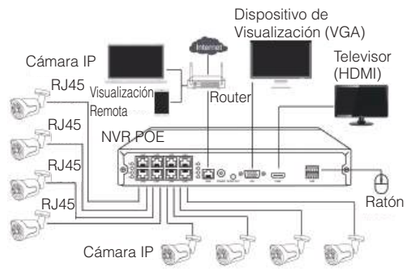

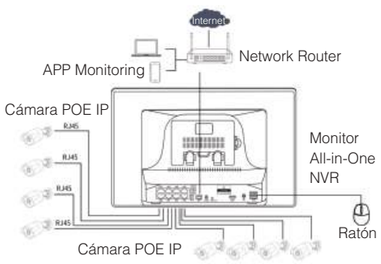


◆ 3.1 Conecte el adaptador de corriente al NVR.


◆ 3.2 Conecte el NVR al monitor usando un cable HDMI o VGA.

⚠ Nota:
Use solo TV o monitor. No use laptops.

◆ 3.3 Conecte el ratón al puerto USB del NVR.

Sistema NVR POE

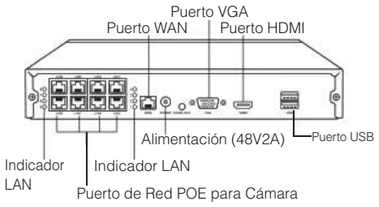


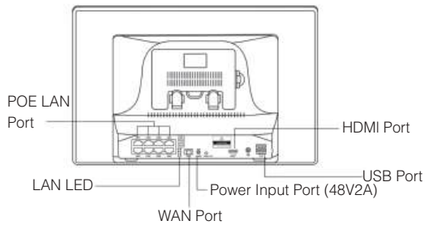

Descripción de la Interfaz:
Puerto WAN: Conexión a Internet.
Puertos de Red POE: Para la conexión de cámaras IP.
Puerto HDMI: Conexión a un televisor HDTV.
Puerto VGA: Conexión a un monitor de PC.
Puertos USB (x2): Conexión de ratón USB o dispositivo de almacenamiento.
Entrada de Energía: DC 48V / 2A.
Puertos RJ45: Para la conexión por cable de las cámaras. Las cámaras están preconfiguradas. Para volver a emparejarlas, consulte la sección 3.5.

◆ 3.4 Conecte el NVR al router con un cable de red.



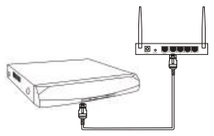

◆ 3.5 Las cámaras se conectarán automáticamente. También puede agregarlas manualmente.





◆ 3.6 Instale la app escaneando el código QR o buscando "HonestView" o "EseeCloud".

Requisitos: iOS 9.0+ / Android 5.1+

Honestview APP

Aplicación de Respaldo: "Eseecloud"

3.6.1 Instalación e Inicio de Sesión


1. Descargue e instale la app.
2. Regístrese con su número de móvil o correo.




3. Toque "+" para añadir un dispositivo.



4. Escanee el código QR del NVR.

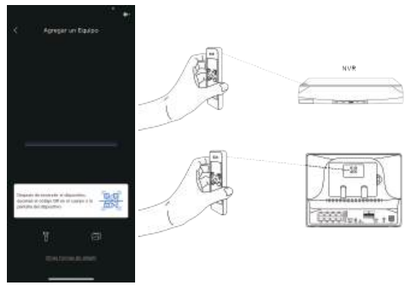

5. Asigne un nombre al dispositivo para finalizar.

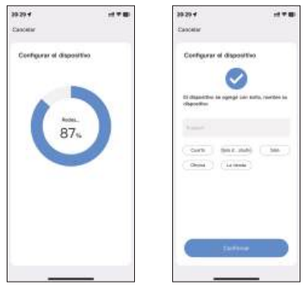

◆ 3.7 Reproducción y Notificaciones

1. Toque "Info" para ver alertas.
2. Toque "Noticias" para ver movimientos.



Pantalla del Dispositivo



Monitorización Remota




Comunicación Remota

3. Toque "Reproducción" para ver grabaciones.



Información de Alarma

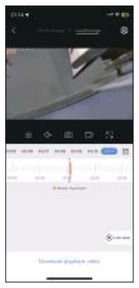

Reproducción de Almacenamiento



Otras Funciones

4. Conexión de Cámaras ONVIF de Terceros

◆ 4.1 Pasos para la Versión V2.5

1. Haga clic derecho y seleccione "Gestión de Video".
2. En "Protocolo", elija "ONVIF" y haga clic en "Buscar".
3. Cuando se muestren las cámaras, haga clic en "Agregar".
4. Al ver la imagen, haga clic en "OK".

◆ 4.2 Pasos para la Versión V2.6

1. Haga clic en el botón "+" de la barra inferior.
2. Seleccione "ONVIF" y haga clic en "Buscar".
3. Haga clic en "Agregar Todo".
4. Cuando se vea la imagen, el proceso estará completo.



Ver tutoriales en video:

Versión V2.5

https://youtu.be/CfaZErLYAF4

Versión V2.6

https://youtu.be/VNbz3ARwLB0

Soporte al Cliente

Antes de devolver el producto o dejar una reseña, por favor contacte a nuestro equipo de soporte al cliente.
Estamos comprometidos a atender sus preguntas y preocupaciones de manera oportuna y a ofrecer soluciones satisfactorias.

Si tiene alguna duda, ¡no dude en comunicarse con nosotros!!