polk

QUICK START GUIDE

GUIDE DE DÉMARRAGE RAPIDE | GUÍA DE INICIO RÁPIDO

MagniFi Mini AX™

English 1


Français 26

Español 52

© Copyright 2021 Polk Audio, LLC.
Polk, Polk Audio, Polk MagniFi Mini AX and Polk Voice Adjust are registered trademarks of Polk Audio, LLC. All other trademarks are the property of their respective owners.

Unpack


Check that the following items are included in the box.

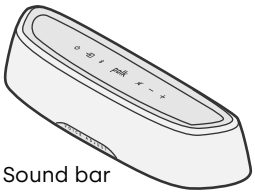

Sound bar




Sound bar power cable

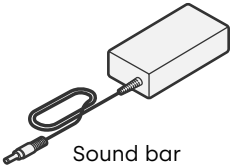


Sound bar power supply




Remote control

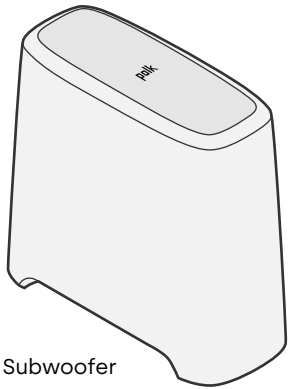


Subwoofer

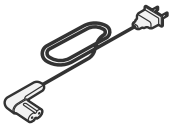


Subwoofer power cable



HDMI cable

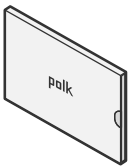

Literature pack




Batteries

English


2 Place the sound bar

For the best listening experience, place the sound bar centered under your TV and flush with the front edge of your cabinet.

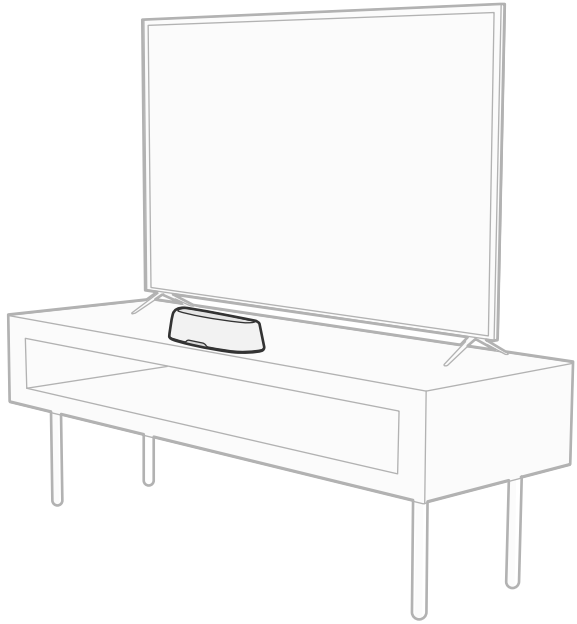

3 Connect your TV

If your TV has an HDMI eARC or ARC port, connect the sound bar to your TV using the included HDMI cable. HDMI provides the best sound performance.

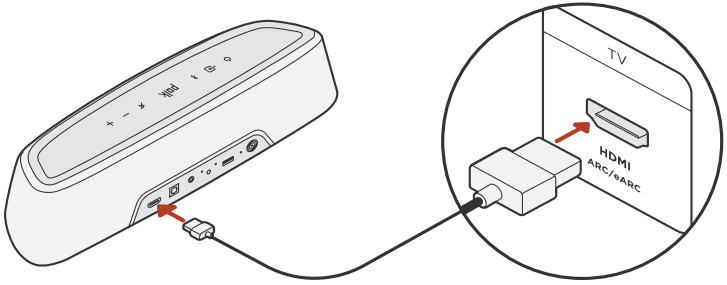


1. Connect one end of the HDMI cable to the TV port labeled “eARC” or “ARC”.
2. Connect the other end of the HDMI cable to the HDMI (eARC/ARC) port on the back of the sound bar.
3. (Optional): If you’re using a Roku TV™, follow the on-screen instructions.

Note: If your TV does not have an HDMI port, you can connect the sound bar to your TV using an optical cable. However, please note that an optical connection does not support Roku TV Ready™ or Dolby Atmos® and DTS:X® audio formats.


English


4 Connect power

Plug the power supply into the sound bar and the power cable into both a wall outlet and the power supply.

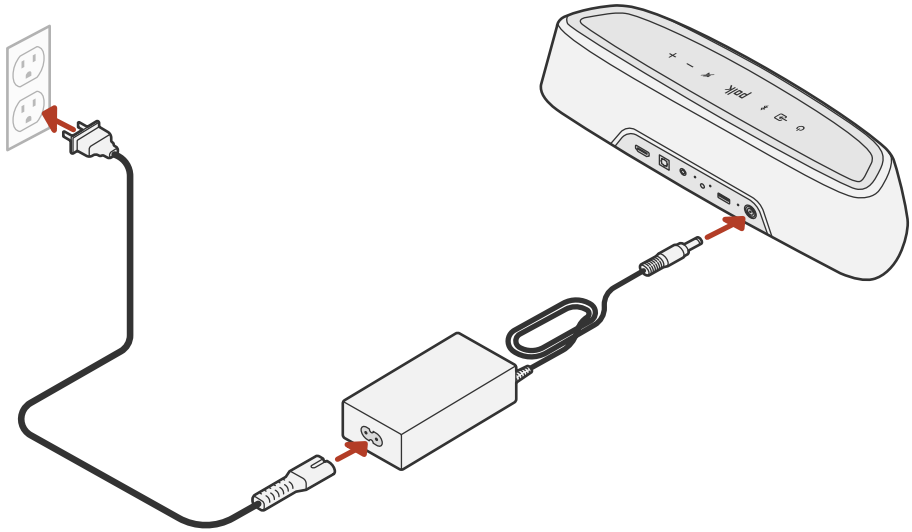

5 Set up the subwoofer

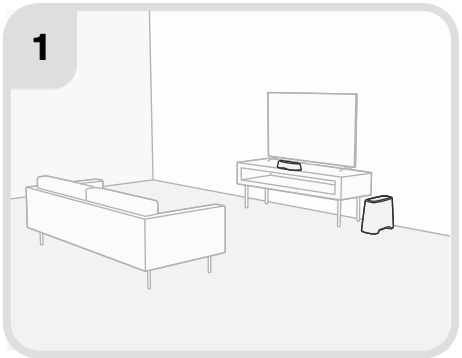

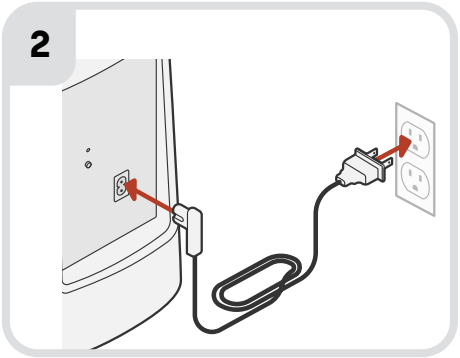


1. For best performance, place the subwoofer along the same wall as the TV and as close as possible to the TV. The distance between the sound bar and the subwoofer should not be more than 30ft (10m), with less distance preferred.
2. Connect the power cable to the subwoofer and to a wall outlet.

Note: The subwoofer connection to the sound bar is wireless.

English

6 Set up the remote

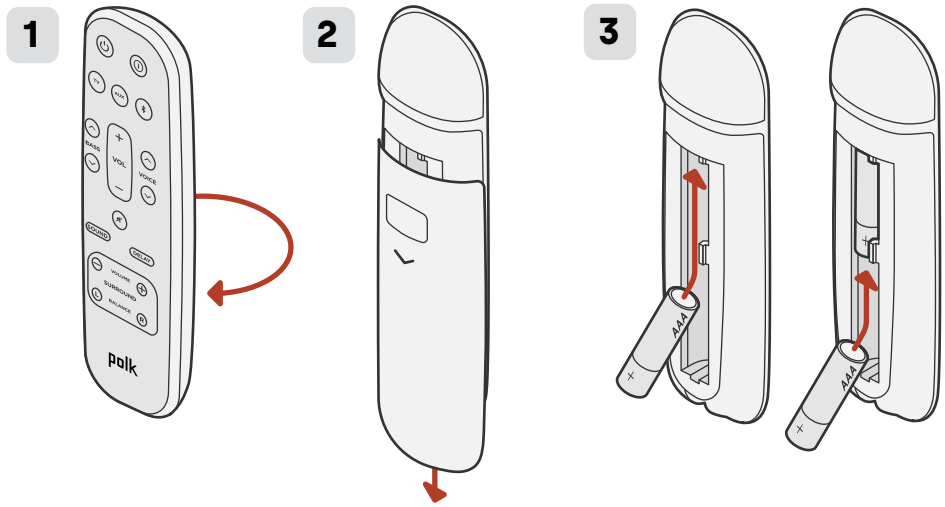

1. Turn the remote to view the back.
2. Open the back cover of the remote by sliding the bottom portion downward.
3. Insert the two AAA batteries into the remote and replace the cover.

7 Connect to Wi-Fi®

Connecting your sound bar to your Wi-Fi® network enables high-quality wireless music streaming and automatic software updates.

You can set up a Wi-Fi connection in one of two ways:

- Via the Google Home app. For more information, see “Listen with Chromecast built-in™” on page 12.
- Via your iOS device. For more information, see “Listen with Apple AirPlay®” on page 13.




Setup is now complete!

Watch TV or play a movie and adjust the sound bar volume and other settings as desired.

You can use the sound bar top panel, the sound bar remote, or your TV remote to make adjustments to your listening experience. For more information, see pages 9-19.

If you do not hear any sound, or you hear an echo, see “Tips and Troubleshooting” on page 20.

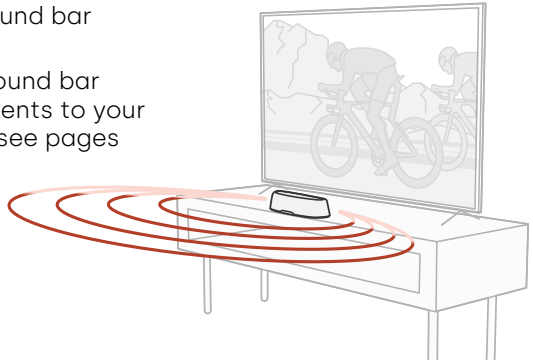


Need more help?

Watch the online setup video!


www.polkaudio.com/magnifiminiax

Remote control features

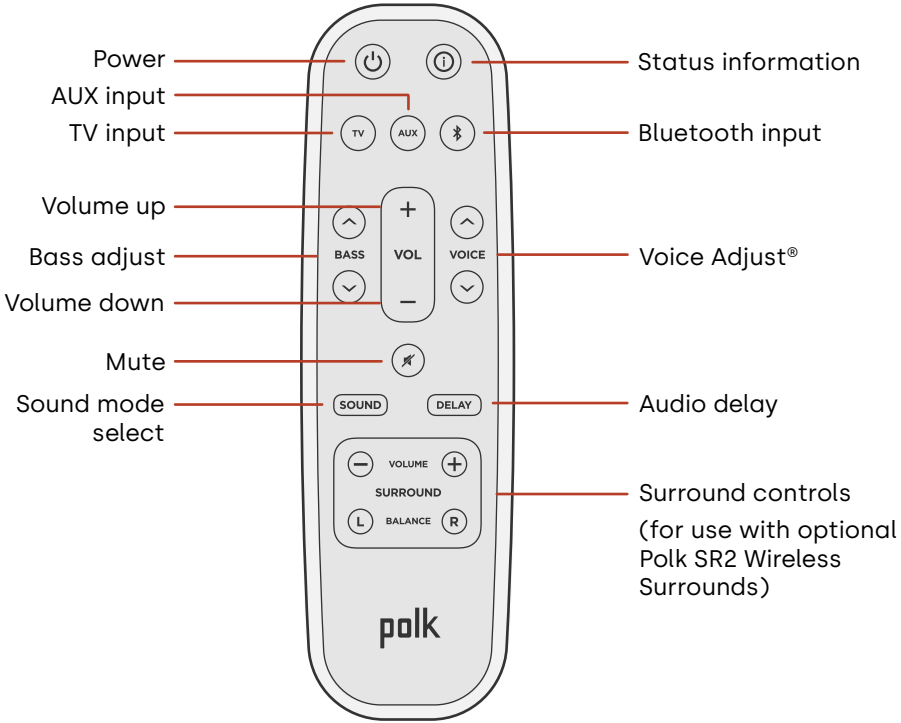


Sound bar features


Top panel

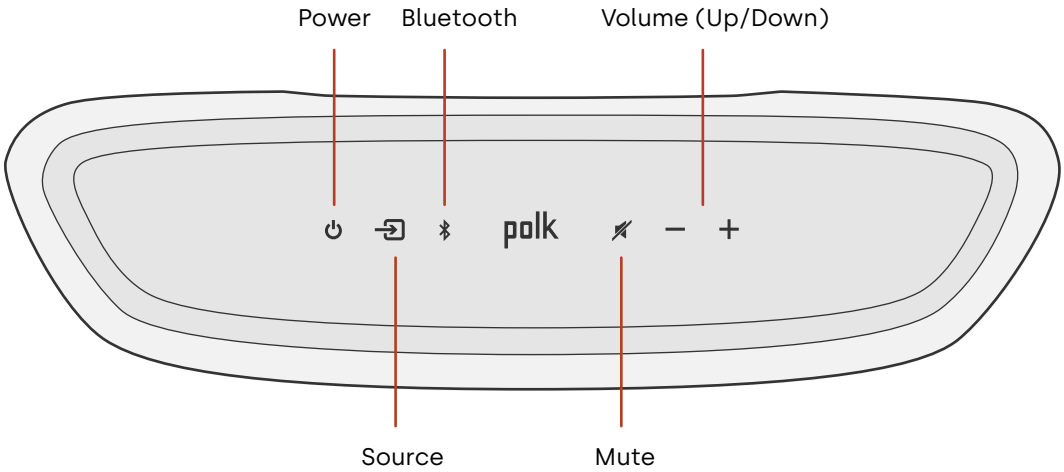

Front panel

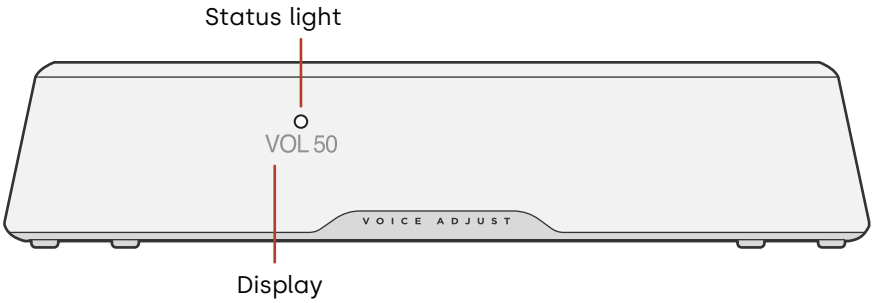

Back panel

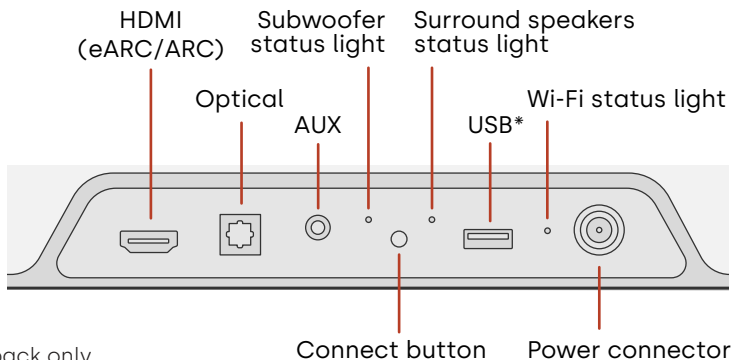

*For MP3 playback only

Listen with Chromecast built-in™

With Chromecast built-in, you can easily:

- Stream music from your favorite apps over Wi-Fi.
- Create a whole-home audio experience. Multi-room sync lets you play the same song across multiple Chromecast built-in compatible speakers in your house at the same time.
- Stream media to the sound bar from any Google Assistant-enabled speaker. Use voice commands to play your favorite content, change volume, and get information about what you are listening to.
- Receive automatic updates.

To set up Chromecast:

1. Confirm that your Android or iOS device is connected to the Wi-Fi network that you want MagniFi Mini AX to join.
2. Download the free Google Home app on your Android or iOS device.
3. Follow the instructions in the app to connect the sound bar to your Wi-Fi network.

For more information about Google Home and Chromecast built-in for audio, visit **support.google.com/googlenest** and **support.google.com/chromecastbuiltin**.



Listen with Apple AirPlay®

AirPlay® is an Apple technology designed to control home audio systems and speakers in any room – with a tap or by just asking Siri – right from iPhone®, iPad®, HomePod®, or Apple TV®.

Play a song in the living room and kitchen at the same time or adjust the volume in any room, all in sync.

To set up Apple AirPlay (if Chromecast isn't already set up):

1. Press and hold the power button on the top panel of the sound bar until you hear a beep and "WI-FI SETUP" displays on the sound bar.
2. Confirm that your iOS device (iPhone or iPad) is connected to the Wi-Fi network you want MagniFi Mini AX to join.
3. On your iOS device, go to **Settings > Wi-Fi**.
4. Scroll down to SETUP NEW AIRPLAY SPEAKER, and tap **MagniFi Mini AX-XXXX**.
5. Follow the on-screen instructions.

Note: If you already set up Chromecast, then AirPlay is ready to use. Tap the AirPlay icon in your favorite music app, then tap **MagniFi Mini AX**.

Works with
Apple AirPlay

Listen to music with Bluetooth®

Connect a phone or tablet with Bluetooth

1. Press the **Bluetooth** button on the top panel of the sound bar or on the remote. "BT READY TO PAIR" appears on the sound bar display.
2. Navigate to the Bluetooth settings in your phone or tablet, and select "Polk MagniFi Mini AX".
   "BT CONNECTED" appears on the sound bar display when your phone or tablet connects to the sound bar.

Note: If a Bluetooth device is already connected, you will not be able to pair a new device until you disconnect the other device.

Automatic reconnect

When you press the **Bluetooth** button on the top panel of the sound bar, the sound bar attempts to automatically reconnect to the Bluetooth device that was most recently connected.

Disconnect a Bluetooth device

You can disconnect from Bluetooth in your phone or tablet Bluetooth settings. Alternatively, press and hold the **Bluetooth** button on the top panel of the sound bar for three seconds. After disconnecting, the sound bar enters pairing mode, and "BT READY TO PAIR" appears on the sound bar display.


Status indicators

Display

The sound bar display provides status information when you change settings or modes. The display turns off when you are not actively changing settings or modes.

Press (i) on the remote at any time to view current settings on the display, including the input source, decoder, sound mode, and Wi-Fi, subwoofer, and surround speaker connection states.

Each button press shows the next status item in sequence.

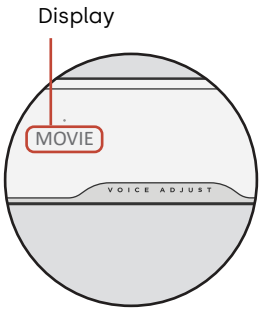


Status light

The status light above the display provides additional visual feedback regarding sound bar states. The light blinks when the bar is muted, booting up or updating software.

The status light can also indicate when the bar is powered on, if you enable this feature. To turn this feature on or off, press the **Mute** (🔇) and **Volume Up** (+) buttons on the sound bar at the same time for 5 seconds.

When this feature is enabled, the status light is solid white when the bar is powered on. The status light turns off when the bar is in standby.

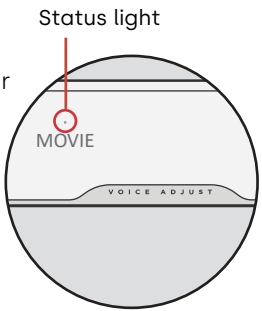

Customize your listening experience

Sound modes

Press SOUND on the remote to cycle through the available sound modes. The sound modes adjust the audio characteristics of the sound bar according to the type of content you're listening to.

The sound bar display shows the current mode.

Movie Mode	Use this mode to optimize non-musical content, such as dialogue and sound effects, in TV shows and movies.
3D Mode	Use this mode for an enveloping 3D sound experience. This mode enhances the height and surround effects in Dolby Atmos® and DTS:X® audio formats and virtualizes these effects for other program formats.
Night Mode	Use this mode for low-volume listening. This mode reduces bass and volume dynamics while improving voice intelligibility.
All Channel Music Mode	Use this mode when listening to music to send the front left and right channels to your surround speakers. This mode is only available when Polk SR2 surround speakers are connected.
Music Mode	Use this mode for streaming music or for enhancing musical content in TV shows and movies.

Audio delay

If the sound bar audio is out of sync with the TV dialogue, you can manually adjust the timing using the Audio Delay adjustment feature.

To adjust audio delay:

1. Press DELAY on the remote to enter Audio Delay adjustment mode.
2. Use the **Volume up** and **Volume down** buttons to adjust the timing in small steps until the audio is in sync with the video. The sound bar display shows the current setting.
3. When finished, press the **Delay** button again or wait 10 seconds to automatically exit Delay mode.

POLK VOICE ADJUST

Voice Adjust

For clearer, crisper dialogue, use the **Voice** controls on the remote to isolate and adjust the dialogue level. Press ^ to increase or v to decrease voice volume levels.

Bass control

Use the **Bass** controls on the remote to easily adjust bass volume for more or less impact. Press ^ for more bass or v for less bass.

Use your TV remote to control the sound bar

You can also use your TV, cable, or satellite remote to control the sound bar power, volume, mute and other functions. Depending on your TV model and connection type, you might need to teach the sound bar to respond to your TV remote.

If the sound bar does not respond to your TV, cable or satellite remote, follow the steps below.

Teach the sound bar to respond to your TV remote

Important: For best results, install fresh batteries in the Polk remote and your TV remote and point both remotes at the sound bar front panel from 1-3 ft (30-90 cm) away.

1. **Enter Remote Control Learning mode.**

   On the sound bar top panel, press and hold the **Source** button (⏎) for about 3 seconds. Release the button when "REMOTE LEARN" appears on the front panel display.

   The prompt "POLK REMOTE" appears on the display.

2. **Select a button on the Polk remote.**

   Press and release a button that you want the sound bar to learn (for example, **Volume Up**).

   The prompt "TV REMOTE" appears on the display.

3. **Select a button on your TV remote.**

   Press and release the button on your TV remote that you want to control the sound bar function you selected in step 2 (for example, **Volume Up**).

   If the message "TRY AGAIN" appears on the display, repeat steps 2 and 3.

   The message "SUCCESS" appears on the display when the command is successfully programmed.

4. **Repeat steps 2 and 3 to program other buttons.**
5. **Exit Remote Control Learning mode.**

   Press and hold the **Source** button (⏎) until "EXIT" appears on the display.

Clear learned TV remote control codes

Press and hold the **Source** button (⏎) on the sound bar for about 10 seconds. You will hear a two-note tone. Continue holding the button and release the button after you hear a three-note tone. The message "IR CLEARED" appears on the sound bar.

Tips and Troubleshooting

I don't have an HDMI port labeled "eARC" or "ARC" on my TV.

1. Use an optical cable to connect the sound bar to your TV.
2. Turn off your TV's internal speakers. See your TV manual for instructions.

There is no sound coming from my sound bar.

- Check that the sound bar is powered on.
- Check that all cables are connected correctly.
- Press the **Volume up** button on the sound bar top panel to increase the volume.

There is no sound coming from my subwoofer.

- Check that the sound bar is powered on and playing audio.
- Check that the "SUB" status light on the back panel of the sound bar is green.
- Check that the status light on the back panel of the subwoofer is green.
- Turn up the bass using the Polk remote.
- Check that the power cable is secure in the subwoofer and in the wall outlet.
- Unplug the subwoofer for 30 seconds, and then plug it back in.

I hear an echo from my TV or sound bar.

- Check that the TV's internal speakers are disabled. Refer to your TV manual.
- If your TV is connected to the sound bar via HDMI ARC, check that HDMI CEC/ARC is enabled in your TV's Settings menu.

My remote control isn't working.

- Get closer to the sound bar and aim the remote at the front of the sound bar.
- Make sure nothing is blocking the IR receiver on your TV (the part of your TV where you aim the remote).
- Make sure the batteries are installed in the correct direction.
- Install fresh batteries in the remote.
- To teach your TV, cable, or satellite remote to control the sound bar, see "Use your TV remote to control the sound bar" on page 18.

How do I perform a factory reset?

Note: A reset will erase all sound bar settings, including Bluetooth and Wi-Fi settings.

With the sound bar turned on, press and hold the **Power** button (⏻) and the **Mute** button (🔇) on the top panel of the sound bar for 7 seconds. You will hear a chime, then numbers will countdown on the display, followed by "RESET." The bar restarts when the process is complete.

How do I wirelessly connect (pair) my subwoofer or surround speakers?

1. Plug in your subwoofer and/or surround speakers and make sure the sound bar is powered on.
2. Enter pairing mode on the sound bar by pressing and holding the **CONNECT** button on the back panel of the sound bar for about 3 seconds. You will hear a confirmation tone.
3. On the subwoofer or surround speaker, press the **CONNECT** button on the back panel for about 3 seconds until you hear a confirmation tone.
4. Repeat step 3 for other speakers that need to be paired.
5. When finished, press the **CONNECT** button on the sound bar to save the new pairings and exit pairing mode.

Why do I see a network called Polk MagniFi Mini AX?

Your soundbar broadcasts a wireless network so that you can connect the soundbar to Wi-Fi. The wireless network signal turns off once you complete Wi-Fi set up. We recommend connecting your sound bar to the internet to receive the latest software updates. For more information, see "Listen with Chromecast built-in™" on page 12 or "Listen with Apple AirPlay®" on page 13. You can also completely disable Wi-Fi if you don't want to connect the soundbar to the internet.

How do I disable Wi-Fi?

To completely disable Wi-Fi, press and hold the **Mute** button ( ) and the **Source** button ( ) button on the top panel of the sound bar for 5 seconds. To enable Wi-Fi again, repeat the procedure.

Note: If you already connected your sound bar to a Wi-Fi network, disabling Wi-Fi does NOT clear connection settings. To clear all connection settings and account information, see "How do I perform a factory reset?" on page 21.

My sound bar randomly powers on by itself.

Your sound bar is preset to automatically power on when you use a device that is connected to the sound bar. To disable automatic power on for an input:

1. Press the desired input on the Polk remote control.
2. Press and hold the desired input button on the Polk remote control for 5 seconds.

My sound bar randomly powers off by itself.

Your sound bar is preset to automatically power off after 20 minutes of inactivity.

To disable automatic power off, press and hold the **Power** button ( ) and **Volume Down** button on the top panel of the sound bar for 5 seconds.

Trademark information



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. DTS, DTS:X, Virtual:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.



Apple, AirPlay, iPhone, iPad, HomePod, and AppleTV are trademarks of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

The Wi-Fi CERTIFIED logo is a registered trademark of the Wi-Fi Alliance. Wi-Fi Certification provides assurance that the device has passed the interoperability test conducted by the Wi-Fi Alliance, a group that certifies interoperability among wireless LAN devices.

Chromecast built-in is a trademark of Google LLC.

The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license.

Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks of Roku, Inc. This product is Roku TV Ready certified in the United States, United Kingdom, Mexico, and Canada.



Spotify is all the music you'll ever need. Millions of songs available instantly. Just search for the music you love, or let Spotify play you something great. Spotify works on your phone, tablet, computer, and home speakers. So you'll always have the perfect soundtrack for whatever you're doing. Now you can enjoy Spotify with your free account as well as Premium account. Use your phone, tablet or computer as a remote control for Spotify.

Go to www.spotify.com/connect to learn how.

The Spotify software is subject to third-party licenses found here: www.spotify.com/connect/third-party licenses.

POLK. EXPECT GREAT SOUND.®

Share Photos | Partager Des Photos | Compartir Fotos

#PolkAudio

Sound United, LLC
5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

EU Contact:
Sound United Europe,
A division of D&M Europe B.V.
Beemdstraat 11, 5653 MA
Eindhoven, The Netherlands

UK Importer:
D&M Audiovisual Ltd
Cells 1 & 2 Kopshop 6
Old London Road
Kingston Upon Thames
KT2 6QF UK