


1. Ensure the Tension Knob is at the lightest setting.
2. Ensure the belt is looped around the flywheel as shown below.
3. Unclip the Belt Retaining Clip and pull the belt taut.
4. Secure the belt into position.
5. Turn the Tension Knob to test tension.

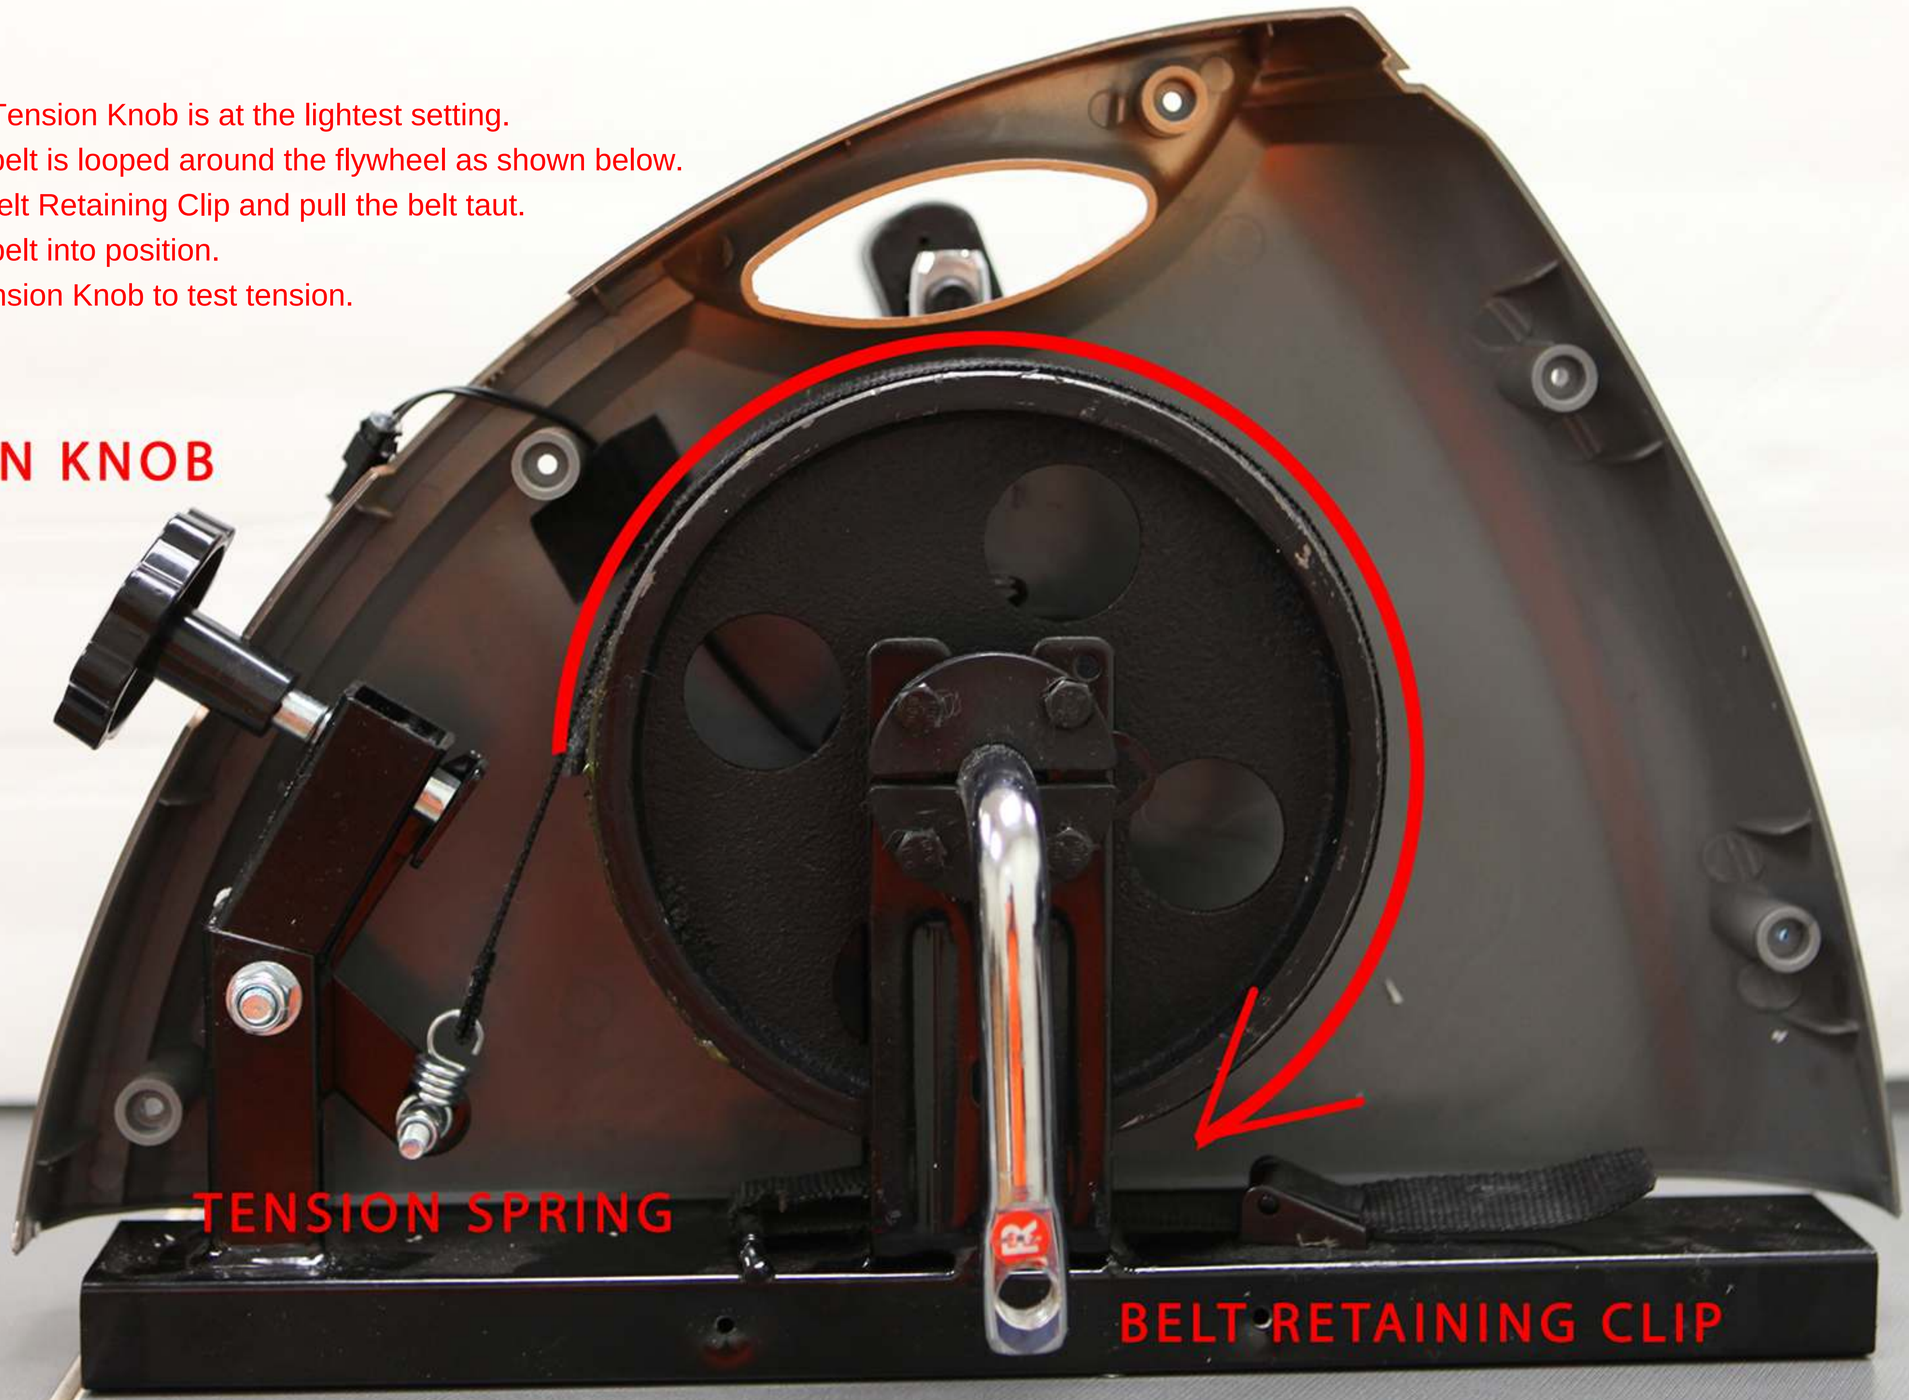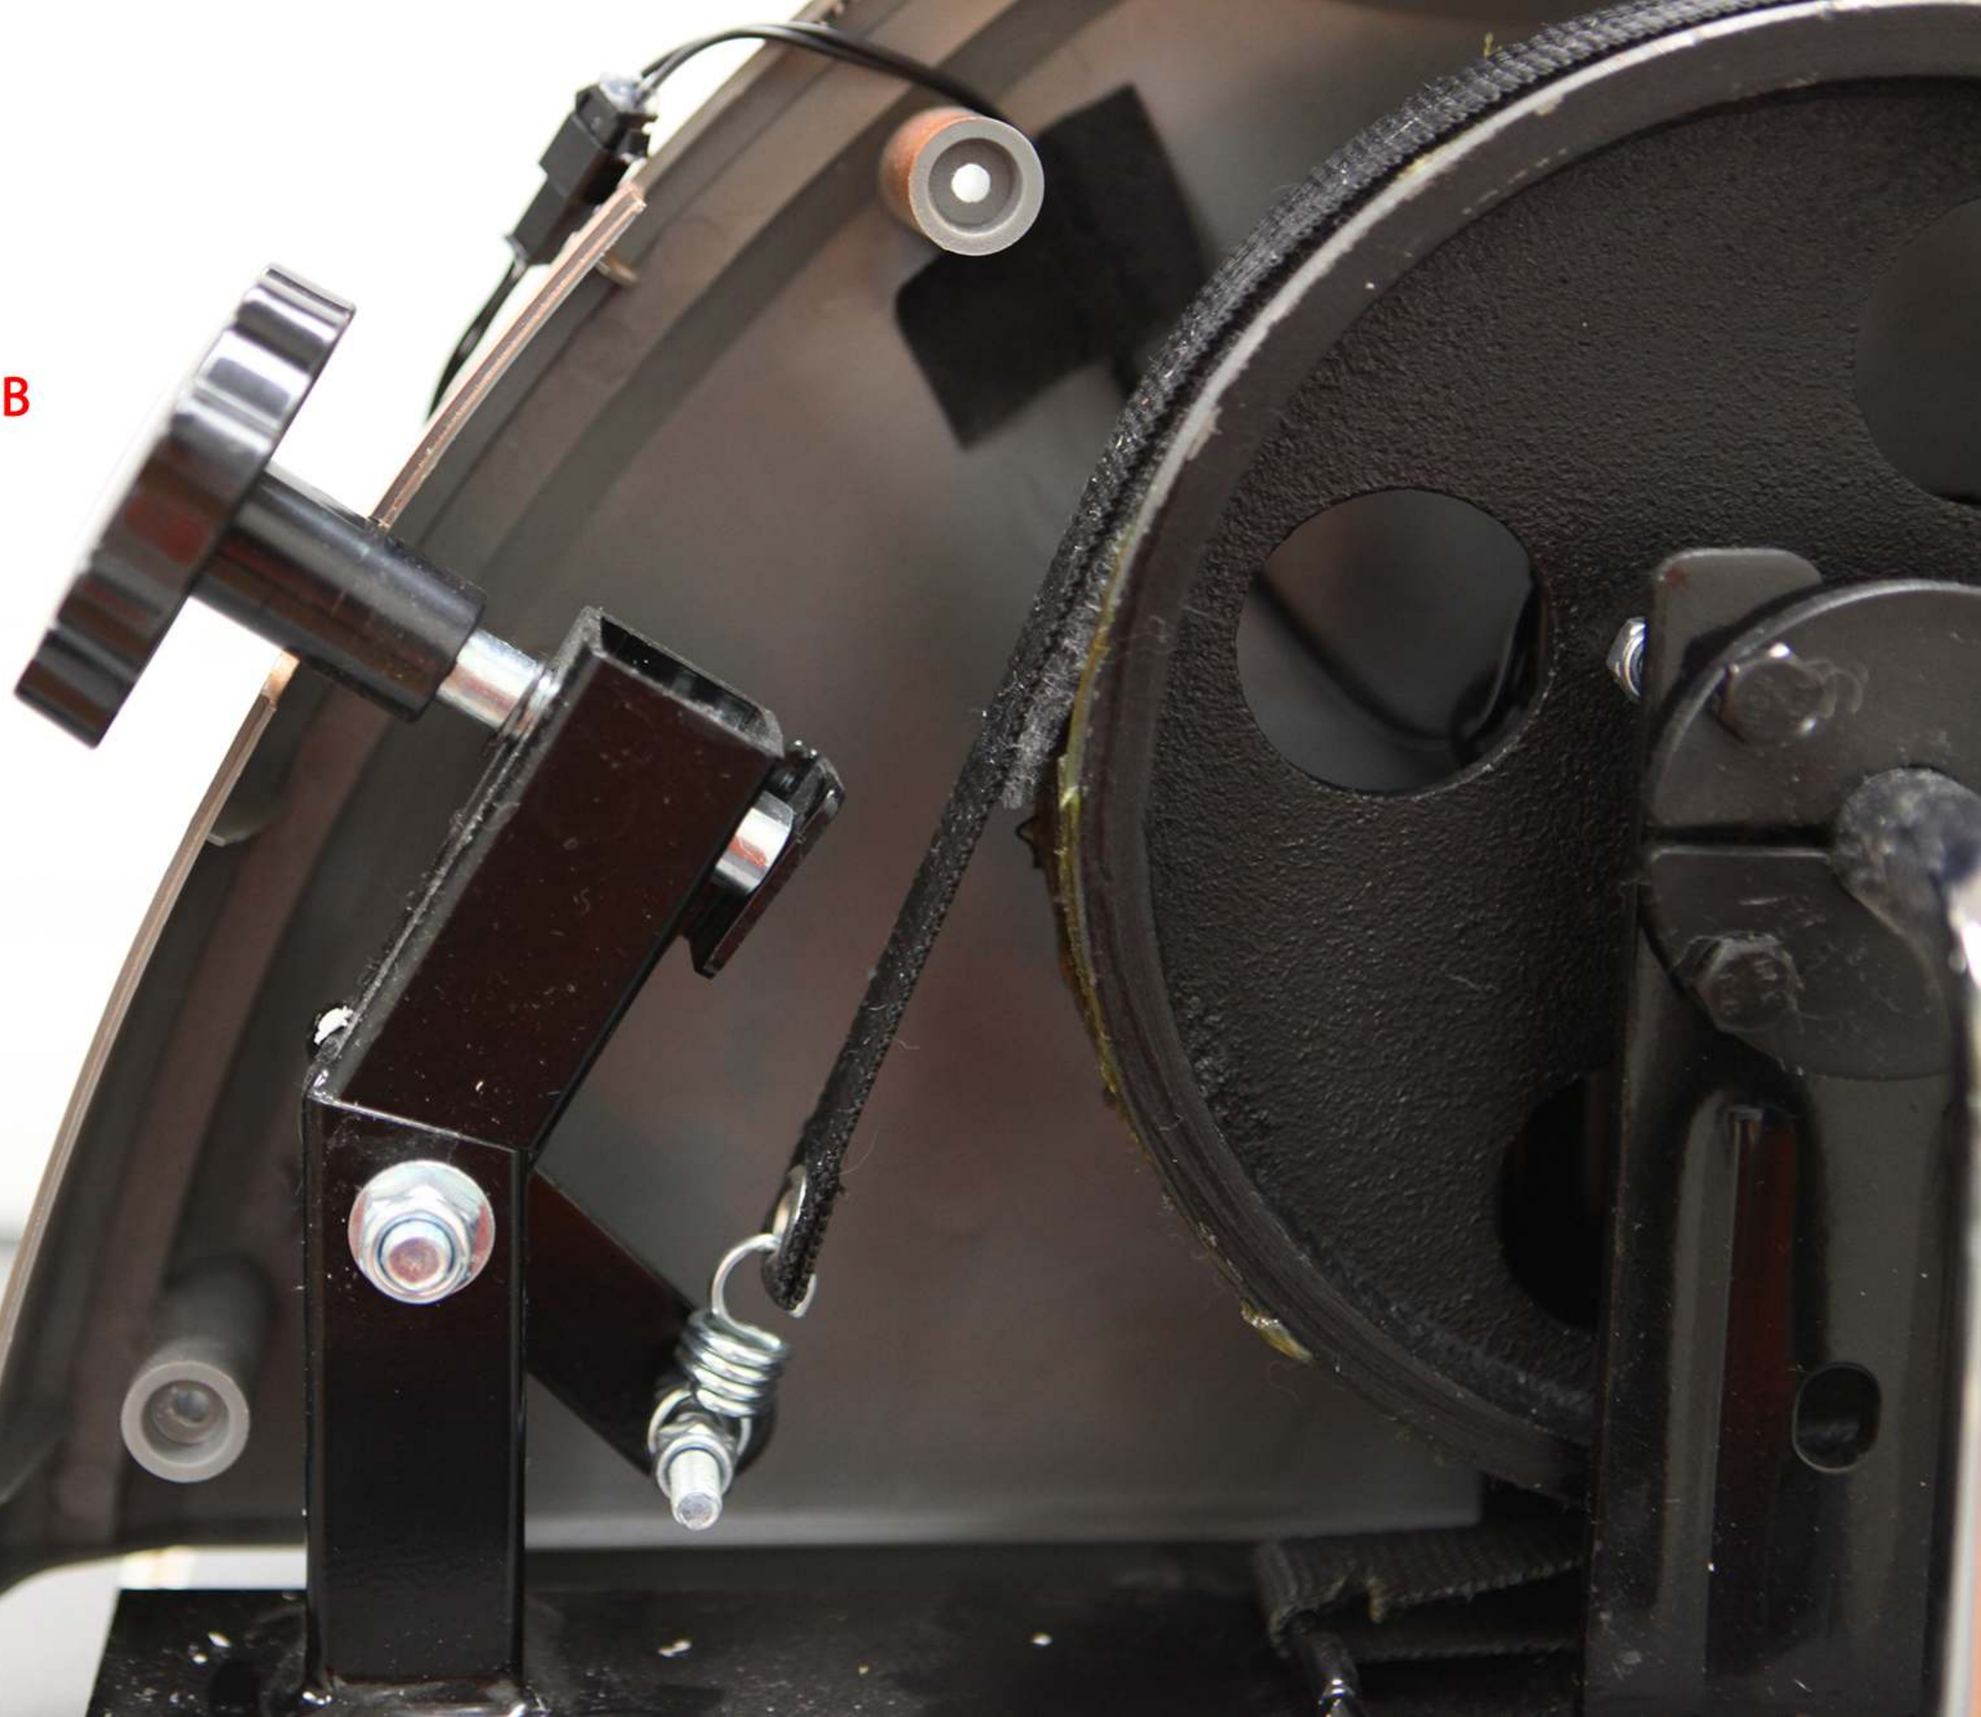

TENSION KNOB

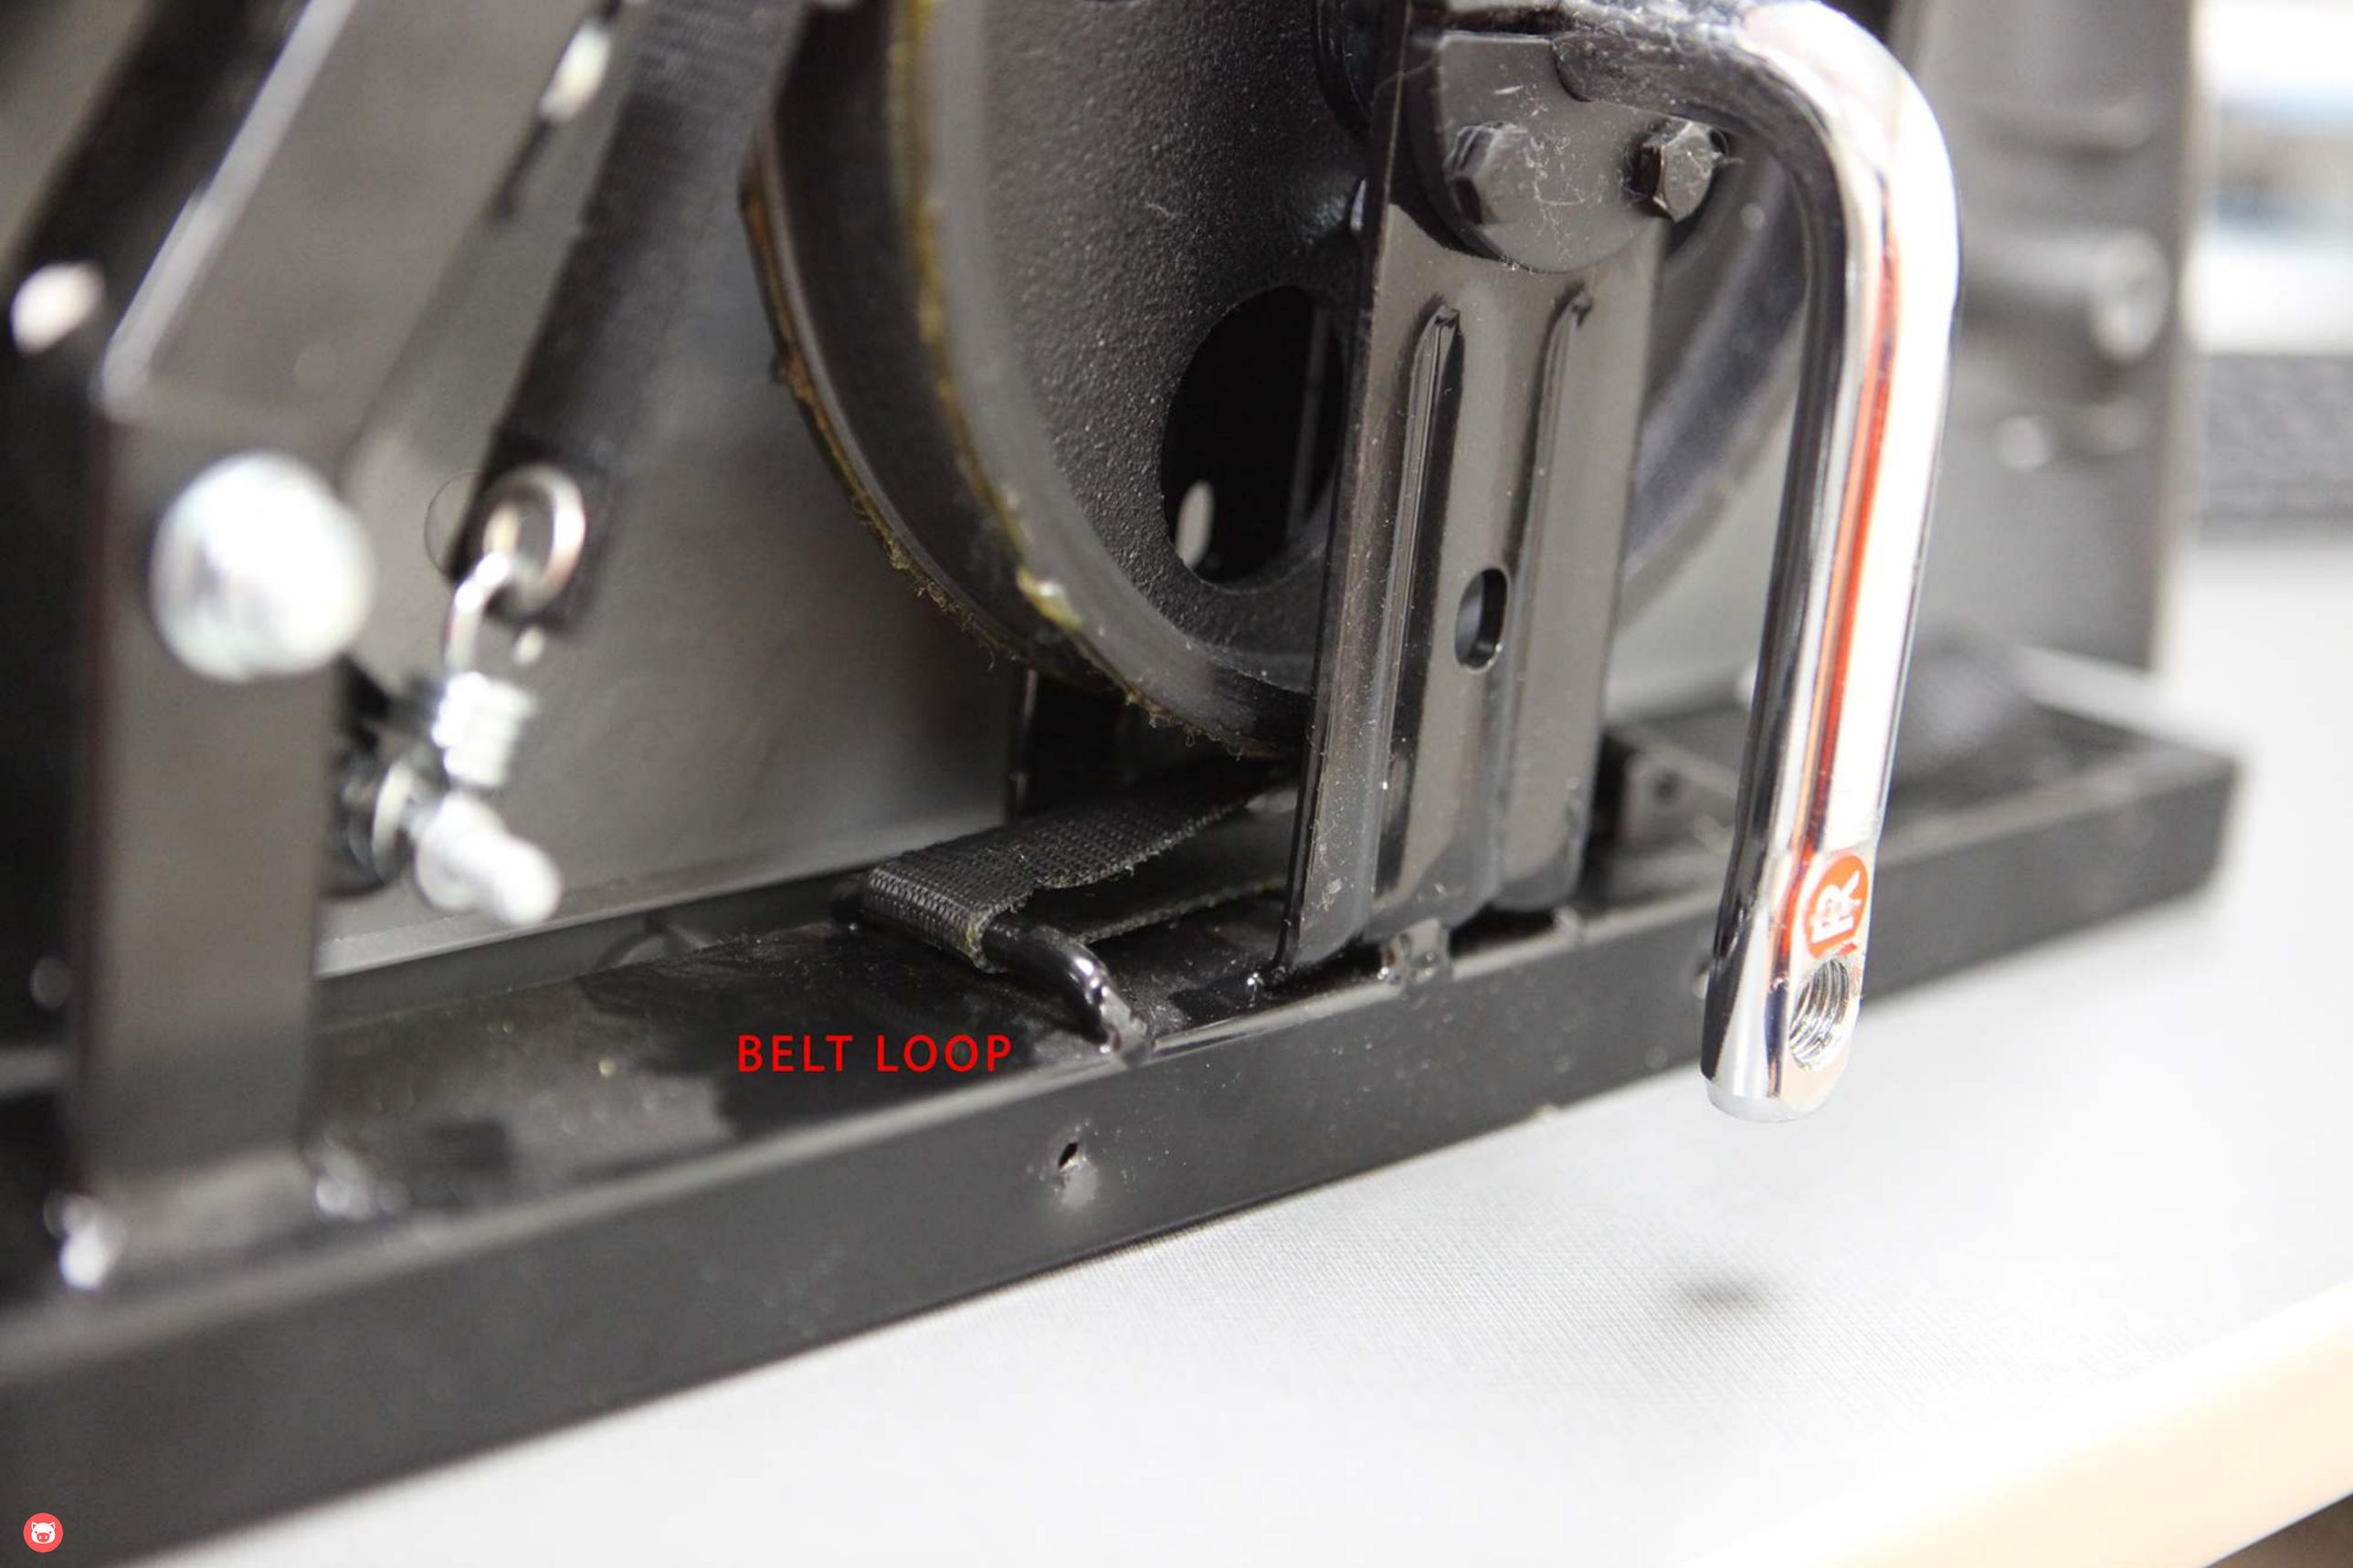


BELT RETAINING CLIP


BELT LOOP