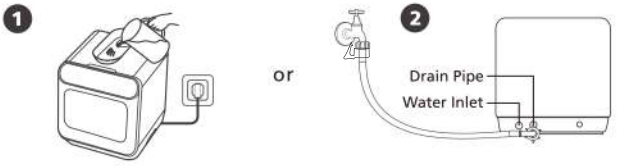
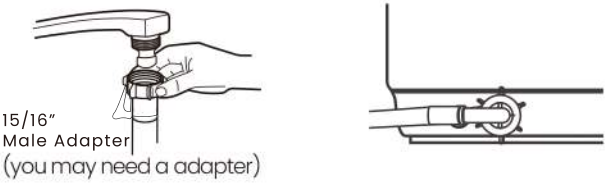
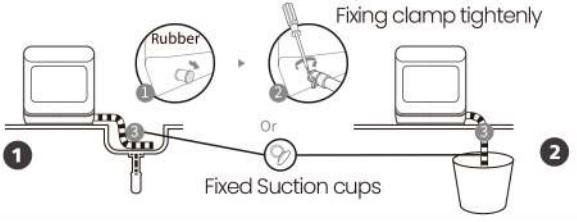
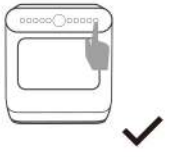
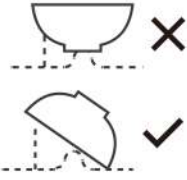
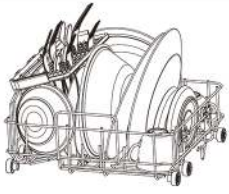
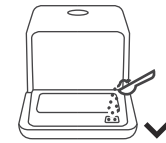
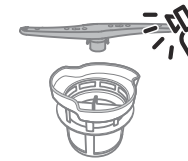
HOW TO USE AND INSTALL DISHWASHER

Failure Phenomenon	Possible Causes
Adding water	
Installing inlet pipe	
Installing drainage hors	



BASIC PERFORMANCE SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
Bad Cleaning performance	Improper program choice 	Choosing the right programs. (checking detail in user manual Page 24) 
	Improper cutlerys loading 	loading instruction 

BASIC PERFORMANCE SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
Bad Cleaning performance	Insufficient Detergent 	Placing right amount detiergent (checking detail in user manual Page 24) 
	Filter or Spray arm Blockage 	Cleaning the Filter and Spray arm 
	Spray arm stucking 	Checking whether the spray arm is stucking and ensure normal operation 
	❶ Oval Plate, Dinner Plate, Soup Plate, Dessert DishSaucer, Small Serving Bowl, Medium Serving Bowl, Glass, Cup, Knife, Serving spoon, Soup spoon, Fork, Serving fork, Gravy ladle, Dessert spoon, Tea spoon	
	❷ Soup Plate, Melamine bowl, Melamine dessert plate, Dessert plate, Dessert bowl, Mug, Glass, Cup, Saucer, Knife, Soup spoon, Teas poon, Dessert spoon, Fork, Serving fork, Gravy ladle	



BASIC PERFORMANCE SELF-CHECKING

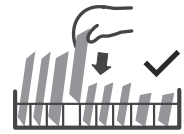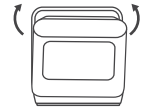Failure Phenomenon	Possible Causes	Self-checking Methods
Bad Drying performance	Inproper loading 	Adjusting cutlery 
	Not activated auto open function	Better drying performance with auto-open function 
Abnormal noise	The spray arm is blocked 	Ensuring the spary arms can run normally. 

E1 OR E4 ERROR SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
E1 Error	Forgetting open Faucet 	Ensuring faucet is open before runing the dishwasher. 

E1 OR E4 ERROR SELF-CHECKING

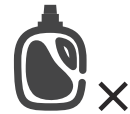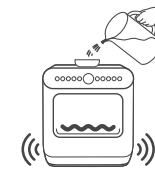Failure Phenomenon	Possible Causes	Self-checking Methods
E1 Error	Other problems 	Contacting after-sales service to ask professional help. 
E4 Overflew Error	Use non-dedicated dishwasher delegent 	Ordinary detergent is not allowed. please use dedicated dishwasher delegent. 
	Water ioverflew from tank (too much water) 	Dishwasher beep will remind you enough water 
	Other problems 	Contacting after-sales service to ask professional help. 