Get Started!



Stay & Play® Wireless Fence Replaceable Battery Receiver Collar


With your new Stay & Play® Wireless Fence Replaceable Battery Receiver Collar, you can provide the freedom and security of your Stay & Play® Wireless Fence system to another pet. Any number of furry friends can use the fence system — just get a separate receiver collar for each and complete the full fence training program with each pet.

The receiver collar has 5 levels of static correction plus a tone-only setting, allowing you to easily adjust the correction level to your pet's temperament. To keep your pet from being over-corrected, static correction duration is limited to a maximum of 15 seconds.

The only pets we do not recommend the receiver collar for are pets with a history of aggressive behavior, younger than 6 months of age, or under 5 pounds.

Let's invite another pup to playtime.


What you have:

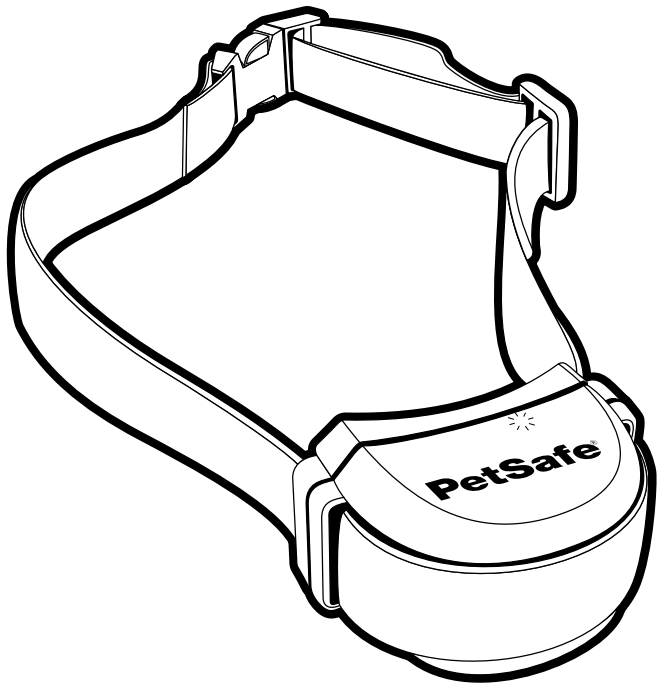

Receiver collar with short contact points



RFA-67 battery
(in receiver collar)

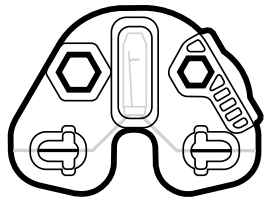

Test light tool




Long contact points



Contact point wrench

1

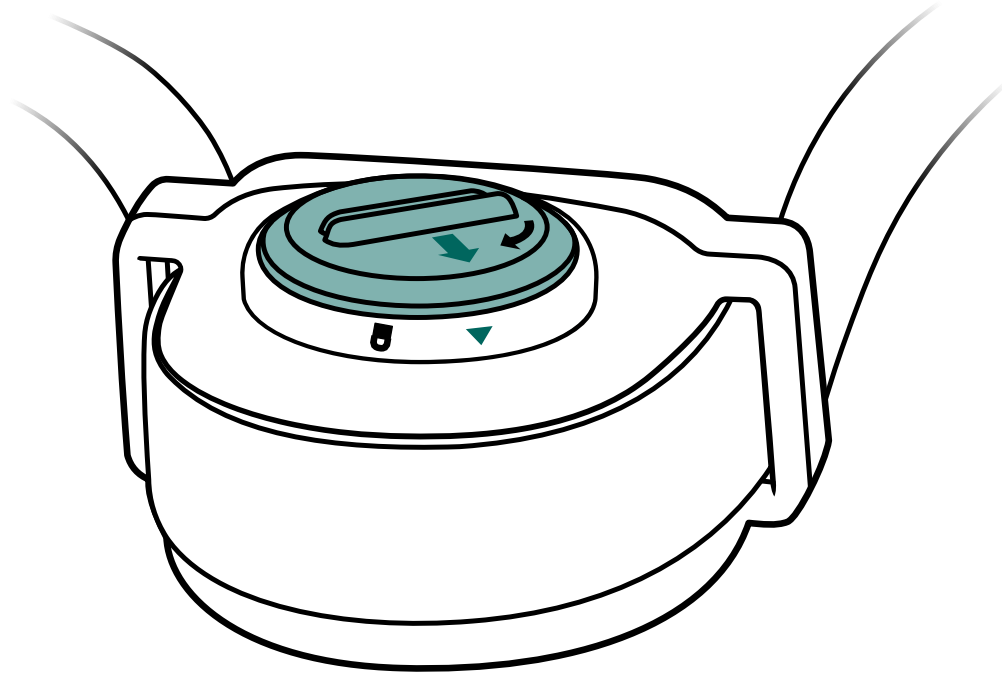


Locate the battery on the underside of the receiver collar. The arrow on the battery should be lined up with the triangle on the receiver collar.

In this position, the battery is installed but not yet locked in place. This prevents the battery from draining prior to purchase.

Important: Always remove the receiver collar from your pet before installing or replacing the battery.


2

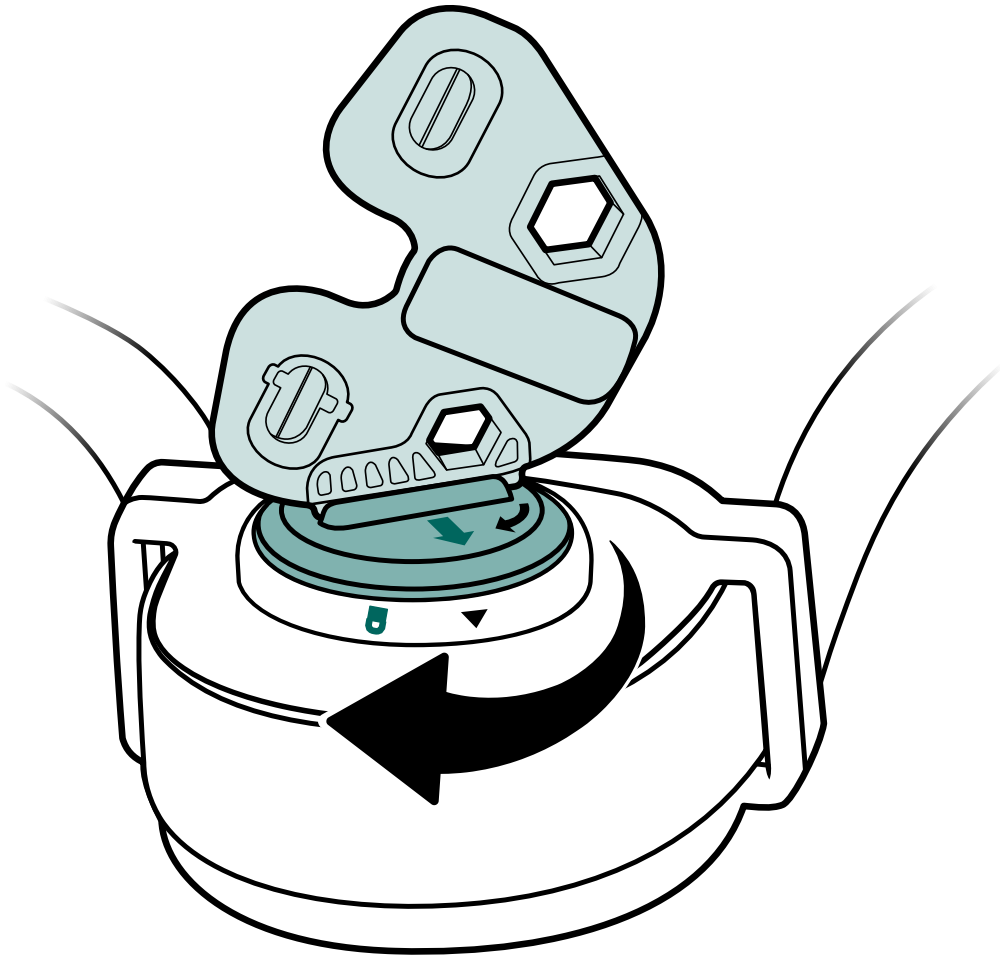

Using the edge of the test light tool, rotate the battery clockwise until the arrow on the battery lines up with the lock symbol on the receiver collar.

The battery is now locked in place and powering the receiver collar.

3

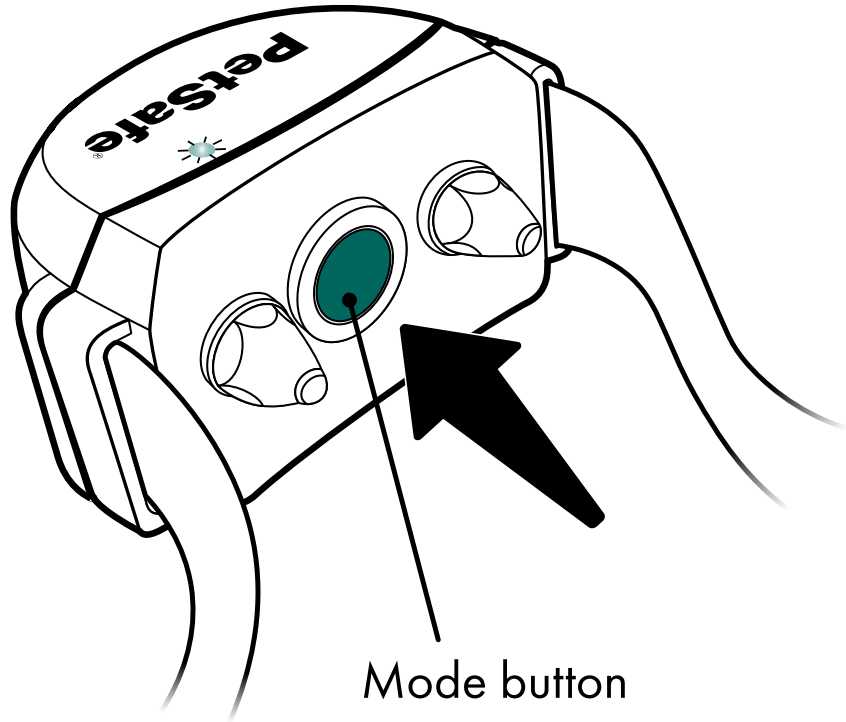

Turn the receiver collar on by pressing and holding the mode button for 5 seconds. The indicator light will glow for 5 seconds (green or red to indicate battery status), and then will emit a series of red flashes representing the current static correction level.

4




Indicator light	Meaning
Green, 5 seconds continuous or slow blinking (every 4 to 5 seconds)	The battery has sufficient charge.
Red, 5 seconds continuous or slow blinking (every 4 to 5 seconds)	The battery charge is low; replace the battery.
Red, quick flashing	The number of flashes reveals the current correction level: 1 flash = Tone only 2 flashes = Low static 3 flashes = Med-low static 4 flashes = Medium static 5 flashes = Med-high static 6 flashes = High static

To determine the correction level, press the mode button once and then count the red flashes (1 flash = level 1, 2 flashes = level 2, and so on).

To increase the correction level, press the mode button once to view the current correction level, then press the mode button again within 5 seconds. Each time you press the mode button within 5 seconds of the previous set of flashes, the correction level increases by one. The level increases from 1 to 6, and then starts over at 1.


5

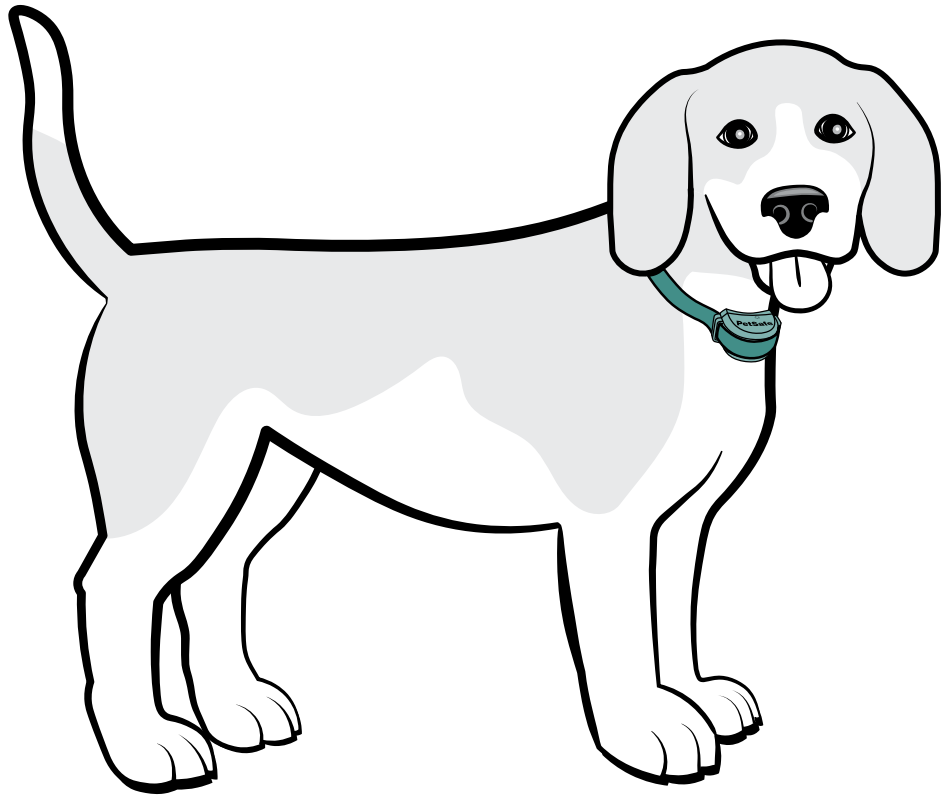

Turn the receiver collar off by pressing and holding the mode button for 5 seconds. With your pet standing comfortably, place the receiver collar around your dog's neck. The PetSafe® logo should be facing up, and the contact points should be centered directly under your dog's chin, touching his skin. If your dog has long hair, it may be necessary to switch to the long contact points provided or trim (not shave) the hair around the contact points to make sure the contact is consistent.

Check the tightness of the receiver collar by inserting one finger between the end of a contact point and your dog's skin. The fit should be snug but not constricting.

6

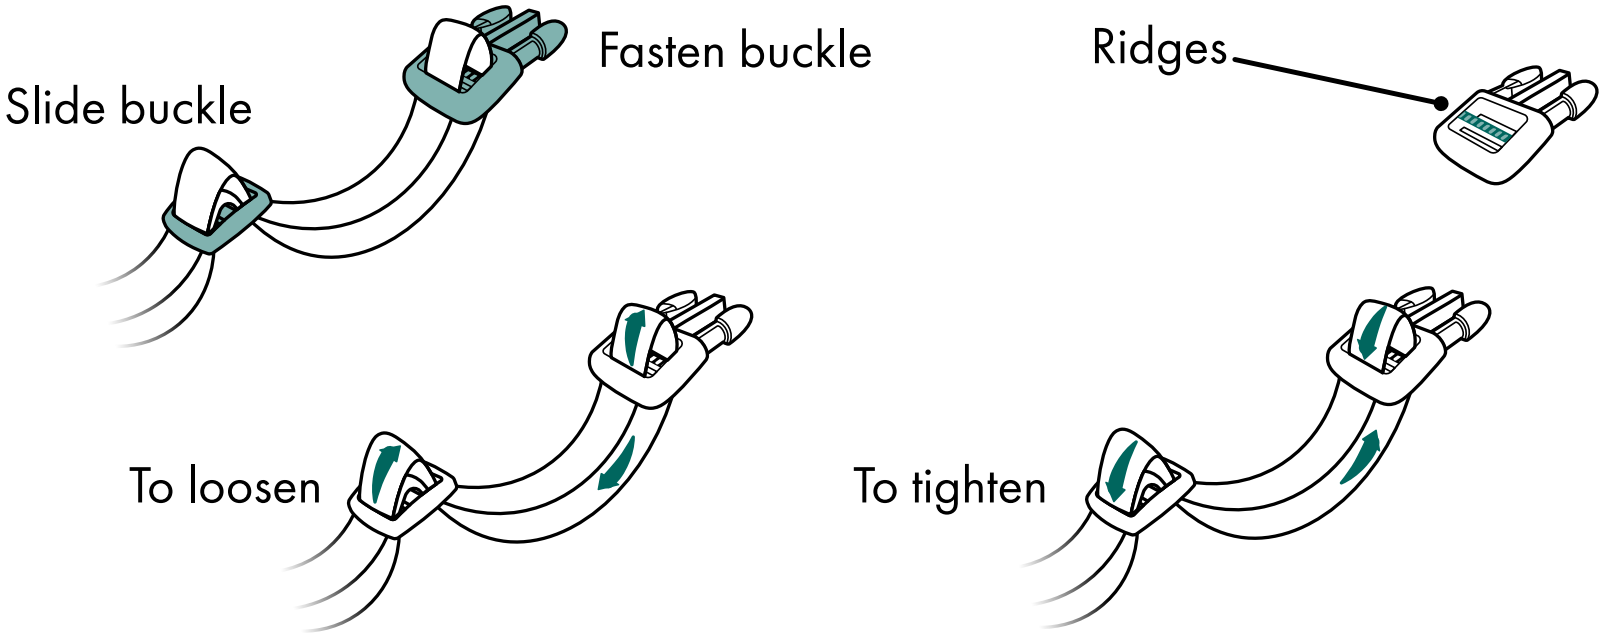


Adjust the fit of the receiver collar as needed. Make sure the ridges on the fasten buckle are facing up and the strap is threaded through the slide buckle to prevent it from becoming loose around your pet's neck.

Once you are satisfied with the fit of the receiver collar, remove it from your pet and trim it (allow room for growth or a thicker winter coat). Seal the edge of the cut collar by applying a flame along the frayed edge.

Important: Check the receiver collar fit frequently. Take the receiver collar off when your dog is not using it.


7

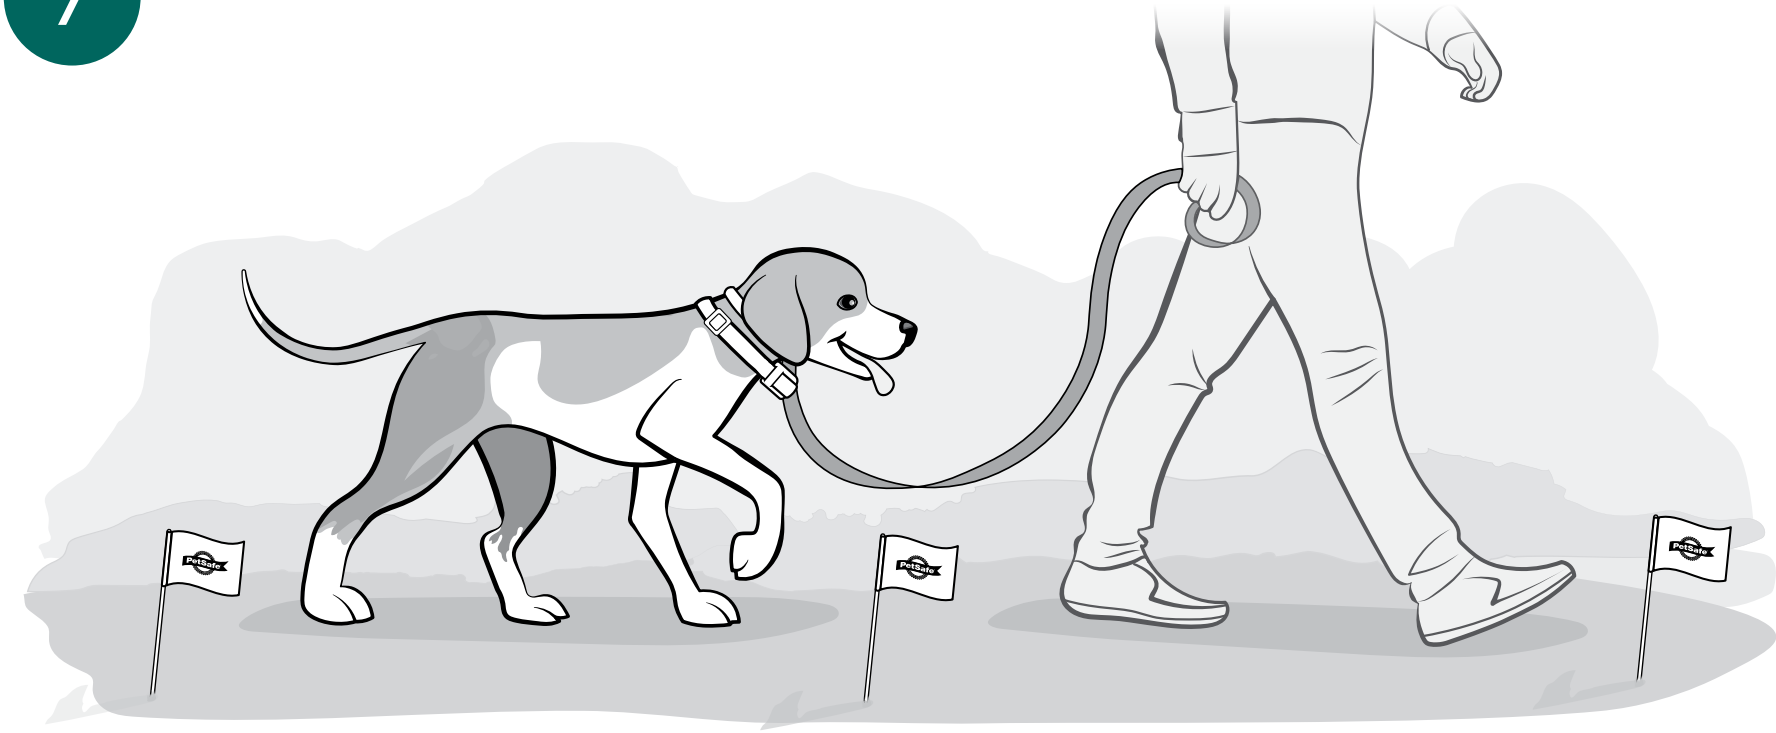

Replace the boundary flags at the edge of your pet area and begin training your pup to understand and respect the boundary. The first two weeks of training are the most important. The fence training guide provided with your Stay & Play® Wireless Fence system will lead you through our recommended training program step-by-step. (You can also find this information on support.petsafe.net or request it from our Customer Care team.)


Every pet is unique, so training time will vary. Carefully watch over your pet in the boundary area until you have completed the full training program and are confident your dog consistently respects the boundary regardless of distractions or temptations.

When the receiver collar indicator light starts blinking red every 4 to 5 seconds during operation, it's time to replace the battery:

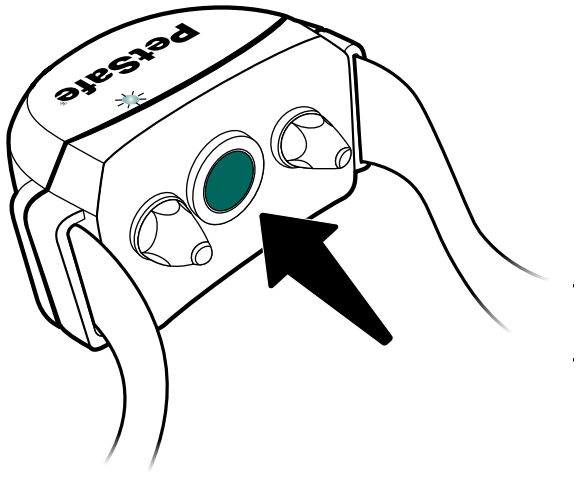


Remove the receiver collar from your pet.

Discharge all power by pressing and holding the mode button for at least 30 seconds, until the indicator light is no longer illuminated.

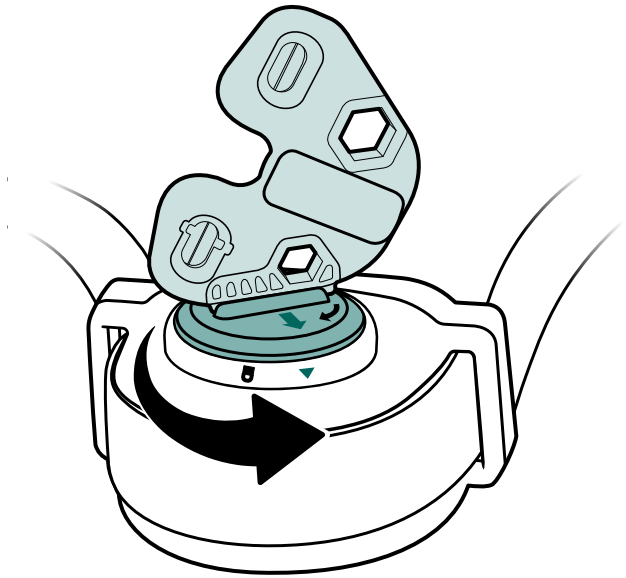

Use the edge of the test light tool to turn the battery counterclockwise and release it from the receiver collar.

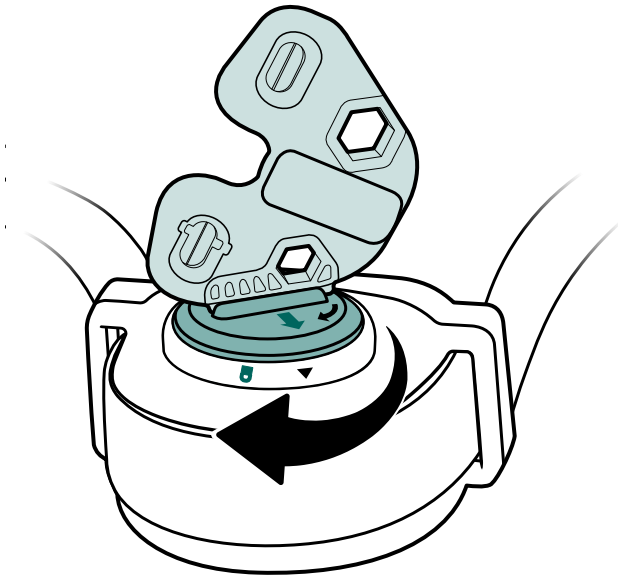

Insert the new battery, lining up the arrow on the battery with the triangle on the receiver collar.

Use the edge of the test light tool to turn the battery clockwise until the arrow on the battery lines up with the lock symbol on the receiver collar.

The table below explains the indicator lights and audible tones you will notice if your pet approaches or passes the boundary:

Receiver collar activation status		
Indicator light	**Audible tone**	**Meaning**
Green, fast pulsating (3 flashes per second)	Warning tone	Your pet is receiving a warning tone.
Red, fast pulsating (3 flashes per second)	Tone for duration of static correction	Your pet is receiving a static correction (up to 15 second duration).
Green, continuous (10 seconds)	No tone	Over-correction protection has been activated and the receiver collar is locked for 10 seconds.

Let us help!

For questions or additional tips:

+1 (800) 732-2677

petsafe.com

©2021 Radio Systems Corporation | Model: PIF00-15002 | YU400-2561

For important safety instructions, please see the customer care guide.