
FOXWELL
Shenzhen Foxwell Technology Co., Ltd.

QUICK START GUIDE

ALL-SYSTEM SCANNER NT624ELITE

Vehicle Connection

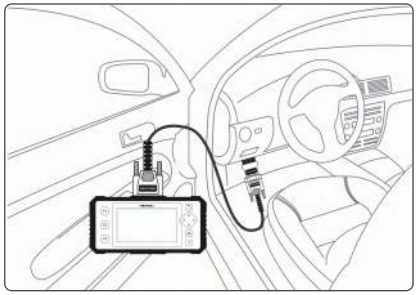

How to use FOXWELL NT624 Elite?
(work out of box)

1. Take out the scanner and main cable. Plug one end into your scanner and the other end into the OBDII port of your car.
2. Turn on the ignition of your vehicle.
3. According to your need, choose the targeted menu to start your diagnosis.
4. Go to Main menu to choose diagnostic software to start test.

Diagnostic Operations

- **Before starting, please make sure:**
  1. The ignition switch is turned to ON position.
  2. The engine is off.
  3. The vehicle battery voltage is between 10-14 volts.
  4. The scanner is correctly connected to the vehicle.
- Don't connect or disconnect the equipments while the ignition is on or the engine is running.

1. Establish communication with the vehicle via diagnostic cable.
2. Identity the vehicle either by VIN reading or entering vehicle specifications manually.

* Select quick scan or manual selection if automatically read VIN not applicable to your car.

3. Find the control modules installed in the vehicle either by Quick Scan or manual selection.
4. Start the tests and make records of test data when necessary.

Register and Updtae

Tips:

1. Generally, the NT624 Elite could be used out of box. It's recommended to update, If it fails to work on your car, load all menus slowly, or newer software version release.
2. Only update via computer windows 7/8/10/11. **Mac** or **IOS** is not supported.

1. Visit website: www.foxwelltech.us
Select "tools" under column support.



2. Scroll down the page and download update tool for your scanner. Install the update tool on your computer and open it.



3. Click register and input your email address to receive code and set your password.




4. Remove off the SD card from your scanner (The SD card is at the bottom of the scanner). Insert the SD card into your card reader and then insert them into your computer.
(card reader is in the package.)



5. Open the update tool and sign in with the email address and password.




6. Your SN will be auto detected. Click "Activate".

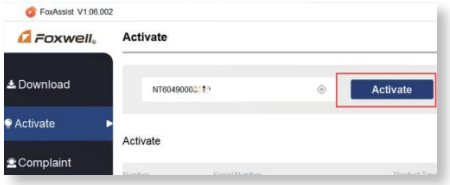

Pictures illustrated here are for reference only and this Quick Start Guide is subject to change without prior notice. For more detailed operations, please refer to the User's Manual.

7. Click "download" and "update" .

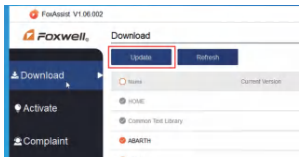

8. Please remove off the SD card from your card reader and insert it into your scanner.



To Print Test Results

Vehicle test results stored in the SD card can be printed through computer. Test data can only be imported to your computer through FoxAssist, it cannot be copied directly from the SD card.

1. Connect the NT624 Elite to computer with the USB cable provided.
2. Launch the **FoxAssist** and log in with your Foxwell ID.
3. Click **Data Management** to view all the stored test results.
4. Choose the files you want to print and click **Print** button.

Contact Us

For service and support, please contact us.

WebSite : www.foxwelltech.us

E-mail : amazonsupport@foxwelltech.com

REGISTER YOUR PRODUCT AT
http://www.foxwelltech.us/register.html

FAQs

If it cannot work with my vehicle, how can I get tech support?

- Please reach us via Amazon at the first time. Our engineer will offer tech support about car compatibility and solve your problem. Fast response will be given within 24 hours. (amazonsupport@foxwelltech.com)

If I receive used or defective machine, or the package missed some item, what shall I do?

- All our products are sent to FBA center as brand new through the strict security check by Amazon. But around 1% customer return goods will be defective or used one, please contact us for replacement.

What should I do if there are some scratches on the screen?

- There's a tightly-fitting screen protector on your machine. If any scratches are found, just tear off the screen protector from the upper left or upper right corner.

Did not receive the Verification Code?

- The verification code is sent to your email address automatically, please check your junk or Spam folder.
- If you have not received the email,please try to request the code again by clicking Send code at the registration page.
- Contact seller via Amazon message, and tell seller the serial number of the scanner.

Why can not I clear error codes &service light?

- To clear codes,make sure that the ignition key is switched to ON with the engine off.
- DTCs can only be erased after correcting the condition(s)that caused them.
- Erase Codes does notfix the problem that caused the fault! This is why you seem to cleared the fault light,but it turned on again soon.

Pictures illustrated here are for reference only and this Quick Start Guide is subject to change without prior notice. For more detailed operations, please refer to the User's Manual.