Gloryes

User Manual

A600: dash cam
A680: Dual dash cam

What's in the Box




Dash Cam * 1



Rear Camera * 1
A680 dedicated rear cameraA
A600 not used



Power Cable * 1



Car Charger * 1



Adhesive bracket * 1



Suction cup bracket * 1



Adhesive * 1



Reset needle * 1



Car Wire Trim Tool * 1



Electrostatic Sticker * 1



User Manual * 1

Install the Dash Cam on the windshield.


① Clean the windshield with a dry cloth.

② Remove the static sticker film and apply the sticker to the windshield while making sure there are no air bubbles.

③ Peel off the film on one side of the double-sided adhesive tape and apply the tape to the Dash Cam.

④ Peel off the film on the other side of the adhesive tape and press the Dash Cam firmly to secure it on the static sticker (if you wish to remove the dash cam, please take off the static sticker).

Note: You can stick the dash cam to the windshield without using the static sticker.

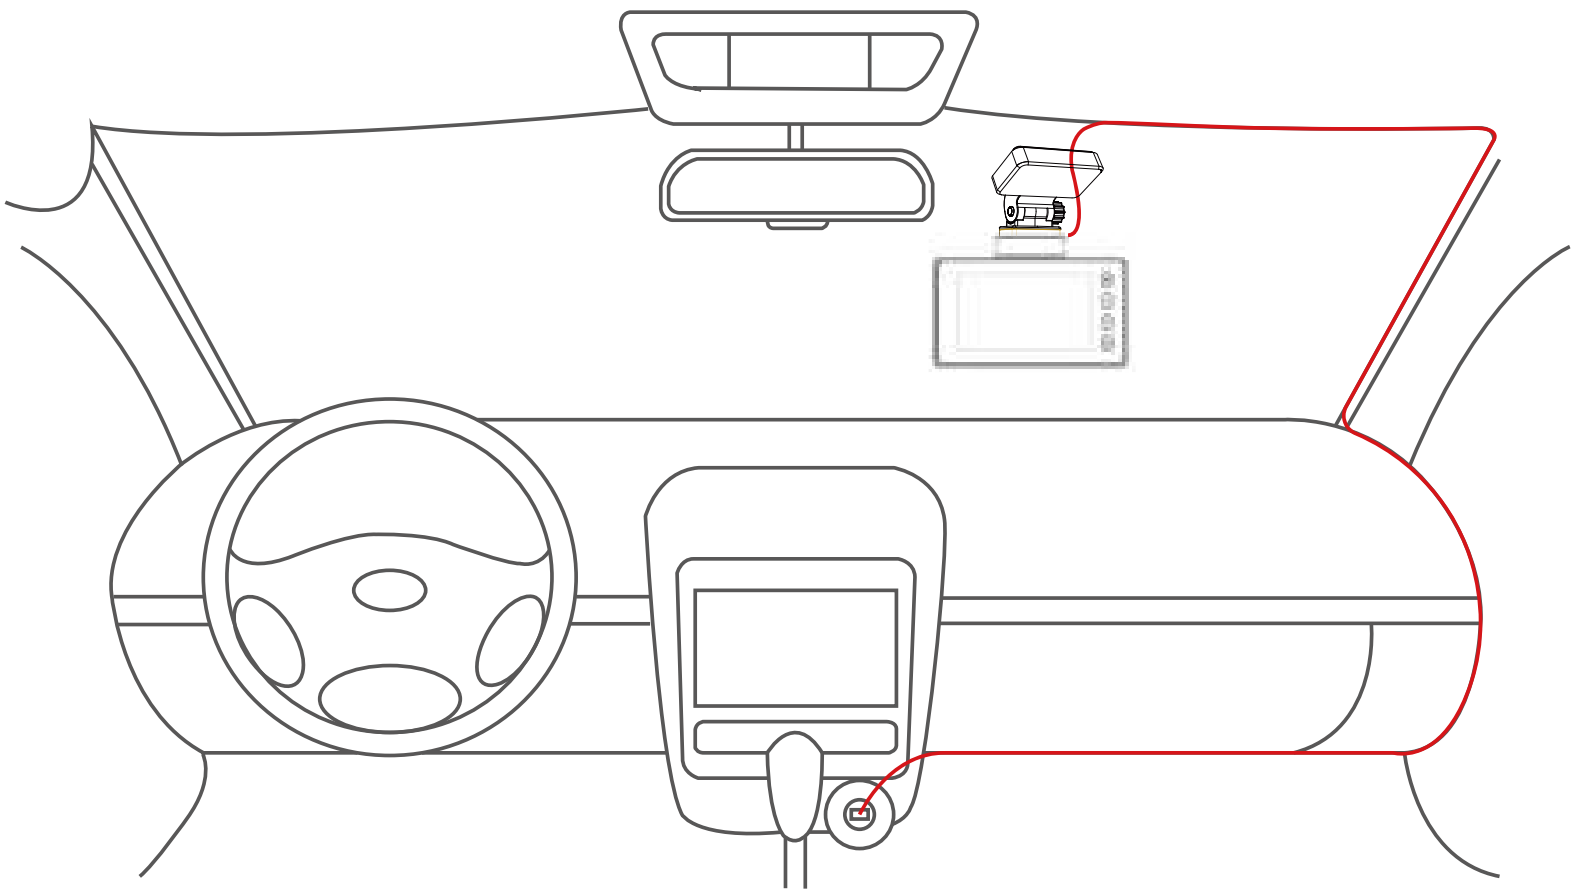


Welcome to choose our recorder! In order for you to use the machine correctly, please read the instructions carefully before use. We will be happy to provide you with quality products and intimate service!

Front Views



①.LCD screen ②.Menu ③.Page UP ④.Page down ⑤.Power button ⑥.Charging source light (red light after connection), work light/video light (flash when recording) ⑦.Main camera ⑧. Speaker ⑨.Micro SD ⑩.Reset

Back

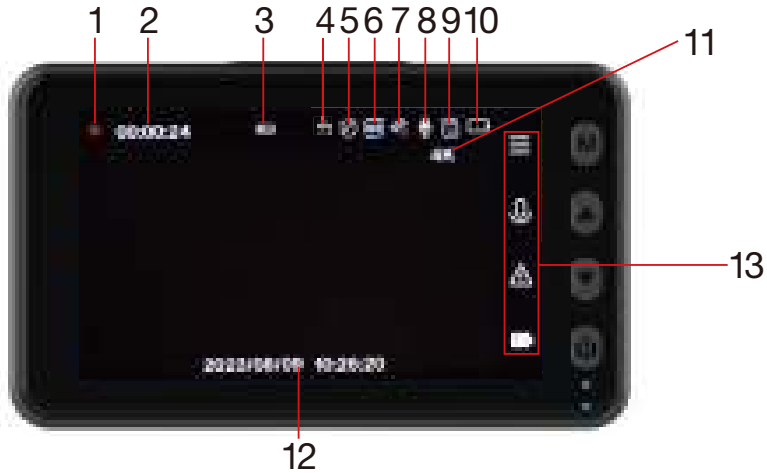

1.Recording; 2.Recording time (When recording is stopped, it indicates the remaining recording time) ; 3.WDR; 4. Emergency file icon ; 5.Parking monitoring; 6. Loop recording 7.G-sensor 8.MIC, MIC icon, with/indicating recording is off ; 9.Micro SD; 10.External power charging/battery indicator symbol; 11.Resolution; 12.Date and Time; 13.The function indicator bar corresponding to the right button

Function operation instruction

When setting the key, the right column displays the corresponding function of the key

When in video mode or preview mode, press the menu key to enter the image below



① Menu key/Back
② MIC on/off function, up or left
③ Lock function, down or right
④ Confirm/Video/Switch on/off key.

Dashcam parameter setting

Move the up and down keys to setup and press the Confirm key to enter Settings



① camera settings
② system settings

The camera parameters are set as follows:

Resolution [4 k (the default), 2 kp60, 2 kp30, 1080 p60, 1080 p30] parameters of A600 dash cam

Resolution [4K+1080P(default),2K+ 2K,2K+1080, 1080p +1080P30] Parameters of the A680 dash cam

Dual-channel display Settings [PIP(F+R) (default), PIP(R+F), front shot, rear shot] parameters of the A680 dash cam

The camera parameters are set as follows:

Loop Recording 【1, 2 (default), 3】
Image rotation 【off(default) on】
record audio 【on(default) off】
Gsensor 【off(default), low,Medium High】
Parking monitor 【on off(default)】
WDR 【on(default) off】
EV value 【2, 1.6, 1.3, 1,0.6, 0.3, 0 (the default), 0.3, 0.6, 1, 1.3, 1.6-2 】



Format
Default setting
Screen save 【off, enter the protection screen after 1 minute (default), enter the Black screen after 1 minute】
Auto power off 【off(default),30S,1M, 2M】
Boot sound 【off, soft(default) louder】
Beep sound 【off, soft(default) louder】
Language 【english(default), Japanese, Francais, Deutsch, Espanol, Italiano, Portugues, Simplified Chinese】
Date/time
Frequency 【50Hz, 60Hz (default)】
Version

Playback mode: Press the menu key, to enter Playback mode. Press the confirm key to enter the following screen





1.Emergency Recording
2.Normal Recording
3.Photo
Press up or down to select the corresponding column, press the confirm key to enter, select the corresponding file up or down, and press the Confirm key to play back the recording.

Ln the above mode, press the menu key to exit the setting and enter the preview mode. Press the video key to start recording

Information about MicroSD card:


1.Because the emergency videos will NOT be overwritten, users are advised to delete the unused Emergency files half a month.
2.There may be too much memory fragmentation in the memory card
due to constant writing and easing activity. This will affect the recording of videos. In order to maintain best performance of the recorder, users are recommended to perform full FORMAT of the microSD card half a month.
3.Minimum speed class of Micro SD card is U3
Warranty will be void if the manufacture deems that the defect is caused by users or any other reasons.
Warranty, Special Clauses and Exemptions This product is used for video and audio recording. The recorded media
Shall be used ONLY as an additional reference in any case of accidents etc. It shall not be held liable or responsible in any matter related to the use of the recorder in any situation or scenarios, whether directly or indirectly.
Take note of actions that may lead to loss of data as below:
1.Removing the memory card during recording. Any abnormal operations
on the recorder may lead to damaged or loss of the video file.
2.Recorder and Video files maybe damaged or lost following the impact from a major car accident.

Sensor	Low light level night vision
Working Voltage	5V
Working Currency	800mA/5V
Storage Temperature	-4°F~158°F
Operating Temperature	-14°F~140°F
Operating Humidity	15~70RH
LCD screen	3.0" 640×480 IPS

Note:

1.When a fault occurs, first confirm whether the indicator light of the car charger and the indicator light of the driving recorder are on. If the indicator light of the driving recorder is on, it means that the power is on, otherwise the car charger is not in good connection.
2.After booting normally, no video recording, first check whether the card is normal, whether the card speed is too low, try to format the card or change the card
3.When there is an abnormal recording, you can try to set it to the factory setting in the menu
4.When there is no power on or the screen does not work after power on, please press reset.
5.When a black screen appears during working, you can press any key first to confirm whether it has entered the screen saver mode.
6.Please use the car charger that comes with this machine
7.If you have any questions, please contact: dayutech2023@163.com
8.Thank you for purchasing the A600/A680 Dual dash Cam. This product carries a one-year warranty from the purchase date.

Rear cam

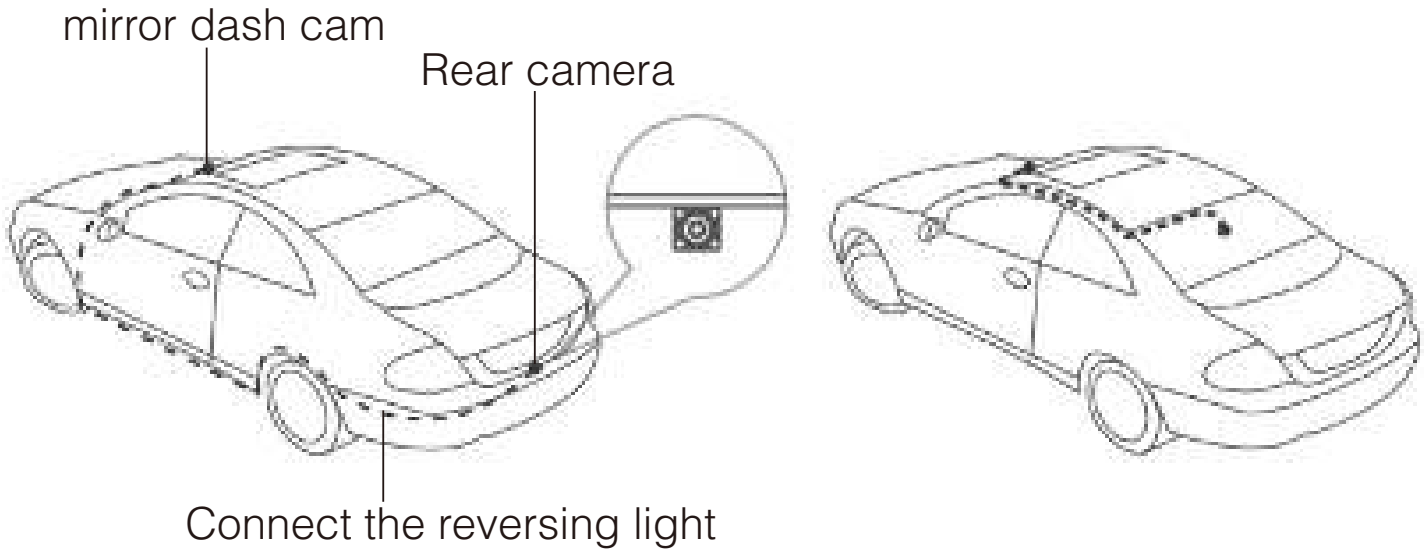

Gloryes

マニュアル

A600：ドライブレコーダー

A680：デュアルドライブレコーダー

箱の中に何がありますか。



ドライブレコーダー*1



バックカメラ*1

A680専用バックカメラA
A600未使用



電源ケーブル*1



車載充電器*1



接着スタンド*1



吸盤スタンド*1接着*1



せっちゃくざい



リセットピン*1



自動車ハーネス装飾ツール*1




静電シール*1



ユーザーマニュアル*1

ドライブレコーダーをフロントガラスに取り付けます。
①乾いた布でフロントガラスを清潔にする。
②静電シールフィルムを取り外し、フロントガラスにシールを貼り付けるとともに気泡がないことを確認します。
③両面テープ側のフィルムをはがし、テープをドライブレコーダーに貼り付ける。
④テープの反対側のフィルムをはがし、ダッシュボードを押す
ドライブレコーダーをしっかりと取り付け、静的シールに固定します（ドライブレコーダーを外したい場合は、静電気シールを外してください）。
注意：静電シールを使用せずにドライブレコーダーをフロントガラスに貼り付けることができます。

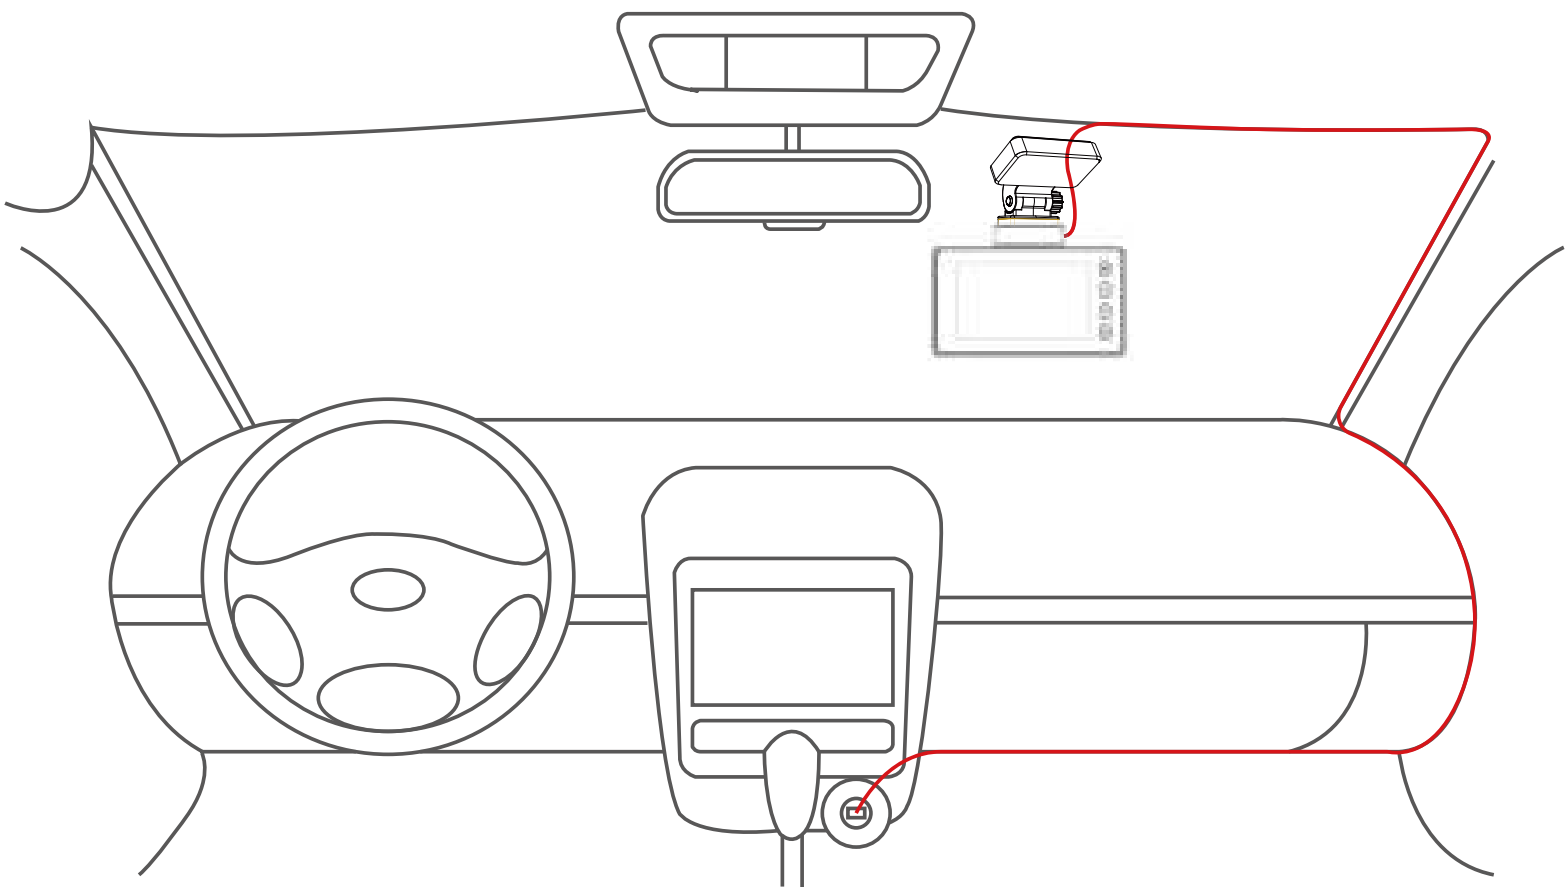


Gloryesをご購入頂きありがとうございました!当製品を正しく使うため、本説明書をご確認頂いた上ご使用ください。



①.LCD画面、②.メニュー、③.アップフリップキー 、④.ページを下へ 、
⑤.電源ボタン 、 ⑥.充電用光源ランプ(接続後は赤)、作業用ランプ/ビデオランプ(録画時に点滅)、 ⑦.メインカメラ、 ⑧.発言者、 ⑨.Micro SD、 ⑩. リセット

リターンマッチ

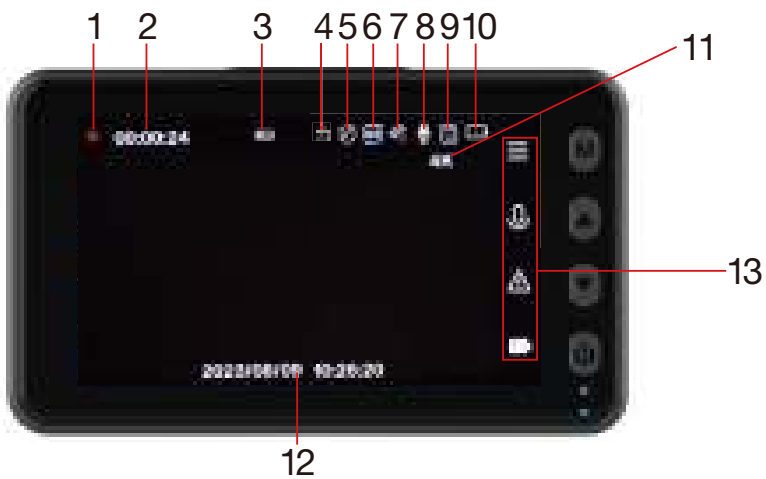

1.レコーディング、 2.記録時間(記録が停止した場合、残りの記録時間を示す)、
3.WDR、 4.緊急ファイルアイコン 、 5. パーキングモニタ 、 6.ループレコード 、
7.G-sensor灵敏度 、8.マイク台 アイコン, MICアイコン、テープ/指示録音オフ 、
9.Micro SD 、 10.外部電源充電/バッテリインジケータ 、 11.に決心させる 、
12. 日付と時刻 、 13.右ボタンに対応する機能指示欄

機能操作の説明

キー設定時に右欄に表示されるキーの対応する機能
ビデオモードまたはプレビューモードで、メニューキーを押して次の画像を入力します



① メニューキー/戻る
② MICオン/オフ機能、上向きまたは左向き、
③ ロック機能、下または右、
④ 確認/ビデオ/オン/オフキー

ドライブレコーダパラメータ設定
設定のために上下キーを移動し、確認キーを押して設定に入ります



① カメラの設定
② システム設定

カメラパラメータは次のように設定されています。

A 600ドライブレコーダの解像度[4 k（デフォルト値）、2 kp 60、2 kp 30、1080 p 60、1080 p 30]パラメータ
解像度[4 K+1080 P（デフォルト）、2 K+2 K、2 K+10801080 P+1080 P 30]A 680ドライブレコーダパラメータ
デュアルチャネル表示設定[PIP（F＋R）（デフォルト）、PIP（R＋F）、フロントレンズ、バックレンズ]

A 680ドライブレコーダーのパラメータ

循環記録【1、2（デフォルト）、3】
画像の回転【閉じる（デフォルト）開く】
録音オーディオ[オン（デフォルト）オフ]
Gsensor[オフ（デフォルト）、ロー、中高]
パーキングモニタ【スイッチ（デフォルト）】
WDR【オープン（デフォルト）オフ】
EV値【2、1.6、1.3、1、0.6、0.3、0（デフォルト）、0.3、0.6、1、1.3、1.6-2】
システム設定



全体的なスケジュール
デフォルト設定
画面保存【閉じる、1分後に保護画面（デフォルト）に、1分後に黒画面に】
自動電源オフ【オフ（デフォルト）、30 S、1 M、2 M】
電源投入時のサウンド[オフ、ソフト（デフォルト）の方が大きい]
ブツブツという音[オフ、ソフト（デフォルト）の方が大きい]
言語【英語（デフォルト）、日本語、フランス語、ドイツ語、スペイン語、イタリア語、ポルトガル語、簡体字中国語】
日付/時刻
周波数【50 Hz, 60 Hz（デフォルト）】
バージョン

再生モード：メニューキーを押して、再生モードに入ります。確認キーを押して次の画面に進みます





1.応急記録　　2.正常記録　　3.写真

適切な列を上下に選択し、確認キーを押して進み、ファイルを上下に選択し、確認キーを押して録画を再生します。

上記モードでは、メニューキーを押して設定を終了し、プレビューモードに入ります。ビデオキーを押して録画を開始する

MicroSDカードに関する情報：

1.緊急ビデオは上書きされないため、ユーザーは半月以内に未使用の緊急ファイルを削除することをお勧めします。

2.メモリカードのメモリ断片化が多すぎる可能性がある

絶えず書くこととリラックスすることで活動しています。これはビデオの録画に影響します。テープレコーダの最適な性能を維持するために、ユーザーは半月でmicroSDカードに完全なFORMATを実行することをお勧めします。

3.Micro SDカードの最低速度レベルは U3 である。

メーカーが欠陥がユーザーやその他の理由によるものだと考えている場合は、保証は無効です。

保証、特別条件、および本製品はビデオおよびオーディオの録画に使用されません。録画されたメディア

追加の参考として使用されるのは、事故などが発生した場合のみです。記録計の現場での使用に関する事項については、一切責任を負いません

センサ	微光夜視
動作電圧	5V
動作通貨	800mA/5V
貯蔵温度	-4°F~158°F
動作温度	-14°F~140°F
動作湿度	15 ~ 70 RH
液晶ディスプレイ	3.0" 640×480 IPS

注：
1.故障が発生した場合、まず車載充電器ランプとドライブレコーダランプが点灯しているか確認してください。点灯していない場合、車載充電器の接触不良です。
2.電源を入れた後、録画が行われてない場合、まずメモリカードが正しく挿入されているか、カードスピードが低すぎてないかをご確認し、フォーマット或いはカード交換を試してください。
3.　異常な録画が発生した場合は、メニューから工場出荷時の設定に戻すように設定してみてください。
4. 起動しないか、起動しても画面が機能しない場合は、リセットボタンを押してください。
5. 作業中に画面が真っ暗になる場合は、任意のキーを押し、スクリーンセーバーモードに入っているかご確認してください。
6.本体に付属の車載充電器をご使用ください。
7.お問合せ連絡先：dayutech2023@163.com
8.A600/A680デュアルドライブレコーダーをご購入いただきありがとうございました。本製品は購入日から1年間保証されます。

バックカム

