RCA

Universal Remote Control Owner's Manual

RCR314WE / RCR313BE

Manual del Propietario (parte posterior)

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada Regulatory Information
CAN ICES-3 (B)/NMB-3 (B)
Avis d'Industrie Canada
CAN ICES-3 (B)/NMB-3 (B)


WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Congratulations on your purchase of this 3-device RCA Universal Remote Control. This remote features a library of codes with the latest devices of all major brands, with support for streaming media players as well. The navigation keys have been redesigned to function seamlessly with the most sophisticated menus and guide systems found in today's home entertainment devices.

Step 1: Install your batteries

Your universal remote requires two AA alkaline batteries (batteries may or may not be included, depending on model).

To install the batteries:



1. Remove the battery compartment cover.
2. Insert the batteries, matching the polarities to the (+) and (–) marks inside the battery compartment.
3. Slide the battery cover back into place.

Battery Precautions:
- *Do not mix old and new batteries.*
- *Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.*
- *Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.*

Battery Saver

Your universal remote control saves battery power by automatically turning off if any key is pressed for more than 60 seconds. This saves your battery life should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

Step 2: Program your remote

To use this universal remote with your home entertainment system, first you need to program it to control your devices. There are four ways you can program the universal remote to operate your devices. Try them in the order listed here:

- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device.
- The **Brand Code Search** searches through the codes for select brands of devices.
- The **Auto Code Search** goes automatically through all the codes for the device you're trying to control.
- The **Manual Code Search** lets you manually go through all the codes for the device you're trying to control.

Direct Code Entry

Direct Code Entry lets you enter a code from the accompanying code list for your brand of device.

TIP: *Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.*

The POWER key serves as an indicator light during programming, giving you feedback at each stage of the process.

To exit without saving a new code at any point in the Brand Code Search, press the GO BACK key.

1. Manually turn on the device you want to control.



2. Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.



3. Press and hold the device key you want to program (the POWER key comes on).

While you're holding down the device key, use your other hand enter the first five-digit code for your brand in the code list (the POWER key goes off after the first digit).



4. When you've finished entering the five-digit code, keep holding down the device key and look at the POWER key.

Is the POWER key on?
YES: You're done! You've programmed this device key.

NO, it blinked four times and turned off: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 3 again.

Brand Code Search

The Brand Code Search goes through only the codes for one of the select brands listed in the accompanying code list. If your brand of device is listed, this search can be very quick and easy.

TIP: *Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.*

The POWER key serves as an indicator light during programming, giving you feedback at each stage of the process.

To exit without saving a new code at any point in the Brand Code Search, press the GO BACK key.

1. Manually turn on the device you want to control.



2. **If you're programming the TV or SAT•CBL•STREAM key,** go to step 3.

If you're programming the DVD•VCR key, you need to tell the remote which kind of device you want this key to control, VCR or DVD.


Press and hold the DVD•VCR key. While you're holding down the DVD•VCR key, use your other hand to press the number key for the type of device you want to control with this key: 2 for VCR, 3 for DVD.



3. Find your device's brand in the Brand Code list section of the accompanying code list. Circle the number for your brand and keep the list handy.



4. Press and hold the device key you want to program. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time.



5. Wait until the POWER key comes on and stays on. Then release both keys.

6. Look at the number you circled for your device's brand code number. Press that number on the remote keypad.



7. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.

Did your device turn off?

YES: Press the STOP key to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your brand.

Keep pressing POWER every 2 seconds until your device turns off. When it does, press STOP.



NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming. For example, only
Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.
During the Brand Code Search, the remote ignores keypresses that aren't part of the search.
The search times out after two minutes (the POWER key blinks four times and turns off), and the last programmed code under that device key is retained).
The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. **Try a variety of the device's functions with the remote. If some device features don't work, go to the next step to try a different code.**
2. Repeat the Brand Code Search from the beginning. When the device turns off for the first time, don't press the STOP key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the STOP key.
4. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Auto Code Search

The Auto Code Search goes automatically through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.

TIPS: *Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.*

To exit without saving a new code at any point in the Auto Code Search, press the GO BACK key.

1. Manually turn on the device you want to control.




2. **If you're programming the TV or SAT•CBL•STREAM key,** go to step 3.

If you're programming the DVD•VCR key, you need to tell the remote which kind of device you want this key to control, VCR or DVD.

Press and hold the DVD•VCR key. While you're holding down the DVD•VCR key, use your other hand to press the number key for the type of device you want to control with this key: 2 for VCR, 3 for DVD.



3. Press and hold the device key you want to program. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time.



4. Wait until the POWER key comes on and stays on. Then release both keys.


5. Point the remote directly at the front panel of the device you want to control. Press PLAY on the remote and wait 5 seconds. The remote is testing a batch of 10 codes on your device.

Did your device turn off?

YES: Go to step 6.

NO: Press PLAY again. The remote tests the next batch of 10 codes.

Keep pressing PLAY every 5 seconds until your device turns off.



6. When your device turns off, press the REVERSE key on the remote and wait at least 2 seconds. The remote tries the last of the previous ten codes.

Did your device turn on?

YES: Press the STOP key. You're done! You've programmed this device key.

NO: Press REVERSE again. The remote tests the next code in the batch.

Keep pressing REVERSE every 2 seconds until your device turns back on. When it does, press STOP.

Note: *If you accidentally press the REVERSE key after your device turns on, press the FORWARD key. Then, wait two seconds to see if your device turns off again.*

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming. For example, only
Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.
During the Brand Code Search, the remote ignores keypresses that aren't part of the search.
The search times out after two minutes (the POWER key blinks four times and turns off), and the last programmed code under that device key is retained).
The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. **Try a variety of the device's functions with the remote. If some device features don't work, go to next step to try a different code.**
2. Repeat the Auto Code Search Method from the beginning. When your device turns off, do not stop searching. Instead, with the unit now off, continue to press the PLAY key every 5 seconds until the unit turns back on.
3. Once the unit turns back on, press the REVERSE key on the remote every 2 seconds until your device turns off again. When your device turns off again, press the STOP key.
4. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Manual Code Search

The Manual Code Search lets you go one-by-one through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.


TIPS: *Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.*

The POWER key serves as an indicator light during programming, giving you feedback at each stage of the process.

The Manual Code Search method may take a long time because the remote searches through all of the codes in its memory one-by-one. If your brand is listed in the Brand Codes or the Code Lists, first try the Brand Code Search or the Direct Code Entry method.

To exit without saving a new code at any point in the Manual Code Search, press the GO BACK key.

1. Manually turn on the device you want to control.




2. **If you're programming the TV or SAT•CBL•STREAM key,** go to step 3.

If you're programming the DVD•VCR key, you need to tell the remote which kind of device you want this key to control, VCR or DVD.

Press and hold the DVD•VCR key. While you're holding down the DVD•VCR key, use your other hand to press the number key for the type of device you want to control with this key: 2 for VCR, 3 for DVD.




3. Press and hold the device key you want to program. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time.



4. Wait until the POWER key comes on and stays on. Then release both keys.

5. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device.



Did your device turn off?

YES: Press the STOP key to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your device.

Keep pressing POWER every 2 seconds until your device turns off. When it does, press STOP.



Tip: *Because there are so many codes, you may have to press the POWER key many times—possibly hundreds of times.*



6. When your device turns off, press the REVERSE key on the remote and wait at least 2 seconds. The remote tries the last of the previous ten codes.

Did your device turn on?

YES: Press the STOP key. You're done! You've programmed this device key.

NO: Press REVERSE again. The remote tests the next code in the batch.

Keep pressing REVERSE every 2 seconds until your device turns back on. When it does, press STOP.

Note: *If you accidentally press the REVERSE key after your device turns on, press the FORWARD key. Then, wait two seconds to see if your device turns off again.*

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming. For example, only
Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.
During the Brand Code Search, the remote ignores keypresses that aren't part of the search.
The search times out after two minutes (the POWER key blinks four times and turns off), and the last programmed code under that device key is retained).
The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. **Try a variety of the device's functions with the remote. If some features don't work, go to the next step to try a different code.**
2. Repeat the Manual Code Search from the beginning. When the device turns off for the first time, don't press the STOP key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the STOP key.
4. Test the key's functionality again by trying a variety of functions. If the code controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are programming.
Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code.
During the Brand Code Search, the remote ignores keypresses that aren't part of the search.
The search times out after two minutes (the POWER key blinks four times and turns off), and the last programmed code under that device key is retained).
The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Manual Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. **Try a variety of the device's functions with the remote. If some features of your devices don't work, go to the next step to try a different code.**
2. Repeat the Manual Code Search from the beginning. When the device turns off for the first time, don't press the STOP key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the STOP key.
4. Test the key's functionality again by trying a variety of functions. If the code controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Tour of the Remote

In most cases, the keys on this remote perform the same functions as the keys on your original remotes once you've programmed this remote to operate your components. Many keys on this remote have other functions as well.


Illuminated **POWER** key serves as an indicator light to provide feedback.

Device keys (**TV**, **SAT•CBL•STREAM**, **DVD•VCR**) put the remote in the right mode to control your device.

LIGHT key (🔦) turns backlighting on/off.

GUIDE/HOME and **MENU** access the same features as the keys on your original remotes.

Arrow keys act as navigation keys for streaming media players as well as in menu and guide systems for other devices.

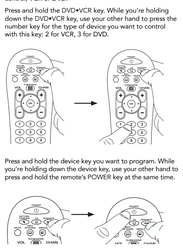

Actual model may vary from illustration

CHAN and **VOL** keys act as channel and volume controllers. The CHAN keys also provide Page Up and Page Down control for DVD players and DVRs that support this functionality.

GO BACK exits remote programming; it also performs the same functions as on your original remotes.

The **INPUT** and **— (dash)** key have three functions: (1) it toggles through all the video sources connected to your TV; (2) when the remote is in VCR mode, this button toggles between VCR and the TV input; (3) when you're entering digital channel numbers directly, this button key separates the main channel number from the sub-channel number (such as 59.1).

IMPORTANT!
Some cable boxes and satellite receivers require you to press a key before you can change channels. Before you can change channels with the remote, you may need to press the CBL or SAT key. Refer to the owner's manual for your cable box or satellite receiver for more information.

Backlighting

Backlight illumination helps you see the remote control keys better in the dark. You can turn backlight illumination on by pressing the LIGHT key (🔦). Backlighting stays on as long as keys are being pressed and turns off five seconds after the last keypress.

Advanced Functions

Code Retrieval

Once you've programmed the remote to control your devices, you may want to record the codes for future reference. If you used the Direct Code Entry method, this is easy. Just find the codes you entered and make a note of them in the boxes below. If you used one of the Code Search methods to program your remote or if you used the Direct Entry method but don't remember the code, you will need to retrieve each device's five-digit code. Retrieving the actual code and writing it down will save you time if you ever need to program the remote again (e.g., if programming is lost when you change the batteries). If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your devices, which is quick and easy.



1. Press and hold the device key (TV, SAT•CBL•STREAM, DVD•VCR) whose code you wish to retrieve. The POWER key turns on. Keep pressing the device key.
2. While holding the device key down, press and hold the INFO•OPTIONS key. The POWER key turns off. After holding down both keys for three seconds, the POWER key turns back on.
3. Release both keys. The POWER key remains on.
4. Starting with the number 1 key, press and release each number key on the keypad in the following order: 1-9, then 0. The number that causes the POWER key to blink is the first number of the code. As you find each number of the code, write it down for future reference.



Note: *All TV codes begin with the number 1; all VCR and DVR codes begin with the number 2; all DVDs, the number 3; and all satellite receivers, cable boxes, streaming players, and DTV converters, the number 5.*

5. Repeat step 4 until you have retrieved all five numbers in the code. After the fifth number is retrieved, the POWER key blinks briefly, then turns off.

TIP: *To exit the Code Retrieval Mode at any time, press the GO BACK key.*

Note: *If you press an invalid key during the Code Retrieval process, the remote will not respond. If you do not press a valid Code Retrieval key (TV, SAT•CBL•STREAM, DVD•VCR, INFO•OPTIONS, GO BACK), Code Retrieval times out after 15 seconds. The POWER key blinks four times, and then turns off.*



TV CODE	SAT-CBL-STREAM CODE
1	5

DVD-VCR CODE
2 = VCR 3 = DVD

Troubleshooting

Problem: The remote does not operate your device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Remove any obstacles between the remote and the device. Make sure you're aiming the remote at the device's IR sensor.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AA batteries, if necessary (see the Battery Installation section).

Problem: The remote can't be programmed to operate your device.

- If you are testing the remote while programming it, you may be too far away from the device or at a wrong angle. There must be an unobstructed path between the remote and the IR sensor on the device. Move closer and make sure you point the remote at the device you're trying to control.
- If you're using the Direct Entry programming method to enter the codes for your brand and the unit is still not functioning properly, try the auto, brand, or manual search method.
- To control combo units, like TV/VCRs or TV/DVDs, you must program the individual corresponding device keys to control each part of the combo unit. Once programmed successfully, the TV key controls the TV functions, and the DVD•VCR key controls the VCR and DVD functions.
- Make sure the batteries are fresh and are properly installed.

Problem: The remote doesn't perform commands properly.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Make sure device is ready (for example, the DVD player has a disc loaded).
- You may have pressed an invalid key for the mode the remote is in.
- If you're trying to enter a channel number directly, try pressing the OK key after entering the channel number as this is a requirement of certain models and brands.
- There is a possibility that a programmed code may only be able to control some of your device functions (for example, only turns a device on and off). To confirm that the device key is programmed with the correct code for maximum functionality, test the device. Attempt to control a variety of the device's functions with the remote. If some of the features of your devices don't work, try programming the remote with a different code in the list using the Direct Code Entry Method, until you find the code that allows the remote to control the majority of your device's functions. Different codes can provide different levels of functionality.

Problem: The POWER key does not light when you press a key.

- You may have pressed an invalid key for the mode the remote is in.
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AA batteries, if necessary (see the Battery Installation section).

Problem: The remote will not change channels on device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Press the OK key after you enter a channel number.
- Remove any obstacles between the remote and the device. Make sure you're aiming the remote at the device's IR sensor.

Problem: The device's menu does not appear on the TV screen.

- Make sure you have connected the device to your TV properly and selected the correct input. (See your devices' Owner's Manuals for proper connection procedures.)
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Menu access isn't supported for all brands. You may need to use your original remote control to access menu functions for some devices.

For more information, including instructional videos, remote programming codes, and customer support, visit www.RCACodeSupport.com

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal devices can cause malfunction and invalidate its warranty.

Limited Lifetime Warranty

Voxx Accessories Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime, such defect will be repaired or replaced at the sole discretion of the Company's option) without charge for parts and repair labor.
To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.
This Warranty does not cover product purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g., alkaline and rechargeable).
THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.
This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.
Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from state/province to state/province.

©2018 Voxx Accessories Corp.
3502 Woodview Trace, Suite 220
Indianapolis, IN 46268
Trademark(s) ® Registered

Manual del Propietario del Control Remoto Universal RCR314WE / RCR313BE

Owner's Manual (English on back)

Información FCC:
Este aparato obedece las especificaciones de la Parte 15 de las regulaciones FCC. Las funciones están sujetas a las siguientes condiciones: 1) Este aparato no puede causar interferencia dañina y 2) este aparato debe aceptar recibir cualquiera interferencia, incluyendo aquella que puedan causar funciones no deseadas.
Nota: Se probó este equipo y podemos afirmar que cumple con las restricciones establecidas para un dispositivo digital Clase B, de acuerdo con la Parte 15 de las Reglas de la FCC. Estos límites están diseñados para ofrecer una protección razonable frente a la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se instala y se usa de acuerdo con las instrucciones, puede ocasionar interferencias perjudiciales para las comunicaciones de radio. Sin embargo, no existe ninguna garantía de que no se vaya a producir una interferencia en una instalación particular. Si este equipo produce una interferencia perjudicial con la recepción de la radio o televisión, que se puede determinar encendiendo y apagando el equipo, se le pide al usuario que intente corregir la interferencia siguiendo una o varias de las siguientes medidas.
- Vuelva a orientar o cambie de lugar la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte este equipo a un tomacorriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o un técnico experimentado de radio y televisión para solicitar asistencia.

Precaución: Cualquier cambio o modificación no expresamente aprobados por la parte responsable por el cumplimiento podría invalidar la autoridad del usuario para operar este equipo.

Información Reglatoria de la Industria Canadiense
CAN ICES-3 (B)/NMB-3 (B)

Para preguntas, comentarios o sugerencias, llame a nuestro Centro de Atención al Cliente al 1-800-645-4994 o visite nuestro sitio web en www.RCACodeSupport.com

Felicidades por la compra de este Control Remoto Universal RCA para 3 dispositivos. Este control remoto cuenta con una colección de códigos de los dispositivos más recientes de todas las marcas líderes, incluyendo dispositivos de nuevas tecnologías de transmisión de medios (streaming media). Las teclas de navegación han sido rediseñadas para funcionar a la perfección con las más sofisticadas sistemas de guía y menú que se encuentran en los dispositivos de entretenimiento en casa en la actualidad.

Paso 1: Instale las baterías

El control remoto necesita dos baterías alcalinas AA (las baterías pueden estar incluidas o no, dependiendo de modelo).

Para instalar las baterías:



1. Retire la tapa del compartimiento de las baterías.
2. Inserte las baterías, cerciorándose de que las polaridades (+) y (-) correspondan con el diagrama que aparece en el compartimiento de las baterías.
3. Vuelva a colocar la tapa del compartimiento de las baterías en su posición.

Precauciones sobre las Baterías:
- *No mezcle diferentes tipos de baterías: alcalinas, estándar (carbón-zinc) o recargables (níquel-cadmio).*
- *Siempre remueva de inmediato baterías vacías, débiles o desgastadas, y recíclelas o deséchelas según lo disponen las normas locales y nacionales.*

Ahorro de Batería

Su control remoto universal ahorra la potencia de las baterías al apagar automáticamente cualquier tecla que se oprima por más de 60 segundos. Esta acción prolonga la vida útil de las baterías en caso de que el control remoto quede pillado en un lugar donde las teclas permanezcan oprimidas, tal como entre los cojines de un sofá.

Paso 2: Programe el control remoto

Para utilizar este control remoto universal con su sistema de entretenimiento en el hogar, necesitará primero programarlo para manejar sus dispositivos. Para programar el control remoto universal para manejar sus dispositivos. Pruébelos en el orden listado aquí:

- La **Entrada de Código Directo (Direct Code Entry)** le permite ingresar un código de la lista de códigos que acompañan a su marca de dispositivo.
- La **Búsqueda de Código de Marca (Brand Code Search)** busca a través de los códigos para marca seleccionadas de dispositivos.
- La **Búsqueda de Código Automático (Auto Code Search)** para automáticamente a través de todos los códigos para el dispositivo que usted está tratando de controlar.
- La **Búsqueda de Código Manual (Manual Code Search)** para manualmente a través de todos los códigos para el dispositivo que usted está tratando de controlar.

Entrada Directa de Códigos

La Entrada Directa de Códigos le permite ingresar un código de la lista de códigos suministrada para la marca de su dispositivo.

CONSEJO: *Cada tecla de dispositivo está asociada con un tipo de dispositivo — la de TV está preestablecida para buscar TVs, SAT+CBL+STREAM para receptores satelitales, convertidores de cable, o TV digital o reproductores de transmisión de medios, y DVD+VCR para Videograbadoras o reproductores DVD.*
La tecla POWER sirve de luz indicadora durante la programación, ofreciéndole retroalimentación en cada etapa del proceso.
Para salir en cualquier momento de la Búsqueda de Códigos por Marca sin guardar un código nuevo, oprima la tecla GO BACK.

1. Encienda manualmente el dispositivo que desea manejar.
2. Encuentre la Lista de Códigos suministrada con el control remoto. Encuentre la sección para el tipo de dispositivo que desea programar, y localice la marca en esa sección. Marque con un círculo los códigos para la marca y mantengalos a mano.
3. Oprima y sostenga la tecla de dispositivo que desea programar [la tecla POWER se iluminará].
   Mientras oprime la tecla de dispositivo, ingrese con la otra mano el primer código de cinco dígitos para la marca de la lista de códigos [la tecla POWER se apaga luego del primer dígito].

4. Cuando haya ingresado el código de cinco dígitos, continúe oprimiendo la tecla de dispositivo y observe la tecla POWER.

¿Se iluminó la tecla POWER?
Sí: [Listo! La tecla de dispositivo está programada.
No, parpadeó cuatro veces y se apagó: Ha ingresado un número de código que no se encuentra en la listas de códigos o omitió un paso en el procedimiento de entrada de códigos. Intente el paso 3 nuevamente.

4. Oprima y sostenga la tecla de dispositivo que desea programar. A la vez que sostiene la tecla de dispositivo, utilice la otra mano para oprimir y sostener simultáneamente la tecla POWER del control remoto.

5. Espere hasta que la tecla POWER se ilumine y permanezca iluminada. Luego, suelte ambas teclas.

6. Fíjese en el número que marcó para el número de código de la marca del dispositivo. Oprima dicho número en el teclado del control remoto.

7. Mantenga el control remoto apuntado directamente al panel frontal del dispositivo que desea manejar. Oprima la tecla POWER y espere 2 segundos. El control remoto está probando un código para la marca del dispositivo.

¿Se apagó el dispositivo?
Sí: Oprima la tecla STOP para guardar el código. ¡Listo! La tecla de dispositivo está programada.
NO: Oprima POWER nuevamente. El control remoto prueba el próximo código para su marca.
Continúe oprimiendo POWER cada 2 segundos hasta que el dispositivo se apague. Cuando se apague, oprima STOP.

Búsqueda de Códigos por Marca

La Búsqueda de Códigos por Marca recorre sólo los códigos de una de las marcas seleccionadas que aparecen en la lista de códigos suministrada. Si la marca del dispositivo aparece en la lista, posiblemente la búsqueda se llevará a cabo de manera fácil y rápida.

CONSEJOS: *Cada tecla de dispositivo está asociada con un tipo de dispositivo — la de TV está preestablecida para buscar TVs, SAT+CBL+STREAM para receptores satelitales, convertidores de cable, o TV digital o reproductores de transmisión de medios, y DVD+VCR para Videograbadoras o reproductores DVD.*
La tecla POWER sirve de luz indicadora durante la programación, ofreciéndole retroalimentación en cada etapa del proceso.
Para salir en cualquier momento de la Búsqueda de Códigos por Marca sin guardar un código nuevo, oprima la tecla GO BACK.

1. Encienda manualmente el dispositivo que desea manejar.
2. **Si está programando la tecla TV o SAT+CBL+STREAM,** vaya al paso 3.
   Si está programando la tecla DVD+VCR, necesitará indicarle al control remoto el tipo de dispositivo que desea que esta tecla maneje, VCR o Lector de DVD.
   Oprima y sostenga la tecla DVD+VCR. Mientras sostiene la tecla DVD+VCR, utilice la otra mano para oprimir la tecla numérica para el tipo de dispositivo que desea manejar con esta tecla: 2 para VCR, 3 para Lector de DVD.

3. Encuentre la marca del dispositivo en la sección de Códigos por Marca de la lista de códigos suministrada. Marque con un círculo el número de la marca y mantenga la lista a mano.

4. Oprima y sostenga la tecla de dispositivo que desea programar. A la vez que sostiene la tecla de dispositivo, utilice la otra mano para oprimir y sostener simultáneamente la tecla POWER del control remoto.

5. Espere hasta que la tecla POWER se ilumine y permanezca iluminada. Luego, suelte ambas teclas.

6. Fíjese en el número que marcó para el número de código de la marca del dispositivo. Oprima dicho número en el teclado del control remoto.

7. Mantenga el control remoto apuntado directamente al panel frontal del dispositivo que desea manejar. Oprima la tecla POWER y espere 2 segundos. El control remoto está probando un código para la marca del dispositivo.

¿Se apagó el dispositivo?
Sí: Oprima la tecla STOP para guardar el código. ¡Listo! La tecla de dispositivo está programada.
NO: Oprima POWER nuevamente. El control remoto prueba el próximo código para su marca.
Continúe oprimiendo POWER cada 2 segundos hasta que el dispositivo se apague. Cuando se apague, oprima STOP.

Cómo Probar el Código para Obtener Máxima Funcionalidad
1. **Pruebe una variedad de funciones del dispositivo con el control remoto. Si no puede utilizar algunas de las funciones de su dispositivo, vaya al próximo paso e intente un código diferente.**
2. Repita la Búsqueda de Códigos para Marca desde el comienzo. Cuando el dispositivo se apague por primera vez, no oprima la tecla STOP; con la cual quedaría guardado el mismo código. En vez, con la unidad apagada, continúe oprimiendo la tecla POWER repetidamente hasta que la unidad se vuelva a encender.
3. Si se vuelve a encender la unidad, habrá encontrado otro código que puede manejar ese dispositivo. Oprima STOP.
4. Pruebe la funcionalidad de la tecla intentando ejecutar una variedad de funciones. Si el código controla la mayoría de las funciones del dispositivo, entonces habrá concluido la programación. Si el código guardado no brinda una máxima funcionalidad, intente otro código.

Búsqueda Automática de Códigos

La Búsqueda Automática de Códigos recorre automáticamente todos los códigos del dispositivo que desea manejar. Cuando encuentre el que maneja su dispositivo, puede detener la búsqueda y guardar el código.

CONSEJO: *Cada tecla de dispositivo está asociada con un tipo de dispositivo — la de TV está preestablecida para buscar TVs, SAT+CBL+STREAM para receptores satelitales, convertidores de cable, o TV digital o reproductores de transmisión de medios, y DVD+VCR para Videograbadoras o reproductores DVD.*
Para salir en cualquier momento de la Búsqueda Automática de Códigos sin guardar un código nuevo, oprima la tecla GO BACK.

1. Encienda manualmente el dispositivo que desea manejar.
2. **Si está programando la tecla TV o SAT+CBL+STREAM,** vaya al paso 3.
   Si está programando la tecla DVD+VCR, necesitará indicarle al control remoto el tipo de dispositivo que desea que esta tecla maneje, VCR o Lector de DVD.
   Oprima y sostenga la tecla DVD+VCR. Mientras sostiene la tecla DVD+VCR, utilice la otra mano para oprimir la tecla numérica para el tipo de dispositivo que desea manejar con esta tecla: 2 para VCR, 3 para Lector de DVD.

3. Oprima y sostenga la tecla de dispositivo que desea programar. A la vez que sostiene la tecla de dispositivo, utilice la otra mano para oprimir y sostener simultáneamente la tecla POWER del control remoto.

4. Espere hasta que la tecla POWER se ilumine y permanezca iluminada. Luego, suelte ambas teclas.

5. Mantenga el control remoto apuntado directamente al panel frontal del dispositivo que desea manejar. Oprima la tecla POWER y espere 2 segundos.

¿Se apagó el dispositivo?
Sí: Vaya al Paso 6.
NO: Oprima PLAY nuevamente. El control remoto prueba el próximo grupo de 10 códigos.
Continúe oprimiendo PLAY cada 5 segundos hasta que el dispositivo se apague.

6. Cuando el dispositivo se apague, oprima la tecla REVERSE del control remoto y espere por lo menos 5 segundos. El control remoto prueba el último código del grupo anterior de 10 códigos.

¿Se encendió el dispositivo?
Sí: Oprima la tecla STOP. ¡Listo! La tecla de dispositivo está programada.
NO: Oprima REVERSE nuevamente. El control remoto prueba el próximo código en el grupo de códigos.
Continúe oprimiendo REVERSE cada 2 segundos hasta que el dispositivo se encienda. Cuando se encienda, oprima STOP.

Avisos: *Si oprime accidentalmente la tecla REVERSE luego de que el dispositivo se encienda, oprima la tecla FORWARD. Luego, espere dos segundos para ver si su dispositivo se vuelve a apagar.*

Cómo Probar el Código para Obtener Máxima Funcionalidad
1. **Pruebe una variedad de funciones del dispositivo con el control remoto. Si no puede utilizar algunas de las funciones del dispositivo, vaya al próximo paso e intente un código diferente.**
2. Repita el Método de Búsqueda Manual de Códigos desde el comienzo. Cuando haya encontrado el código que vuelva a encender el dispositivo, no oprima la tecla STOP; con la cual quedaría guardado el mismo código. En vez, con la unidad apagada, continúe oprimiendo la tecla POWER repetidamente hasta que la unidad se vuelva a encender.
3. Si se vuelve a encender la unidad, habrá encontrado otro código que puede manejar ese dispositivo. Oprima la tecla STOP.
4. Nuevamente, pruebe la funcionalidad de la tecla intentando controlar una variedad de funciones del dispositivo. Si el código que se ha almacenado controla la mayoría de las funciones del dispositivo, entonces habrá concluido la programación. Si el código guardado no brinda una máxima funcionalidad, intente otro código.

Búsqueda Manual de Códigos

La Búsqueda Manual de Códigos recorre uno por uno todos los códigos del dispositivo que desea manejar. Cuando encuentre el que maneja su dispositivo, puede detener la búsqueda y guardar el código.

CONSEJOS: *Cada tecla de dispositivo está asociada con un tipo de dispositivo — la de TV está preestablecida para buscar TVs, SAT+CBL+STREAM para receptores satelitales, convertidores de cable, o TV digital o reproductores de transmisión de medios, y DVD+VCR para Videograbadoras o reproductores DVD.*
El método de Búsqueda Manual de Códigos podría tomar más tiempo porque el control remoto busca a través de todos los códigos en su memoria para uno. Si su marca aparece en las Listas de Códigos por Marca o Listas de Códigos, intente primero la Búsqueda de Códigos por Marca o el método de Entrada Directa de Códigos.
Para salir en cualquier momento de la Búsqueda Manual de Códigos sin guardar un código nuevo, oprima la tecla GO BACK.

1. Encienda manualmente el dispositivo que desea manejar.
2. **Si está programando la tecla TV o SAT+CBL+STREAM,** vaya al paso 3.
   Si está programando la tecla DVD+VCR, necesitará indicarle al control remoto el tipo de dispositivo que desea que esta tecla maneje, VCR o Lector de DVD.
   Oprima y sostenga la tecla DVD+VCR. Mientras sostiene la tecla DVD+VCR, utilice la otra mano para oprimir la tecla numérica para el tipo de dispositivo que desea manejar con esta tecla: 2 para VCR, 3 para Lector de DVD.

3. Oprima y sostenga la tecla de dispositivo que desea programar. A la vez que sostiene la tecla de dispositivo, utilice la otra mano para oprimir y sostener simultáneamente la tecla POWER del control remoto.

4. Espere hasta que la tecla POWER se ilumine y permanezca iluminada. Luego, suelte ambas teclas.

5. Mantenga el control remoto apuntado directamente al panel frontal del dispositivo que desea manejar. Oprima la tecla POWER del control remoto y espere 2 segundos.

¿Se apagó el dispositivo?
Sí: Oprima la tecla STOP para guardar el código. ¡Listo! La tecla de dispositivo está programada.
NO: Oprima POWER nuevamente. El control remoto prueba el próximo código para su dispositivo.
Mantenga presionado POWER cada 2 segundos hasta que el dispositivo se apague. Cuando lo haga, presiones STOP.

CONSEJO: *Debido a la gran cantidad de códigos, quizás necesite oprimir la tecla POWER varias veces-posiblemente cientos de veces.*

Cómo Probar el Código para Obtener Máxima Funcionalidad
1. **Pruebe una variedad de funciones del dispositivo con el control remoto. Si no puede utilizar algunas de las funciones del dispositivo, vaya al próximo paso e intente un código diferente.**
2. Repita el Método de Búsqueda Manual de Códigos desde el comienzo. Cuando haya encontrado el código que vuelva a encender el dispositivo, no oprima la tecla STOP; con la cual quedaría guardado el mismo código. En vez, con la unidad apagada, continúe oprimiendo la tecla POWER repetidamente hasta que la unidad se vuelva a encender.
3. Si se vuelve a encender la unidad, habrá encontrado otro código que puede manejar ese dispositivo. Oprima la tecla STOP.
4. Nuevamente, pruebe la funcionalidad de la tecla intentando controlar una variedad de funciones del dispositivo. Si el código que se ha almacenado controla la mayoría de las funciones del dispositivo, entonces habrá concluido la programación. Si el código guardado no brinda una máxima funcionalidad, intente otro código.

Recorrido del control remoto

En la mayoría de los casos, las teclas del control remoto desempeñan las mismas funciones que las teclas de los controles remotos originales una vez programado el control remoto para manejar los componentes. La mayoría de las teclas de este control remoto tienen otras funciones.

La tecla **POWER** iluminada sirve de luz indicadora para ofrecer retroalimentación.

Las teclas de dispositivo **TV**, **SAT+CBL+STREAM**, **DVD+VCR**: prenen el control remoto en el modo correcto para manejar el dispositivo.

La tecla de luz de fondo ☼ enciende y apaga la luz de fondo.

GUIDE/HOME y **MENU** dan acceso a las mismas características que las teclas en sus controles remotos originales.

Las teclas de flecha actúan como teclas de navegación para reproductores de transmisión de medios así como en sistemas de guías y menú para otros dispositivos.

El modelo actual puede ser diferente al ilustrado

Las teclas **CHAN** y **VOL** actúan como controles de canal y volumen. Las teclas CHAN también proporcionan control del salto hacia adelante y salto hacia atrás para reproductores DVD y DVRs que soporten esta funcionalidad.

GO BACK sale de la programación del control remoto; además, desempeña las mismas funciones que en los controles remotos originales.

La tecla **INPUT y — (guión)** tiene tres funciones: (1) alterna entre todas las fuentes de video conectadas al televisor; (2) cuando el control remoto se encuentra en el modo VCR, este botón alterna entre la entrada VCR y TV; (3) cuando ingresa directamente un código, Luego de ingresar el primer dígito del número del canal principal del número del canal secundario (tal como 59.1).

Luz de fondo

La iluminación de fondo le ayuda a ver mejor las teclas del control remoto en la oscuridad. Para encender la iluminación de fondo oprimiendo la tecla de luz de fondo (☼). La luz de fondo permanece encendida durante 15 segundos luego de cualquier pulsación de teclas y se apaga cinco segundos luego de la última operación de una tecla.

Funciones Avanzadas

Recuperación de Códigos

Una vez haya programado el control remoto para manejar sus dispositivos, es aconsejable anotar los códigos para futura referencia. Si utilizó el método de Entrada Directa de Códigos, es muy sencillo. Simplemente encuentre los códigos que ingresó y anótelos en los recuadros a continuación. Si utilizó uno de los métodos de Búsqueda de Códigos para programar el control remoto o si utilizó el método de Entrada Directa pero no recuerda el código, necesitará recuperar el código de cinco dígitos de cada uno de los dispositivos. Recuperar y anotar el código hoy le ahorrará tiempo si alguna vez necesita volver a programar el control remoto (por ejemplo, si se agrega un componente nuevo o cambia las baterías). Si anota los códigos, puede utilizar el método de Entrada Directa para volver a programar el control remoto a fin de manejar otros dispositivos, un proceso rápido y sencillo.

1. Oprima y sostenga la tecla de dispositivo (TV, SAT+CBL+STREAM, DVD+VCR) cuyo código desea recuperar. La tecla POWER se encenderá. Continúe oprimiendo la tecla de dispositivo.

2. Mientras sostiene la tecla de dispositivo, oprima y sostenga la tecla INFO-OPTIONS. La tecla POWER se apagará. Luego de soltar ambas teclas durante tres segundos, la tecla POWER se encenderá nuevamente.
3. Suelte ambas teclas. La tecla POWER permanece encendida.
4. Comenzando con la tecla numérica 1, oprima y suelte cada tecla numérica en el teclado en el siguiente orden: 1-9, luego 0. El número que hace que la tecla POWER parpadee es el primer número del código. Anote este número en la columna del código, anótelos para referencia futura.

Avisos: *Todos los códigos de TV comienzan con el número 1; todos los códigos de VCR y DVR comienzan con el número 2; todos los códigos de lectores de DVD, con el número 3; y todos los códigos de receptores de satélite, aparatos de cable, reproductores de streaming y convertidores de DTV con el número 5.*

5. Repita el paso 4 hasta haber recuperado los cinco números del código. Luego de recuperar el quinto número, la tecla POWER parpadea brevemente, y luego se apaga.

CONSEJO: *Para salir del Modo de Recuperación de Códigos en cualquier momento, oprima la tecla GO BACK.*

Avisos: *Si oprime una tecla inválida durante el proceso de Recuperación de Códigos, el control remoto no responderá. Si no oprime una tecla válida dentro de los 15 segundos, la tecla POWER parpadea cuatro veces y luego se apaga.*

CÓDIGO DE TV	CÓDIGO SAT-CBL-STREAM
1	5

1 = TV, 2 = VCR, 3 = Lector de DVD, 5 = SAT+CBL+STREAM

CÓDIGO DVD-VCR
2 = VCR, 3 = LECTOR DE DVD

Resolución de Problemas

Problema: El control remoto no maneja su dispositivo.
Asegúrese que el control remoto esté en el modo correcto oprimiendo la tecla de dispositivo correspondiente (TV, SAT+CBL+STREAM, DVD+VCR). Entre la indica el control remoto el dispositivo que debe manejar.
- Retire los obstáculos ubicados entre el control remoto y el dispositivo. Asegúrese de apuntar el control remoto directamente al sensor infrarrojo del dispositivo.
- Asegúrese que las baterías estén cargadas y debidamente instaladas. Reemplace las baterías con dos baterías AA nuevas, de ser necesario (consulte la sección Instalación de las Baterías).

Problema: El control remoto no puede programarse para manejar su dispositivo.
- Si está probando el control remoto mientras lo está programando, podría estar intentando alejado del dispositivo o en un ángulo incorrecto. Deberá haber una trayectoria sin obstáculos entre el control remoto y el sensor infrarrojo del dispositivo. Acérquese más y asegúrese de apuntar directamente al dispositivo que está intentando manejar.
- Si está utilizando el método de programación de Entrada Directa para ingresar los códigos para su marca y la unidad aún no funciona debidamente, intente el método de búsqueda automática, por marca o manual.
- Para manejar unidades de combinación tales como TV/VCR o TV/DVD, deberá programar las teclas de dispositivo correspondientes individuales para manejar cada parte de la unidad de combinación. Una vez programadas de manera exitosa, la tecla TV maneja las funciones del televisor, y la tecla DVD+VCR maneja las funciones del Lector de DVD y VCR.
- Asegúrese que las baterías estén cargadas y debidamente instaladas.

Problema: El control remoto no ejecuta los comandos debidamente.
- Asegúrese que el control remoto se encuentre en el modo correcto oprimiendo la tecla de dispositivo correspondiente (TV, SAT+CBL+STREAM, DVD+VCR). Esto le indica al control remoto el dispositivo que debe manejar.
- Asegúrese que el dispositivo se encuentre listo (por ejemplo, el Lector de DVD tenga un disco cargado).
- Puede haber oprimido una tecla inválida para el modo en que se encuentra el control remoto.
- Si está tratando de ingresar directamente un número de canal, intente oprimir la tecla 1 luego de ingresar el número del canal ya que algunas marcas y modelos requieren esta acción.
- Existe la posibilidad de que un código programado pueda manejar únicamente algunas de las funciones del dispositivo (por ejemplo, sólo encender y apagar un aparato). Para confirmar que la tecla de dispositivo ha sido programada con el código correcto para obtener máxima funcionalidad, pruebe el dispositivo. Intente manejar una variedad de funciones del dispositivo con el control remoto. Si todas o la mayoría de las funciones del dispositivo no trabajan, intente programar el control remoto con un código diferente en la lista a través del Método de Entrada Directa de Códigos hasta que encuentre el código que le permita al control remoto manejar la mayoría de las funciones del dispositivo. Diferentes códigos pueden proporcionar diferentes niveles de funcionalidad.

Problema: La tecla POWER no se ilumina cuando oprime una tecla.
- Puede haber oprimido una tecla inválida para el modo en que se encuentra el control remoto.
- Asegúrese que el control remoto se encuentre en el modo correcto oprimiendo la tecla de dispositivo correspondiente (TV, SAT+CBL+STREAM, DVD+VCR). Esto le indica al control remoto el dispositivo que debe manejar.
- Asegúrese que las baterías estén cargadas y debidamente instaladas. Reemplace las baterías con dos baterías AA nuevas, de ser necesario (consulte la sección Instalación de las Baterías).

Problema: El control remoto no cambia canales en el dispositivo.
- Asegúrese que el control remoto se encuentre en el modo correcto oprimiendo la tecla de dispositivo correspondiente (TV, SAT+CBL+STREAM, DVD+VCR). Esto le indica al control remoto el dispositivo que debe manejar.
- Oprima la tecla ENTER luego de haber ingresado un número de canal.
- Retire los obstáculos ubicados entre el control remoto y el dispositivo. Asegúrese de apuntar el control remoto directamente al sensor del dispositivo.

Problema: El menú del dispositivo no aparece en la pantalla del televisor.
- Asegúrese de haber conectado debidamente el dispositivo al televisor y haber seleccionado la entrada correcta. (Consulte el Manual del Propietario de los dispositivos para informarse sobre los procedimientos de conexión correctos.)
- Asegúrese que el control remoto se encuentre en el modo correcto oprimiendo la tecla de dispositivo correspondiente (TV, SAT+CBL+STREAM, DVD+VCR). Esto le indica al control remoto el dispositivo que debe manejar.
- El acceso a los menús no es respaldado por todas las marcas. Posiblemente sea necesario utilizar el control remoto original para lograr acceso a las funciones de menú de algunos dispositivos.

Para obtener más información, incluido videos instructivos, códigos de programación para control remoto y asistencia al cliente, visite www.RCACodeSupport.com

Cuidado y Mantenimiento

- Mantenga el control remoto seco. Si se moja, séquelo inmediatamente.
- Utilice y almacene el control remoto únicamente en entornos de temperatura normales.
- Maneje el control remoto de forma cuidadosa. No lo deje caer.
- Mantenga el control remoto resguardado del polvo y la suciedad.
- Limpie el control remoto con un paño húmedo de vez en cuando para mantenerlo en buenas condiciones de operación.
- Modificar o sobrecalentar los dispositivos internos del control remoto podría ocasionar desperfectos y anular la garantía.

Garantía Limitada Durante la Vida Útil del Producto

Voxx Accessories Corporation (la "Compañía") le garantiza a usted, el comprador original de este producto que si, bajo condiciones y usos normales, se encontrara que presenta defectos materiales o de mano de obra durante su vida útil mientras sea de su propiedad, tales defectos serán reparados o reemplazados (a opción de la Compañía) sin cargo alguno por piezas o mano de obra.
Para obtener el servicio de reparación o reemplazo dentro de los términos de esta garantía, el producto se entregará con prueba de cubierta de garantía (por ejemplo, factura de venta), especificando los tres defectos, transporte prepagado, a una estación de garantía aprobada. Para aclarar la amplitud de garantía bajo cercana a su domicilio, llame sin costo a nuestra oficina de control: al 1-800-645-4994.
Esta garantía no cubre un producto adquirido, mantenido o utilizado fuera de los Estados Unidos o Canadá.
Esta Garantía no se transferible y no incluye los costos incurridos en la instalación, remoción o reinstalación de este producto. Esta Garantía no aplica si, en opinión de la Compañía, este producto ha sufrido daños debido a alteraciones, instalación inadecuada, abuso, uso indebido, negligencia, accidente o el uso simultaneo de baterías de tipos diferentes (p.ej., alcalinas, estándar o recargables).
EL ALCANCE DE LA RESPONSABILIDAD DE LA COMPAÑÍA BAJO ESTA GARANTÍA ESTÁ LIMITADO A LA REPARACIÓN O EL REEMPLAZO PROVISTA ARRIBA Y EN NINGÚN CASO, DEBERÁ LA RESPONSABILIDAD DE LA COMPAÑÍA EXCEDER EL PRECIO DE COMPRA PAGADO POR EL COMPRADOR DE ESTE PRODUCTO.
Esta Garantía reemplaza cualesquiera otras responsabilidades o garantías expresas. CUALESQUIERA GARANTÍAS IMPLÍCITAS, INCLUYENDO CUALQUIER GARANTÍA IMPLÍCITA DE COMERCIABILIDAD O ADAPTABILIDAD PARA UN PROPÓSITO EN PARTICULAR ESTARÁN LIMITADAS A LA DURACIÓN DE ESTA GARANTÍA. EN NINGÚN CASO LA COMPAÑÍA SERÁ RESPONSABLE POR DAÑOS EMERGENTES O INCIDENTALES. Ninguna persona ni representante está autorizado a asumir, a nombre de la Compañía, ninguna responsabilidad salvo la expresada aquí en conexión con la venta de este producto.
Algunos estados/provincias no permiten limitaciones sobre la duración de una garantía implícita o la exclusión o la limitación de daños incidentales o emergentes, de modo que es posible que las limitaciones o exclusiones anteriores no se apliquen en su caso. Esta Garantía le confiere derechos legales específicos; según el estado/provincia, puede disfrutar además de otros derechos.

©2018 Voxx Accessories Corp.
3502 Woodview Trace, Suite 220
Indianapolis, IN 46268
Marca(s) ® Registrada(s)