1. Quick set

1. The default programming code is “123456”, It’s required that you change it to a code of your owm before programming.
2. Recommend you hit the small reset button on the circuit board before assembling the unit to the bracket.
3. Programming Code = PC User Code = UC
   Press “ 🔓 ” +number to enter into the programming mode

Add Programming Code

🔓 + 1 + 🔓 → PC + 🔓 → New PC + 🔓 → New PC + 🔓

Remark : Programming Code should be 4-9 digits in length. And you need enter the mew password again to confirm.

Add New User Code

🔓 + 2 + 🔓 → PC + 🔓 → 1 → NewPC + 🔓 → NewPC + 🔓

Remark : User Code should be 4-9 digits in length. And you need to enter the new password again to confirm.

Add New Fingerprint

🔓 + 2 + 🔓 → PC + 🔓 → 1 → Fingerprint 8 times

Remark : After the green light flashes twice and the fingerprint is recorded successfully.

⚠ **Tips :** Redister (add) complete fingerprint area including up, down, left and right edges. Move finger slightly each time when programming to improve accuracy.



Delete User Code or Fingerprint

🔓 + 2 + 🔓 → PC + 🔓 → 2 → 2 (all) + 🔓


↓

1 (Single) → UC or Fingerprint + 🔓

Volume setting

🔓 + 3 + 🔓 → PC + 🔓 → 1 → 1(increase)

↳ 2(decrease)

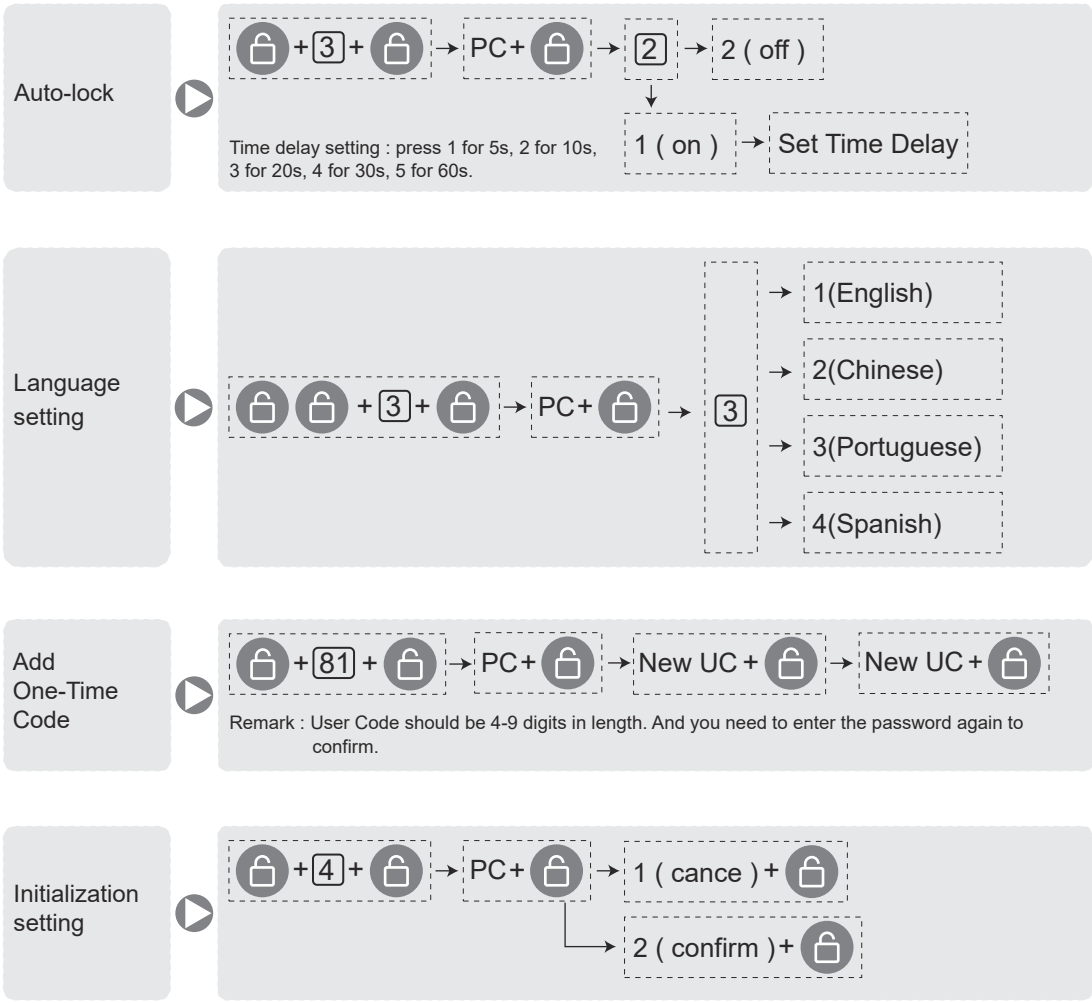


2. Features

- Three ways to access: code, key and fingerprint.
- Low power consumption, 4 AA batterise can work for 1 year or 5000 times.
- Backlit keypad for use in low light environments.
- 1 Programming Code and 300 user codes (Including 50 Fingerprints).
- Built-in disguise feature to protect your codes from prying eyes.
- Low battery warning indication.


3. How to use ?

Unlock the from outside


1 Backup key

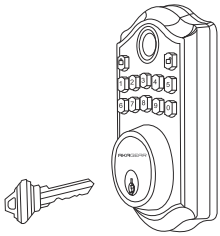

2 Fingerpint

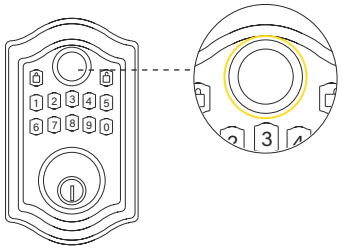

3 Programming / User code +

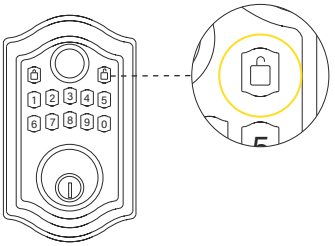


Lock the door from outside

Auto lock mode

- Auto lock mode is disabled by default, please refer “Quick set” turn Auto-lock on steps.
- In auto lock mode, the bolt extend out automatically in 5/10/20/30/60 seconds after unlocking.

Manual mode

- Press “ ” button on keypad to lock.

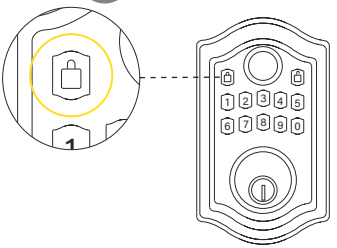

Lock the door from inside

Deadlock / Privacy Button

- Privacy mode is disabled by default.
- All Entery Codes are disabled except the programming code.

Manual mode

- Rotate the turn piece to lock position.



Indicatior light signals

Green: A correct code was entered.

Blue: Programming in progress.

Red:
- An incorrect code was entered.
- Programming error.
- Low battery warning.

4. Privacy mode

Reset mode

step 1:


Remove the battery cover.

Step 2:

Put four AA batteries in and subsequently long-press the “Deadbolt” button. The blue light will then flash.

Step 3:

Enter “000 + ” and the green light flashes means the reset is successful.

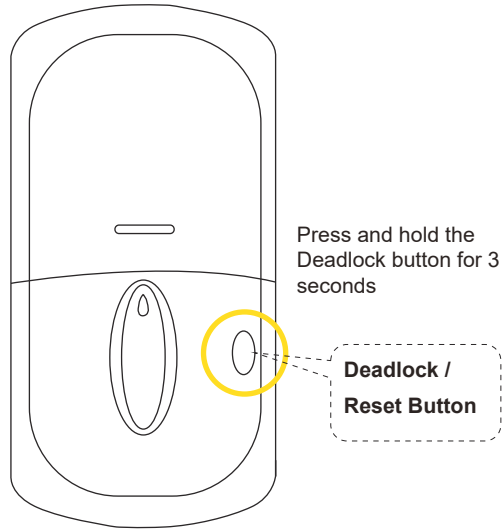


Deadlock Button

After the Deadlock function is turned on, only the Programming Code can unlock, and all user code cannot unlock (use the Programming Code to unlock the lock will remove the Deadlock restriction.)

5. Restore factory settings

Delete all user codes, including master code:

- Use a Screwdriver to remove the interior assembly.
- Press and hold the reset button for 5 seconds until voice prompt & green light flashing, the master code will return to the manufacturer default code “123456”.

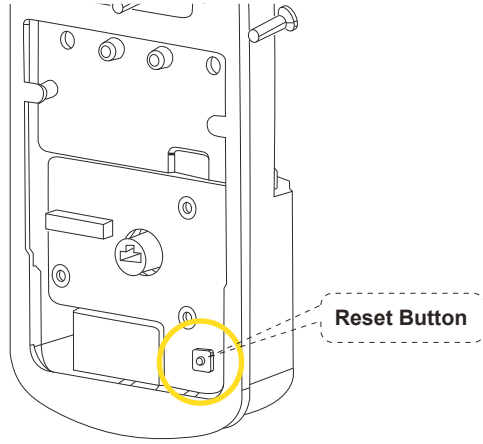

After restore factory, Change the master passcode as soon as posible! Beacuse of the master password can unlock the door.

5. Setting definitions

Settings	Default Setting	Definitions
Programming Code	123456	• It's required to change it to a code of your own before programming. • In manually mode, Long press the " 🔒 " to lock. • 4-9 digits in length.Must be different from all other exsisted User Codes. • If you forget the master password, you can reset the lock to factory settings,which restores the default programming code.
Auto Lock	Disable	• This feature is optional and can be turned off. • When eaabled, the lock will automatically re-lock after 5/10/20/30/60 seconds. • After a successful code entry or manual unlock with the key, the lock will automatically re-lock after each unlock to keep your home secure.
Manually Lock	Hold " 🔒 "	• If auto-lock is not set on, you need to do the locking manually.
Silent Mode	Disable	• The beep sounds when pressing keypad can be muted.
Privacy Button	Disable	• Privacy mode is disabled by default. • When enabled, activate Privacy mode by pressing the privacy button for 3 seconds to put the lock in do-not-disturb mode(All Entry Codes are disabled except the programming code).
Wrong Code Entery Limit	Enabled	• Once the wrong code entry limits reach to 5 attempts, the lock will shutdown(flashing RED) for sixty(60) seconds.
Peek-proof digital keypad	Enabled	• Prevent code exposure to strangers by entering random digits. 
User Code	Disable	• The lock comes out without any default User Codes. • Must be different from the master code and others user codes. • Up to 300 possible User Codes can be stored in the lock at one time.

Warranty

Lifelime limited Mechanical and Finish Waranty and 1-Year Limited Electronics Warranty Subiect to the terms and conditions of the warranty.We extend a lifetime limited mechanical and finish warranty and a 1-year limited electronics warranty to the original consumer user("Original User") of our brand product against defects in material and workmanship, as long as the original User occupies the residential premises upon which the product was originally installed.

Warnning

This manufacturer advises that no lock can provide complete security by itself, this lock maybe defeated by forcible or technical means or evaded by entry else where on the property.No lock can substitute for caution, awareness of your environment, and common sense.Builder's hardware is available in multiple performance grades to suit the application.In order to enhance security and reduce risk, you should consult a qualified technician or other security professional.

6. Troubleshooting

- **Installation**

Question	Suggested Action
Motor turns but will not extendor retrieve the deadbolt.	• Make sure the key is not in the lockset when installing the deadbolt. Refer to installation instructions. • Make sure the backset on the latch is set to the properlength. Refer to Installation Instructions. • Please restore to the factory setting and enter the default Master Code to set up the lock.
Why does my lock only workproperly when the backup key is in? Why am I unable to pull the keyout in the unlocked position?	• You may need to re-install the whole lock. • Please do not put the backup key in the lock when install. • Please make sure when you start to install, the lock is in unlocked status. • Please make sure the thumb turn is horizontal.
Fail to programming the lock.	• Before installation, restore the lock to complete the bolt direction setting. • Please make sure the lock is installed correctly. • Please install fresh batteries and make sure the cable is connected oorrectly.

- **Operation**

Question	Suggested Action
The battery indicator keeps flashing	• The batteries are getting low. Please replace with 4 AA new batteries for the best performance (Alkaline batteries, do not use recharge batteries).
Keypad not responding	• Make sure the batteries are installed properly. • The batteries are getting low if the battery indicator keeps flashing. • Please replace with four new batteries for the best performance(Alkaline batteries, do not use rechargebatteries). • Make sure the cable is well-connected to the port, and was not damaged during installation. • Make sure the lock has been set up and complete the bolt direction determination
Forgot master code/Default programming code is incorrect.	• Press the reset button on the circuit board to erase all codes.Once the resetting work is complete, all passcodes will be erased and the programming code will return to the default programming code 123456.
Lockset is not able tounlock/lock by keypad	• Make sure you have entered the correct User Code. • The battery is low if the battery indicator light keeps flashing. Please replace it with four new batteries. • Make sure the cable is firmly connected. • Check the cable for any damage that may have occurred during installation. • Make sure the batteries are properly installed (Alkaline batteries, do not recharge batteries). • Check the strike plate to make sure it is properly aligned and clear so the bolt can freely move in the hole.
The lockset locks when I enter my code and unlocks when I press the lock button/the auto set wasset to open the door.	• Make sure the bolt latch is in the unlocked position. • Do not have any key in the cylinder during installation. • Make sure the turn piece is inserted horizontally.

7. Contact Us

(888) 811-1140(US) cs@akagear.net www.akagear.net

For any inquiries about AkaGear products, please feel free to contaict us.
Operating Hours: Mon-Fri 9am-5pm(EST)

7. App Operation Guide

We recommend using app because it's easier to set and more convent for future use.

1. Create an Account

Android : Search **Smart Life** on Google Play.

ios : Search Smart Life on the App store.

OR : Scan the QR code below to download Smart Life App.

Sign up and log into your account with an email address.


Smart Life App

2. Pair Your Phone with the Smart Lock

Step 1: Press any key to wake up the lock,you will hear a voice prompt "Please addBluetooth Administrator" .If not ,please reset the lock. **Tap Add Device.**

Step 2: Add the lock discovered.

Step 3: Name the lock and Tap **Done.**

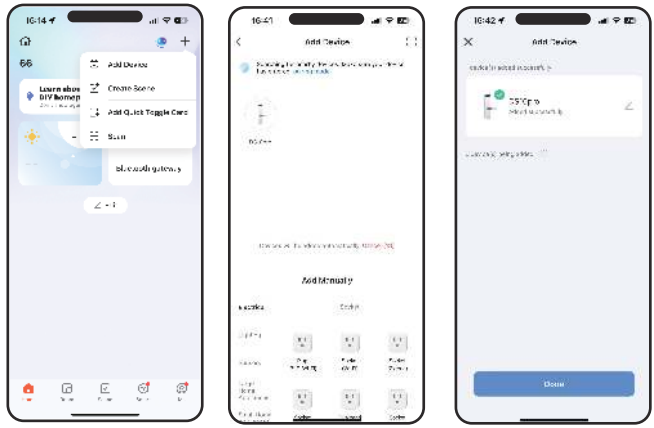


3. Change the Admin Passcode


Once the lock and your phone are paired, the defaultadmin passcode 123456 is invalid.


Tap **Member Management→Admin→Add code→**Entera 6-9 digit password and set a code name.

Note: The first code you set is the admin passcode,it can be changed or deleted.

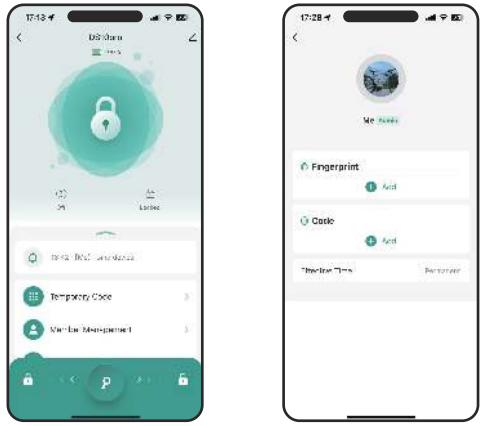

4. App Homepage Overview

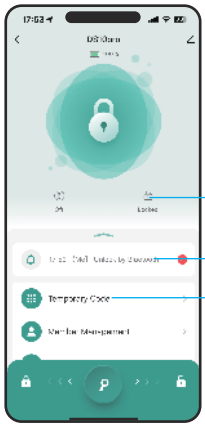

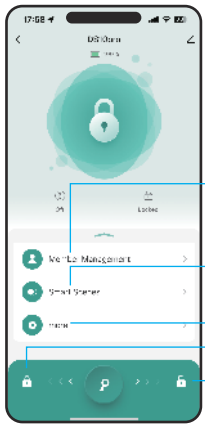


5. Temporary Code

Time-Limited	Use it at least once within 24 hours after it takes effect.Otherwise, it becomes invalid.
One-Time	Validity period: 6 hours.It can be used only once before it expires.
Clearing	Choose to clear one/all used time-limited codes. Validity period: 24 hours Once entered on the lock, one/all used time-limited codes are cleared, the lock emits a short beep.
Custom	To set/generate a custom code, your phone must be within 5 meters of the lock if not paired with the gateway.

Note: Please remember the temporary codes you set, as temporary passwords cannot be checked once they have been set.

6. Set Fingerprint

Tap **Member→Admin→Add Fingerprint**→Follow the on-screen instructions to add a fingerprint.

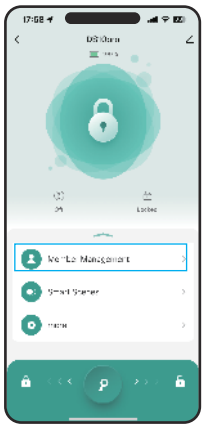








7. Auto Lock

① **more →Remote Unlock**
② **more →Auto Lock Delay** (Change the interval time as needed)

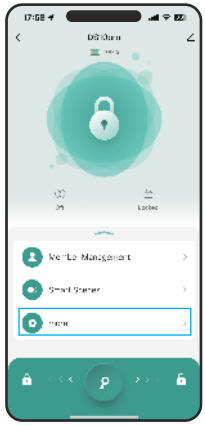




7. Add member


① The home owner taps **Me→Home Management→Your Home→ Add Member→Tap Copy/Messages→** Send the invitation code to the recipient.
② The recipient taps **Me→Home Management→join a Home** and enter the invitation code.

Once the recipient be a home member, you can change the family role of the recipient.


Common member: Use device, use smart setting.

Administrator: Manage device and room, manage smart setting, manage member.

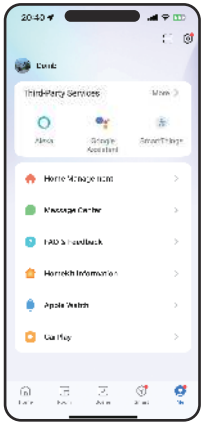


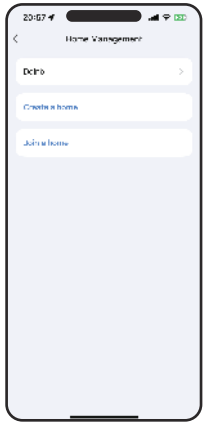



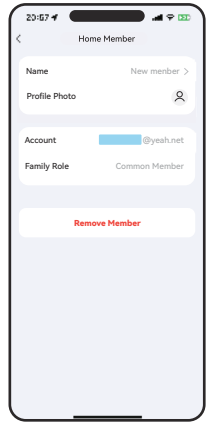

Or add it directly on this page.

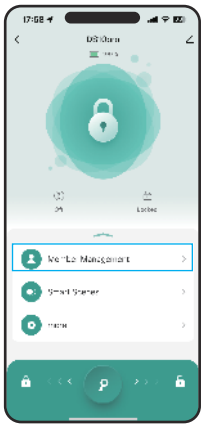



FQA

The solution for details of FQA, please refer to the Instructions guide. If necessary, please connect with our customer service.

Question	Answer
How to add fingerprint?	Please go to fingerprint in the app, tap "Add" button and follow the voice instructions to add the fingerprint on the lock accordingly.
Can the lock sound be muted?	Stand nearby the lock, turn on your phone's Bluetooth and open the App,tap more->Lock Volume->Mute
How do I reset admin passcode on the APP?	Check the part (3.Change the admin passcode)
How do I set up auto lock?	Check the part (7.Auto lock)
Fingerprint recognition is not working.	Press in seconds will be better for fingerprint recognition.
How to get a Wi-Fi gateway?	You can purchase an additional gateway, and also to contact our customer service.
Does it support the Alexa function?	Yes, it supports Alexa APP but it needs matching with Wi-Fi Gateway.

7. Contact Us

(888) 811-1140(US) cs@akagear.net www.akagear.net

For any inquiries about AkaGear products, please feel free to contaict us.
Operating Hours: Mon-Fri 9am-5pm(EST)