
DAPPER

User Manual

Floor Buffer

13 IN. Multi-Purpose Commercial Floor Buffer Machine

MODEL: DP-FM1302

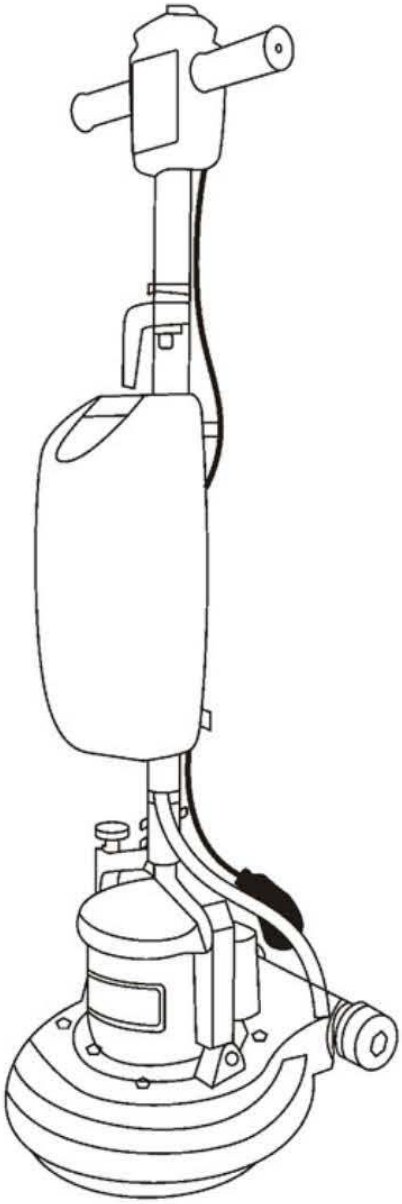

For any service-related Issues, please contact us:
Phone Number: 718-301-8243
Email address: support@dapper-supply.com

Technical Data

Model	DP-FM1302
Voltage	110V,60HZ
power	350W
Orbital speed	1440rpm
Base plate diameter	13”
Cable length	40ft
Machine Weight	31 pounds

Precautions

- Avoid applying excessive force to the machine while in operation, as this can lead to undue stress and potential damage to its components.
- Ensure regular maintenance of the machine by inspecting for any loose or damaged parts.
- Prior to starting the vibrating machine, remember to position a cleaning pad beneath its bottom plate.
- If the machine produces unusual noises, consider the possibility of a worn rubber column or eccentric wheel and promptly replace them if needed.

Operating

 1. Begin by securely tightening the two hexagon socket screws within the handle tube connector.	 2. Attach the water tank to the handle tube.	 3. Connect the handle's waterproof plug to the motor lead.
 4. Place the machine on a flat surface and assemble the appropriate brush or polishing pad.	 5. Gently apply pressure to the handwheel to make adjustments to the handle's height.	 6. Connect the machine to a power source, then activate the switch located at the top to begin your work.

Machine Diagram

