

Code Format


1. Master Code (4 to 10 digits): The default Master Code is **12345678**. It is required that you change it to a code of your own before programming.
2. User Code (4 to 10 digits): A total of 20 User Codes (including one temporary one-time User Code) can be programmed and stored.
3. Both Master Code and User Code don't support the following combination of numbers.

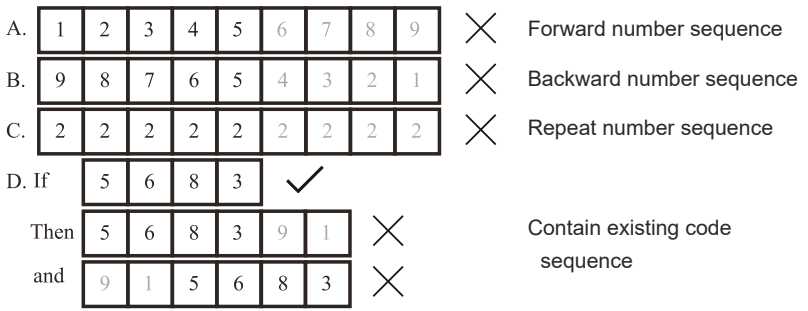

Programming Guide

IMPORTANT: The default Master Code is **12345678**. It is required that you change it to a code of your own before programming.

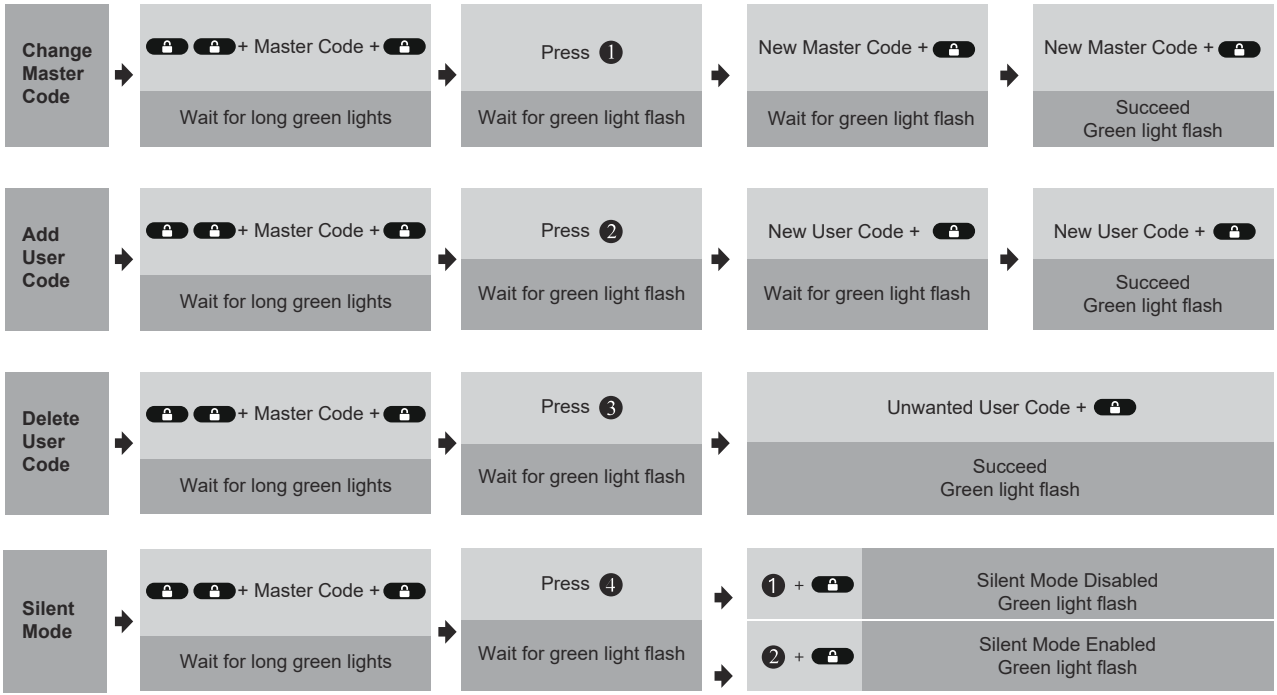

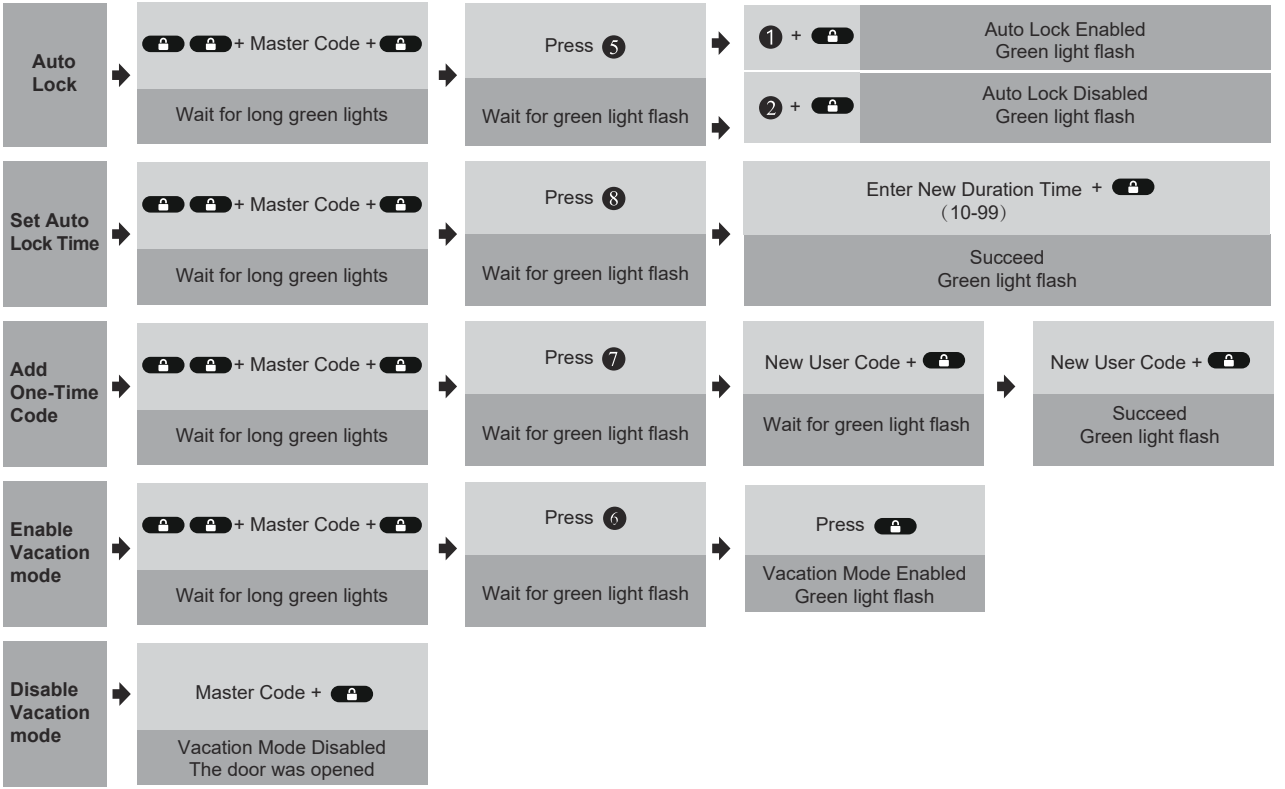
Auto Lock
+ Master Code +
Wait for long green lights
Press 5
Wait for green light flash
1 +
Auto Lock Enabled
Green light flash
2 +
Auto Lock Disabled
Green light flash
Set Auto Lock Time
+ Master Code +
Wait for long green lights
Press 8
Wait for green light flash
Enter New Duration Time +
(10-99)
Succeed
Green light flash
Add One-Time Code
+ Master Code +
Wait for long green lights
Press 7
Wait for green light flash
New User Code +
Wait for green light flash
New User Code +
Succeed
Green light flash
Enable Vacation mode
+ Master Code +
Wait for long green lights
Press 6
Wait for green light flash
Press
Vacation Mode Enabled
Green light flash
Disable Vacation mode
Master Code +
Vacation Mode Disabled
The door was opened

Troubleshooting

Why does not the knob rotate after installation complete?
Please turn the thumb turn to the horizontal position to unlock, then the knob can be rotated.

I can't reset my lock.
The lock should be in unlocked before resetting. Please turn the thumb turn to horizontal position to unlock, then follow the steps to reset your lock.

The interior assembly screws can't be tightened properly.
Press the interior assembly tightly, align the hole on the interior assembly with the screw thread on the mounting plate, then tighten screws.

Why does the indicator flash red after I press and hold any key to lock from outside?
The indicator flashes red to indicate it's locked.

What does 5 short and fast beeps mean while programming?
It alerts you either time-out or wrong entry.
Please be sure to complete each setting step within 5 seconds.
Please change the default master code in the first time programming.
Please be sure the user code is with correct format and with 4 to 10 digits.

What if I forget my Master Codes?
If you forget your Master code, resetting your lock, then the original master code (12345678) works, and all previous user codes were erased.

Information & Safety Warnings

- Protect your User Codes and Master Code.
- Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- Do not use an electric screwdriver during installation.
- This manufacturer advises that no lock can provide complete security by itself.
- This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property.
- No lock can substitute for caution, awareness of your environment, and common sense.
- Take care to ensure a long-lasting finish. Please use a soft and damp cloth to clean the lockset if you need. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.
- The lock is water resistant. It can withstand water splashes; however, do not let water and liquids get into the lock.
- Avoid exposure to direct sunlight. Long-term exposure to direct sunlight may damage the lock.