
BKIY802 Elliptical Machine

User Manual

Please read the instructions carefully before using the product and keep it properly.

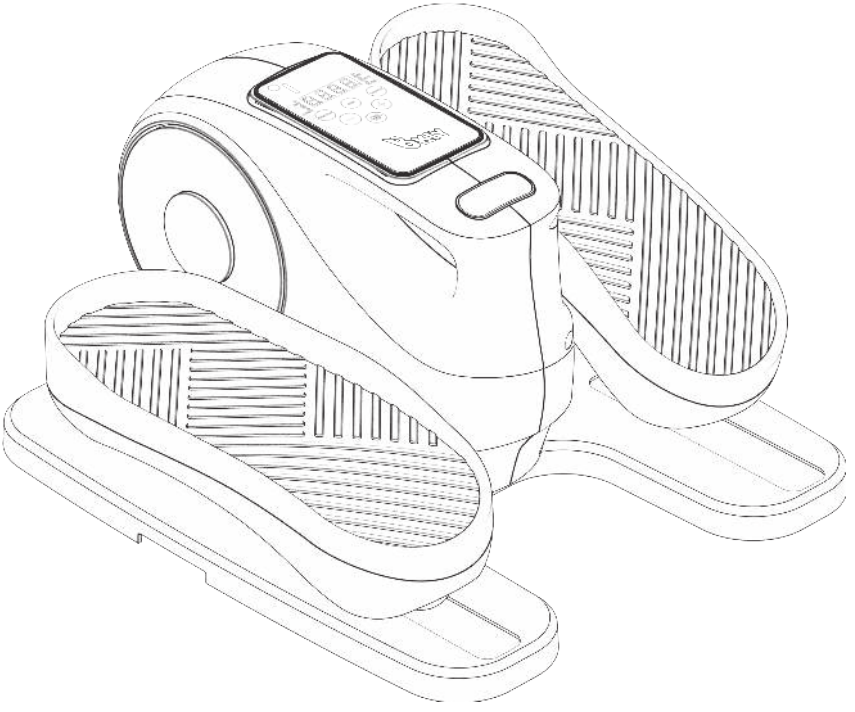

* The pictures are for reference only, and the products are subject to reality

Customer Service Email:
sedoing@outlook.com

1.Product Introduction

Package List

1 Remote Control x1(2xAAA Battery NOT Include)
2 User Manua x1
3 Power Cord x1




❶



❷



❸

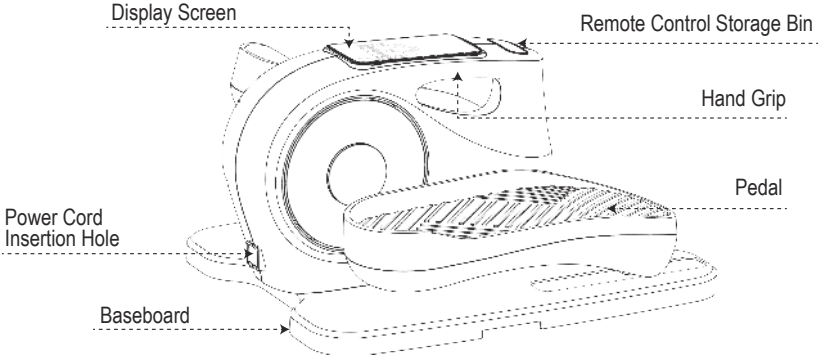


2.Technical Parameter

Product Name: Votorized Elliptical Trainer
Model: NS-802
Switch Type: Touch Screen (12-speed Adjustable)
Rated Voltage: 110-240v 50/60Hz
Rated Power: 60W

Product Net Weight: 5.15kg
Gross Weight: 6.6kg
Product Size: 42.3x37x23cm
Size: 47.5x41x28.5cm
Product Weight Limit: 25kg

3.Panel operation

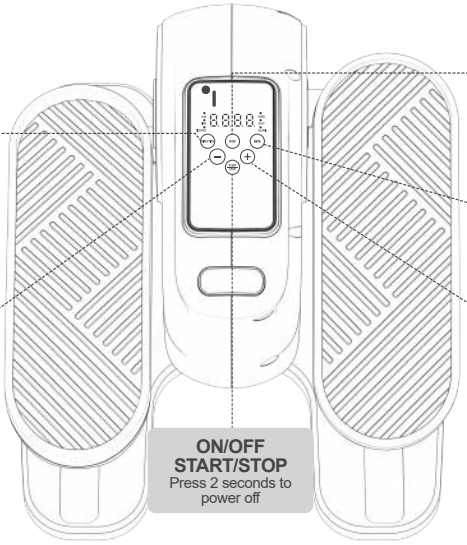

SWITCH PEDAL DIRECTIONS
Forwardi/Backwards

SWITCH ACTIVE MODES
P01-P12-HA
- HA - Manual Mode


DISPLAY DATA
Scan,Time, Distance, Speed, Count, Calorie

SPEED/TIME-
Decrease Speed 12-01 Levels
Decrease Time 30-01Min

SPEED/TIME+
Increase Speed 01-12 Levels
Increase Time 01-30Min

ON/OFF START/STOP
Press 2 seconds to power off

4.Remote control operation

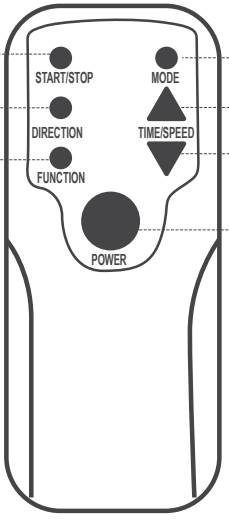

START/STOP

SWITCH ACTIVE MODES
P01-P12-HA
- HA - Manual Mode

SWITCH PEDAL DIRECTIONS
Forwardi/Backwards

TIME/SPEED +

DISPLAY DATA
Scan,Time, Distance, Speed, Count, Calorie

TIME/SPEED -

ON/OFF

5.Instructions for operation keys

After connecting the power, the machine defaults to manual mode - HA -,The machine defaults to automatic shutdown for 30 minutes, and can be set to any duration within 30-1 minutes before starting the machine.

Press **“—”** key: the time gradually decreases from 30 minutes to 1 minute;

Press **“+”** key: the time gradually increases from 1 minute to 30 minutes;

Note: Time adjustment is only valid before the machine is running, and the motion shutdown time cannot be modified after the machine is running.

Press **“START/STOP”** key: The machine starts running at the speed of 01 gear (the machine has a total of 12 gears)

Press **“+”** key: gradually accelerate from gear 01 to gear 12;

Press **“—”** key: gradually reduce the speed from 12th gear to 1st gear;

Press **“DIRECTION”** key: Switch Pedal Directions， Forwardi / Backwards;

Press **“FUNCTION”** key: scan, time, distance, speed, count, calories;

Press **“MODE”** key: P01-P12-HA- (-HA- manual mode):

Note: When the machine is running in P01-P12 automatic mode, pressing “DIRECTION” or “+” “—” keys will not operate the function,To adjust the speed or switch the direction of pedal movement, you need to switch to - HA- manual mode.

Press 2 seconds **“START/STOP”** key power OFF：

※ Press **“START/STOP”** or **“MODE”** (SCAN/TIME/DISTANCE/SPEED/COUNT/CALORIES) will be displayed in turn for about five seconds.

※ The device is in automatic mode P01-P12;
The speed and direction will be automatically adjusted according to different times (the corresponding levels for different times is explained in detail below)

6.Automatic mode operation law

Introduction of automatic mode (manual mode defaults to 30 minutes, and automatic mode defaults to 30 minutes; When the mode is switched, the data is not cleared, and when 30 minutes by default; After switching, change to the direction of the current mode, and the speed will be switched to the one corresponding to the current mode after the next 3 seconds.Speed In automatic mode, the speed direction follows the mode code table.)

P01

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	3	6	9	12	12	12	12	12	12	9	6	3	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P02

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	5	6	7	8	6	5	4	3	2	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P03

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	5	4	5	4	5	4	3	2	1	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P04

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	2	1	2	3	2	1	2	3	2	1	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P05

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	3	2	1	2	3	4	3	2	1	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P06

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	5	4	5	4	5	4	3	2	1	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P07

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	5	6	6	6	6	5	4	3	3	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P08

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	5	6	7	7	6	5	4	3	2	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P09

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	2	3	4	5	6	7	8	6	5	4	3	2	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P10

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	3	5	7	9	9	9	9	9	9	7	5	3	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P11

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	3	6	9	10	10	10	10	10	10	9	6	3	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

P12

Time(min)	0-2	2-4	4-6	6-8	8-10	10-12	12-14	14-16	16-18	18-20	20-22	22-24	24-26	26-28	28-30
Speed	1	3	6	9	12	12	12	12	12	12	9	6	3	2	1
Direction	march	march	march	back	back	back	march	march	march	back	back	back	march	march	march

7.Safety Instructions

1. Turn off the power after each use.
2. Do not cover the motor during use to avoid overheating and causing malfunction or damage.
3. Do not allow children to play or touch, which may cause finger pinch injuries
4. Pay attention to your feelings. If you feel uncomfortable or have any adverse symptoms, please stop using this device immediately.
5. If the product is damaged or defective, please do not use it.
6. Do not insert or drop debris into the product.
7. This device is not suitable for therapeutic use and should not be used in conjunction with other medical electronic devices, such as pacemakers or electrocardiographs
8. Do not use in damp or dusty environments, such as bathrooms.
9. Do not let water and other liquids come into contact with the switch.
10. Do not place the power cord under the product or any heavy objects. If the power plug is loose, do not use this product.
11. Do not wrap the power cord around the product, as this may damage the power cord and cause electric shock or fire.
12. Do not use power cords to move the product.
13. Use the trainer on a horizontal plane and maintain at least 1 meter of free space around its circumference.
14. If there is a power interruption during use, please stop using this product. Sudden restoration of power may cause harm to you.
15. Please choose a speed that your body adapts to when exercising. At the beginning of use, please choose low-speed walking and gradually accelerate after adapting.
16. The principle is to use it for 30 minutes at a time, and do not use it continuously for too long.
17. Before use, please consider whether your physical condition is suitable for using this product, such as during periods of high blood pressure, heart disease, etc.

