XTEINK



XTEINK X4

Ultra-thin Magnetic Back E-Reader

User Guide

TABLE OF CONTENTS

1. Getting to Know Your Device

1.1 What's in the Box 02

1.2 Device Overview 02

1.3 Home Screen 03

1.4 Specifications 03

1.5 Support File Formats 03

2. Quick Start Guide

2.1 First-Time Setup 04

2.2 File Management 05-06

3. Reading and Personalization

3.1 Reading Features 07

3.2 Switching Fronts 07

3.3 Wallpaper 08

3.4 Others 08

4. FAQ

4.1 System & Network 09


4.2 File Issues 09

4.3 Other Issues 09

5. Safety,Regulatory and Warranty Information 09


1 GETTING TO KNOW YOUR DEVICE

1.1 WHAT'S IN THE BOX

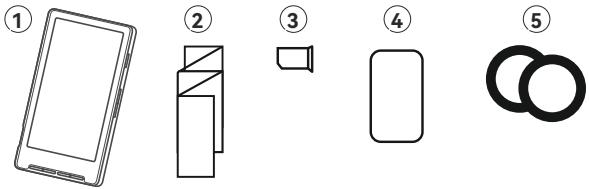

Package includes:
① 1× X4 E-Reader ② 1× Quick Start Guide ③ 1× MicroSD Card
④ 1× Screen Protector ⑤ 2× Magnetic Ring Stickers

1.2 DEVICE OVERVIEW

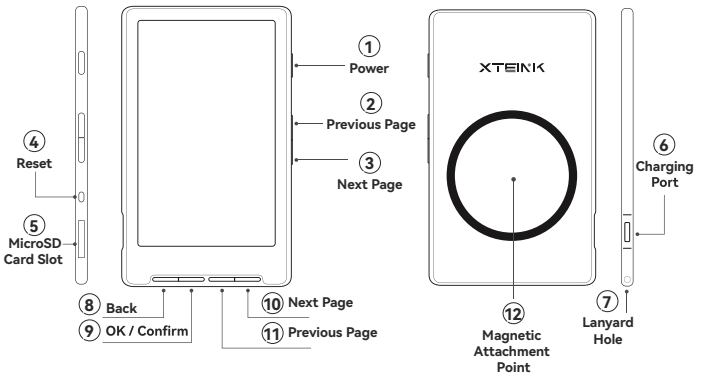

1 GETTING TO KNOW YOUR DEVICE

1.3 HOME SCREEN




Read:
Resume reading from where you left off.

Folder:
Browse all files on your MicroSD card, including books, images, and fonts.

Settings:
Customize reading preferences and device options.

Sync:
Connect to Wi-Fi, transfer files, and update the system.

1.4 SPECIFICATIONS

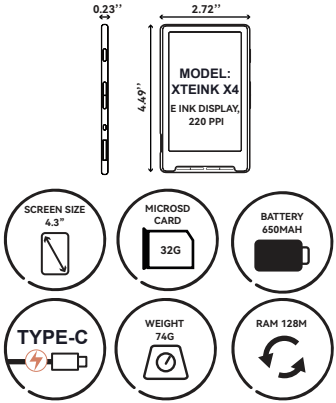

1.5 SUPPORT FILE FORMATS


BOOKS: TXT (UTF-8), EPUB

IMAGE: ★BMP
JPG (≤1024×1024 px, <2 MB, 3:5 aspect ratio)

FONTS: .bin format only

2 QUICK START GUIDE

2.1 FIRST-TIME SETUP

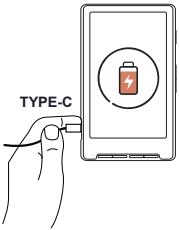


Step 1: Charge Your Device
Charge your eReader for about 30 minutes using the Type-C cable before first use.

Charging

Fully charged (1–2 hours).

Step 2: Connect to Wi-Fi
Press the power button and hold until your eReader turns on.

Go to Sync → Network Connection, select a Wi-Fi network, enter the password, then press and hold the Back button to exit.

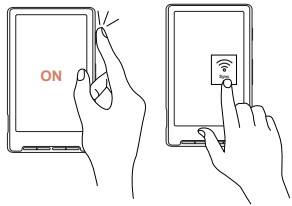




Step 3: System Update
Select System Update and wait until the progress bar reaches 100%. Once the update is complete, your eReader is ready to use.

2 QUICK START GUIDE

2.2 FILE MANAGEMENT


FILE TRANSFER

UPLOAD FROM PC

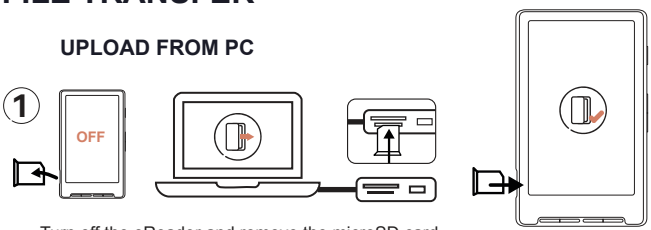

Turn off the eReader and remove the microSD card.
Insert the card into your computer using a card reader.
Copy the books, images, or fonts onto the card.
Reinsert the microSD card into your eReader and turn it on.

MORE TRANSFER OPTIONS

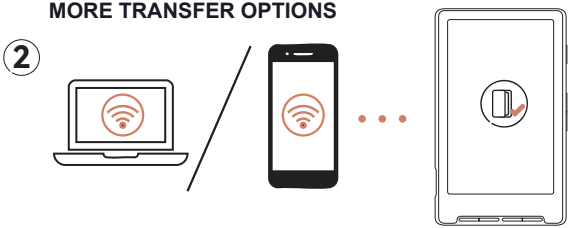

Enable Hotspot on the eReader.
Connect your phone or computer to the E-Paper Wi-Fi (password: 12345678)
Open a browser on your phone or computer, go to 192.168.3.3 , and upload your files.


UPLOAD FROM PHONE

The phone transfer function is not yet available. Please stay tuned for system updates.

2.2 FILE MANAGEMENT


DELETE FILE

On The eReader

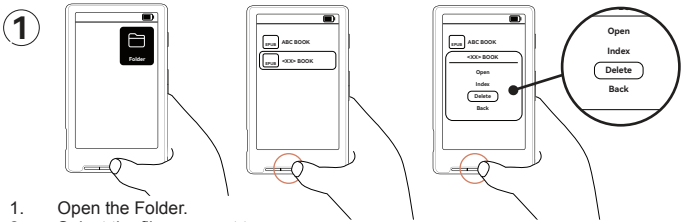

1. Open the Folder.
2. Select the file you want to remove.
3. Press and hold the Confirm (OK) button to delete


On a Computer

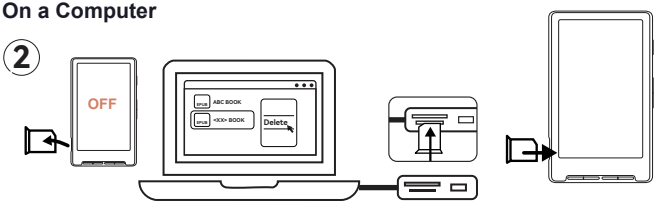

1. Remove the microSD card.
2. Insert the card into your computer with a card reader.
3. Delete the files you don't need.
4. Reinsert the card and turn on your eReader.

3 READING AND PERSONALIZATION

3.1 READING FEATURES

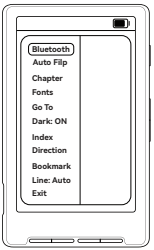

On the reading page:

Bluetooth: Tag the Confirm button → Select Bluetooth to connect or scan for new devices.Compatible with X4 Exclusive.

Auto Flip: Set your preferred automatic page-turn interval (0–9 seconds)

Chapter: Quickly jump to the previous, current, or next chapter. You can jump up to 100 chapters at a time.

Fonts: You can customize your reading experience by choosing different fonts.

Go to: Jump directly to any page.

Dark: Dark Mode makes reading easier on the eyes with light text on a dark background.

Index: After rebuilding the index, choose to return to your current page or start reading from the beginning.


Direction: Supports both portrait and landscape modes.

Bookmark: Press and hold Confirm (OK) button while reading to add a bookmark. Custom bookmarks are not supported.

Progress Bar: Shows reading progress at the bottom of the page.

3.2 SWITCHING FONTS

Folder Page:
In the folder, select an uploaded font file and press and hold to set it as the reading font. You can also preview the font, restore the default font, or delete it

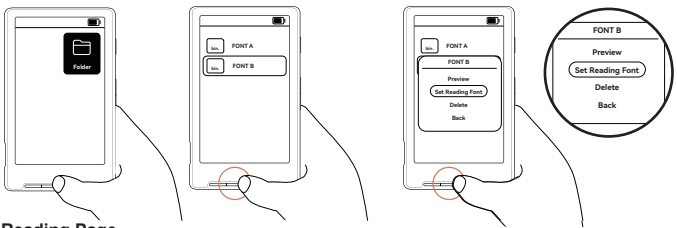

Reading Page
While reading, press and hold Confirm (OK) button, then select Fonts from the menu to switch between system fonts and custom fonts.

Note: Only .bin fonts are supported. Some third-party fonts may not display correctly.


3 READING AND PERSONALIZATION

3.3 WALLPAPER

To set a custom power-off wallpaper:


1. Go to Settings, select Power-off Screen, and choose Custom.
2. Open Folder, choose an image, and press and hold the Confirm button to set it as your wallpaper.

Recommended: BMP format, 480×800 resolution, 3:5 ratio.

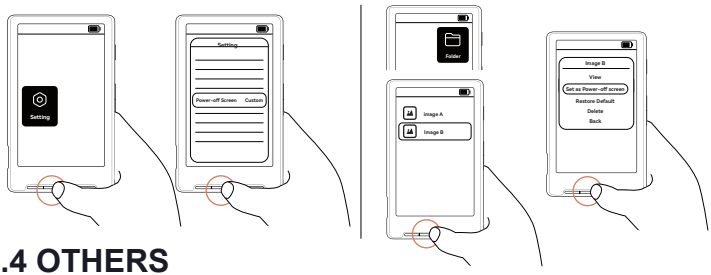

3.4 OTHERS

Language: Change the display language of your eReader.
External Font Speed: Set the speed for loading external fonts. Recommended: Ultra Fast.
Sleep Time: Set the auto-sleep time.
Power-off Timer: Set the auto power-off time.
Power-off Screen: You can set a custom wallpaper for the power-off screen.
Read Progress bar: Choose how the reading progress is displayed.
Book Progress: Shows progress through the entire book.
Chapter: Shows progress within the current EPUB chapter.
Off: Hides the progress bar.
Hold Power: Choose how long to press and hold the power button to turn your eReader on or off.
Customize Main Button: Assign functions to the four main buttons at the bottom of your eReader. By default, from left to right: Back, OK, Up, Down.
Swap Side Buttons: Reverse the functions of the Up and Down buttons on the right side.
Rotation: Rotate the screen 180°.
Clear cache: Your Mac may automatically generate extra files. Tap Clear Cache to remove them.

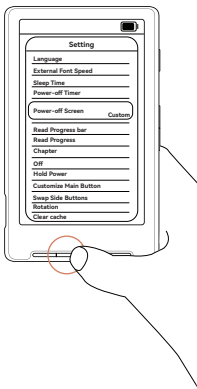

4 FAQ

4.1 SYSTEM & NETWORK

Update fails
If the update fails, tap RESET button, then press and hold the Power button to turn on the device. Or you can try a different network or move closer to your Wi-Fi router.

Wi-Fi Connection Issues
If the device cannot connect, try another network or use a mobile hotspot.

Networks Not Detected
Make sure your router supports 2.4 GHz Wi-Fi.

4.2 FILE ISSUES

TXT Garbled: Open on computer, save as "All Files," UTF-8 encoding.
EPUB Garbled: Tap "Next Page" to skip. Images may not display.
Duplicate Files: Mac may create extra files. Clear cache in Settings.

4.3 OTHER ISSUES

Unresponsive or Lagging: If the eReader is unresponsive or frozen, tap the RESET button, then press and hold the Power button.
Charging Issues: If the reader does not charge properly, try using a different charger or cable.
Low Battery: Charge the reader as soon as possible.

5 SAFETY,REGULATORY AND WARRANTY INFORMATION

Important safety, regulatory and warranty details about your Xteink eReader can be found on the Xteink website at:

https://www.xteink.com/pages/support

If you need assistance, contact Xteink customer service:

Global: support@xteink.com
Japan: support.jp@xteink.com
China: support@xteink.cn