TEEHO

User Manual

Model No. TE002

Need Help? Contact Us!

If you have any questions, please contact us at

+1 (833) 878-3346

(Monday-Friday 9:00 am-5:00 pm PST)

support@teeho.com

teeho.com

Tutorial Video

Scan the QR code and search TE002

Please watch these videos first and use this manual as a guide.

CONTENTS

1. At a Glance 1

2. How to Lock / Unlock 2


3. Programming Guide 3

4. How to Reset 9

5. Definitions 10

AT A GLANCE

Exterior Assembly

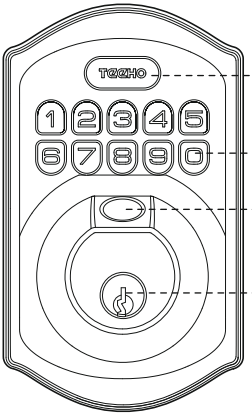


Multi–function Button

Keypad

Fingerprint

Keyhole

Interior Assembly

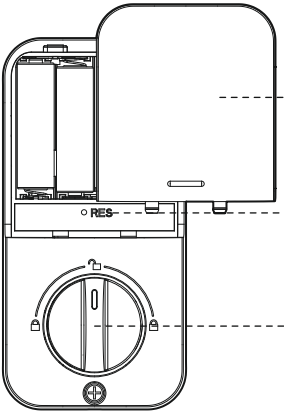

Battery Cover

Reset Button

Thumb Turn


HOW TO LOCK / UNLOCK


How to unlock

Unlock from the outside

1. Enter Master / User Code, press TEEHO
2. Use the Mechanical Key
3. Use the Fingerprint

Unlock from the inside, please rotate the Thumb Turn.

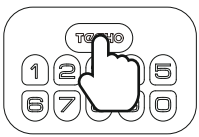

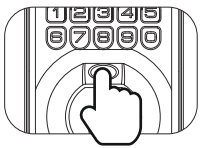

How to lock

Lock from the outside

1. Press and hold **Any button** on the Keypad for **2** seconds
2. Use the Mechanical Key

Lock from the inside, please rotate the Thumb Turn.



Auto lock

In **Auto Lock** mode, the bolt will extend out automatically to lock the door in **30** seconds. You can customize the Auto Lock time delay between 10 and 99 seconds.


Note: The lock doesn't have a built-in door sensor, if the Auto Lock is enabled, the Latch bolt will extend out automatically to lock whether your door is closed or open.

PROGRAMMING GUIDE


IMPORTANT:

- The Default Master Code is **12345678**.
  Please change it to your own Master Code before programming.
- If the setup is unsuccessful, the indicator light will flash red.


Change Master Code

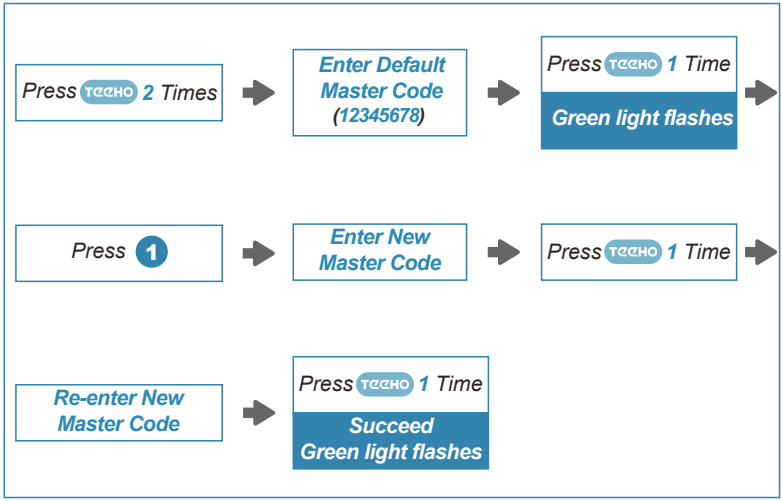


Add User Code

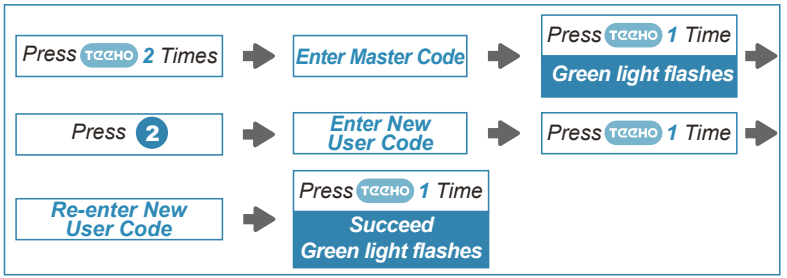

Delete User Code

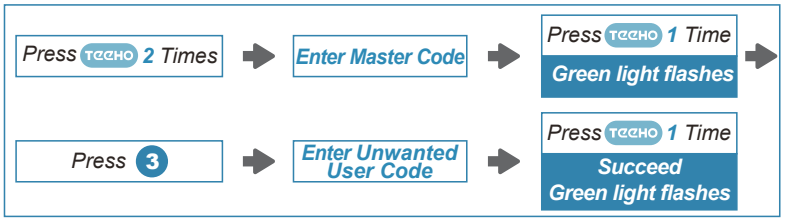


Add One -Time Code

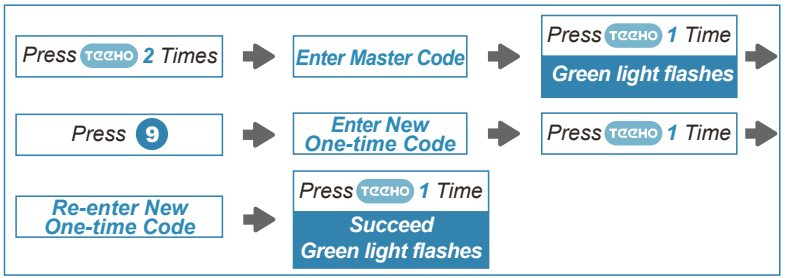

Note: Only one one-time code can be generated at a time. Each one-time code will be automatically deleted after use.


Add Fingerprint

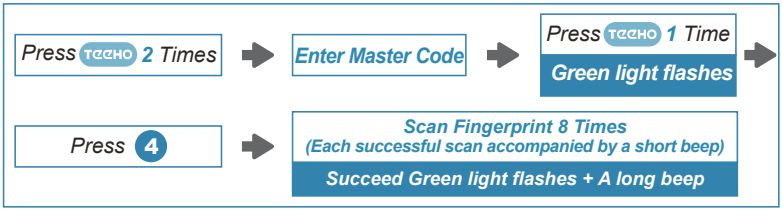


Note: For better fingerprint recognition, place your finger at different angles and apply slight pressure on the scanner each time while adding fingerprints.

Consider adding fingerprints from multiple fingers or recording the same fingerprint multiple times to enhance recognition accuracy.


Delete Fingerprint

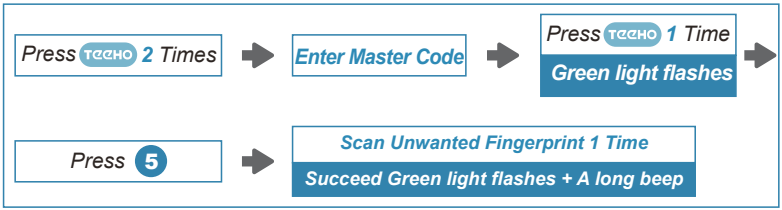


Enable Auto Lock

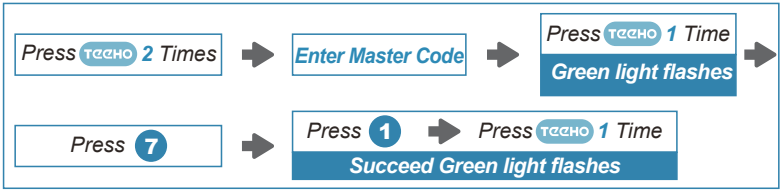


Disable Auto Lock

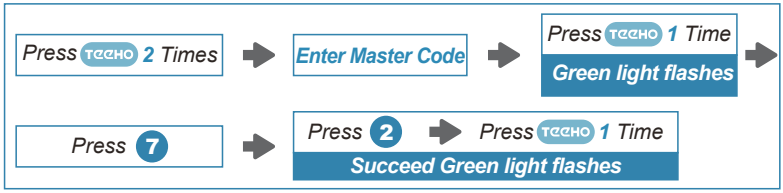


Set Auto Lock Time

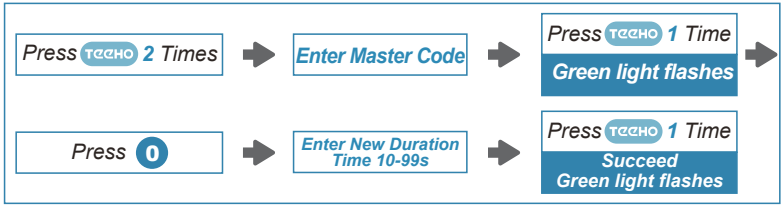

Enable Silent Mode

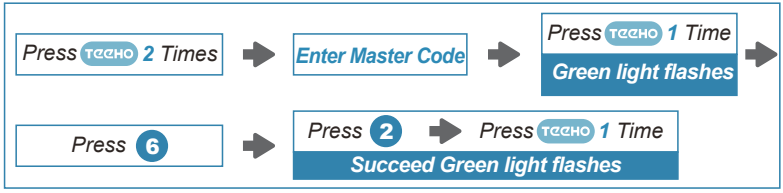


Disable Silent Mode

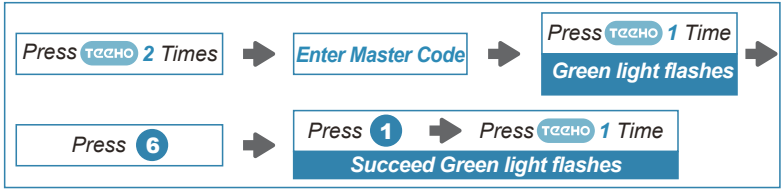

Enable Vacation Mode



Disable Vacation Mode

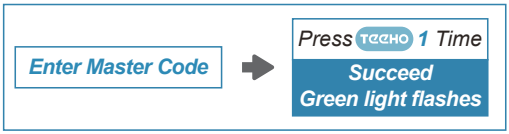


CODE FORMAT

1. Master Code (4 to 10 digits):
   The Default Master Code is **12345678**.
   It is required that you change it to a code of your own before programming.

2. User Code (4 to 10 digits):
   A total of 20 User Codes (including One-time User Code) can be programmed and stored.

3. Neither Master Code nor User Code doesn't support the following combination of numbers.

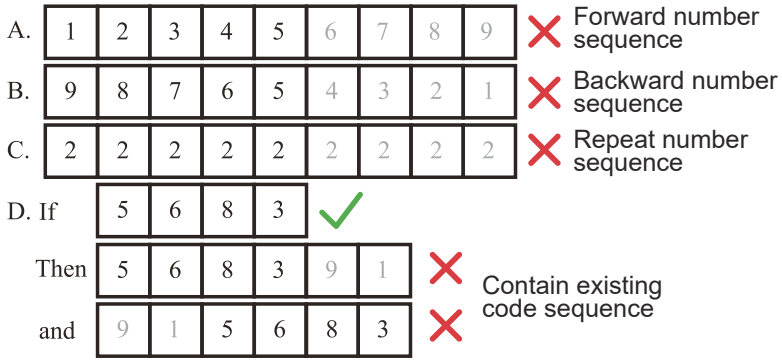

HOW TO RESET

Resetting steps

1. Keep the door open and unlocked.
2. Remove one battery, press and hold the **Reset Button** for **5** seconds by using the Reset Tool.
3. Keep holding the Reset Button and put the battery back, until you hear a long sound of beep and the Latch bolt extends out automatically.

Settings	Factory Default
Master Code	12345678
Auto Lock	Disabled
Silent Mode	Disabled
Wrong Entry Limit	10 times
Shutdown Time	3 minutes
Vacation Mode	Disabled

IMPORTANT:
Resetting will delete all User Codes which associated with the lock.

DEFINITIONS

• MASTER CODE

The Default Master Code is **12345678**. Before programming, it requires to change the Default Master Code to a new one.

Master Code can be used to unlock the door under Vacation Mode.

• FINGERPRINT

Fingerprint is only used to unlock from the outside.

To add fingerprints, place your finger on the fingerprint scanner for 8 times. Remember to place different angles of your finger and press a little bit harder on the scanner each time.

• AUTO LOCK

In Auto Lock mode, the Latch bolt will extend out automatically to lock the door in **30** seconds.

Auto Lock is disabled by default. You can customize the Auto Lock time delay between 10 and 99 seconds.

• ONE-TOUCH LOCK

One-touch Lock is pressing and holding **Any button** on the Keypad for **2** seconds to lock from outside.

• WRONG ENTRY LIMIT

After **10** times unsuccessful attempts at entering an invalid code, the device will shut down for **3** minutes.

• SILENT MODE

The beep sounds when pressing Keypad can be muted. But you will still hear low battery and system alerts.

• VACATION MODE

This is a security feature for you when you are leaving your home for vacation or long trip.

Enabling the Vacation Mode will restrict all User Codes and Fingerprints until Master Code is entered on the Keypad. If it's unlocked by the Thumb Turn from the inside, the lock will sound an alarm.

• ONE-TIME USER CODE

Only one One-time Code can be generated at a time.

It can be used once and will be automatically deleted and become invalid. If not used, it will be overwritten by a new one.

• ANTI-PEEPING PASSCODE

Entering random numbers before or after correct passcode will also unlock the door, which can prevent the passcode being exposed. The length of anti-peeping passcode should be within 16 digits.



Need Help? Contact Us!

Whatever issues with TEEHO products. Please contact us before returning it.



+1 (833) 878-3346

(Monday-Friday 9:00 am-5:00 pm PST)



support@teeho.com



teeho.com

*If you have your **order ID, videos or images of your problem** (if necessary) ready before contacting Customer Support, we will solve your problem faster and better.*