
About Outdoor PTZ Camera Humanoid Auto Tracking

Q. How to Connect to third part NVR?

if connect to third party NVR under Onvif, please enter setting in the browser to open setting "All Netcom" Enable as picture, and NVR can connect this camera with Onvif to view

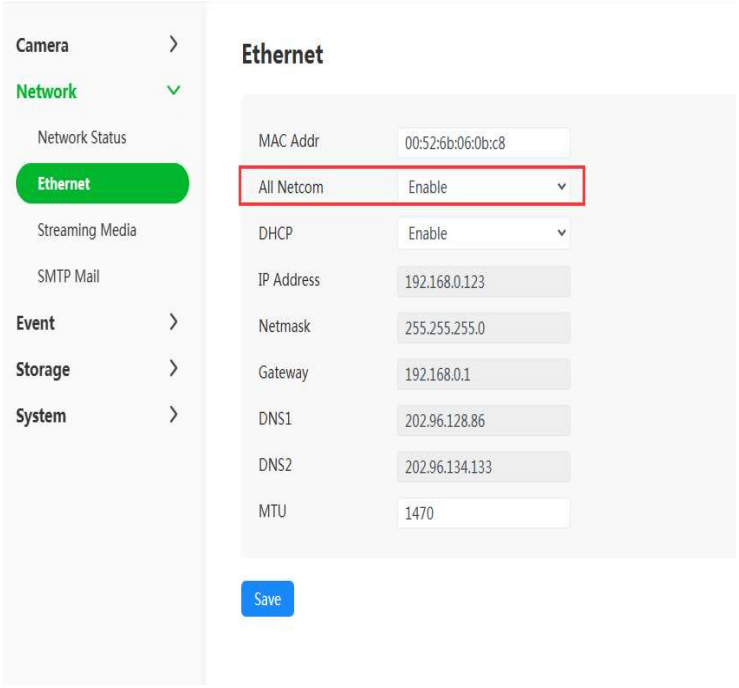

Camera IP is default with DHCP which means IP camera address is auto despatched by router after connecting to LAN.If connect to third party NVR under Onvif, please enter setting in the browser to open setting "All Netcom" Able, and NVR can connect this camera with Onvif to view, this is because NVR might have an uncompatible gateway as camera, if NVR IP address is set with DHCP, then need not do above setting. Please find the client software "Seetong" recorded in the USB sticker put in the camera box to install to computer, search and find IP address of the camera, set "All Netcom" Able. If NVR is alerady in existed LAN, just add cameras to NVR, NVR IP address is usually desptached by router, camera connecting to NVR instantly, camera need not any setting.

Q. How to download Seetong app?

A: Search “Seetong” in App store and download.

Q. How to enable humanoid tracking on the APP?

A: Please open Seetong app> Click to enter the POE camera> Swipe the bottom half of the interface to the PTZ page> Click the Humanoid button. Need not click the setting button)


Q. After completing the humanoid tracking, will the outdoor poe camera automatically return to auto cruise?

A: Support, the outdoor poe camera will automatically return to Auto cruise about 35 seconds after the tracking is completed.

Q. How to enable Auto cruise on the APP?

A: Please open Seetong app> Click to enter the POE camera> Swipe the bottom half of the interface to the PTZ page> Click PTZ Icon to enter and then press "Preset" . If current camera position is desired, then press "+" to set a preset. Set more than two presets and press Cruise Icon to start Auto Cruise.

PoE(Power Over Ethernet)

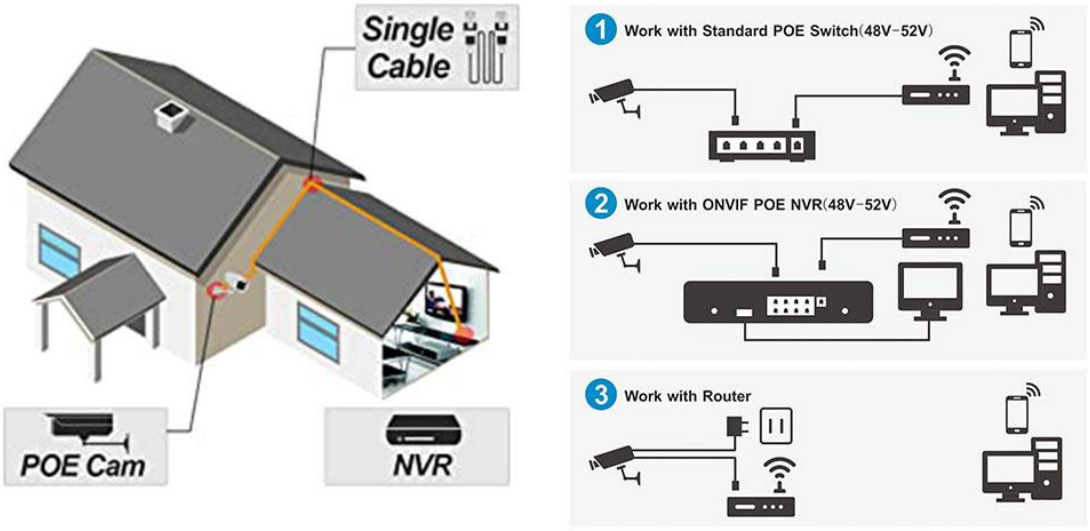

1.This POE IP camera can be powered by a POE switch (not included) or using the power adapter included in the packaging.

2.It needs an IEEE 802.3at PoE switch/injector/NVR (not included) for PoE, the Switch DC voltage is between 44~57V, with a typical value of 48V. And does not support wifi.

For more camera settings, please click setting Icon "⚙" on the App to browse.

How to add a Camera by phone?

