







Installation Instructions of Lever

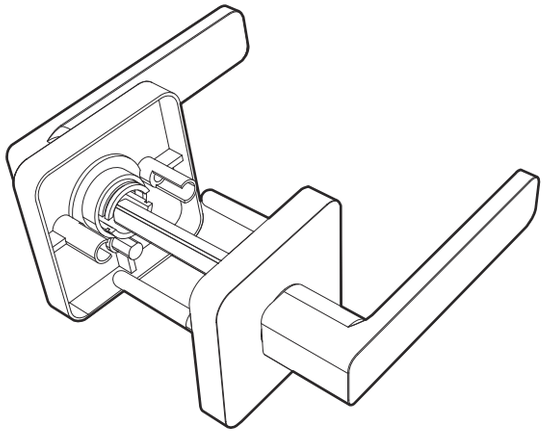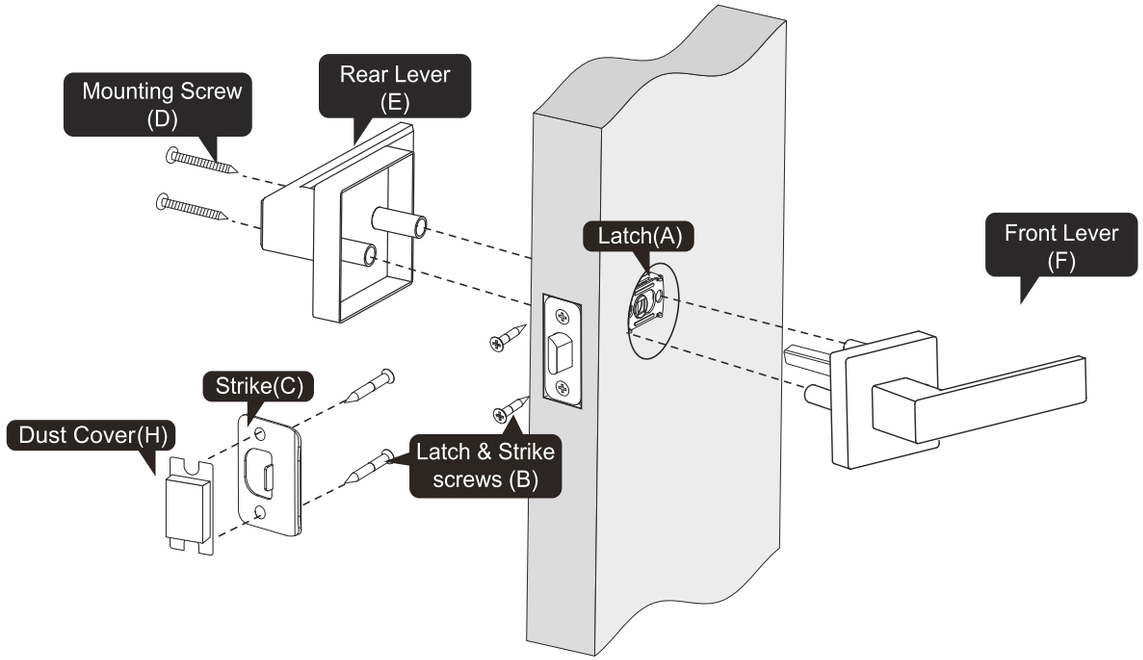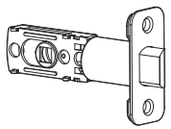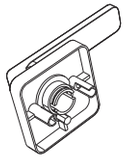

Thank you for purchasing our products. Please review this manual thoroughly before operating your device. All pictures in this manual are for illustration purpose only. Actual product may vary due to product upgrade.

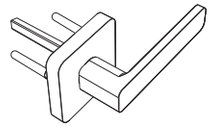


Parts list

A Latch x1 	B Latch & Strike screws x4 	C Strike x1 
D Mounting Screw x2  H Dust Cover x1(optional) 	E Rear Lever x1 	F Front Lever x1 

TOOL REQUIRED: 




Do not use an electric screwdriver during installation.

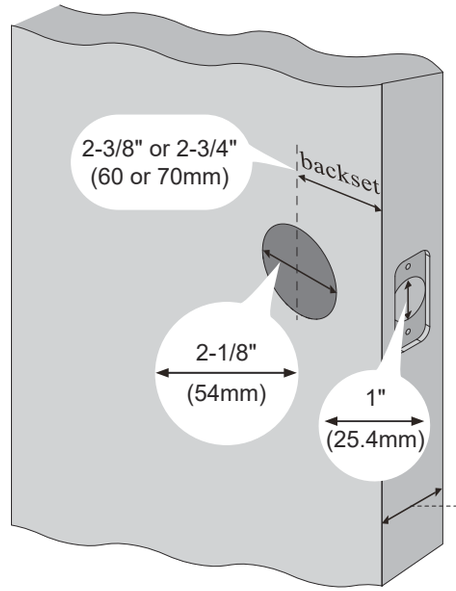


1. Prepare the door and check dimensions

Make sure the hole in the door frame is drilled a minimum of 1/2'' (12.7mm) deep, to leave enough space for the latch to extend into the door frame when the door is closed.

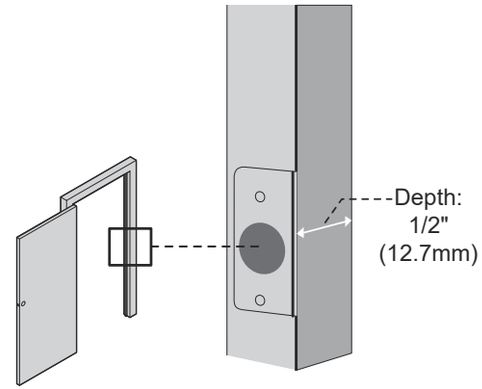


2. Latch backset adjustment

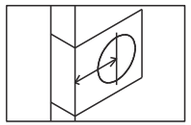


Backset is the distance from the door edge to the center of the hole in the door.

The latch is provided with adjustable design which can fit either 2-3/8''(60mm) or 2-3/4''(70mm) backset.


A. If the backset of your door is 2-3/8"(60mm), no need to adjust the latch.

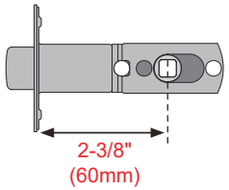


B. If the backset of your door is 2-3/4"(70mm), please adjust the latch.

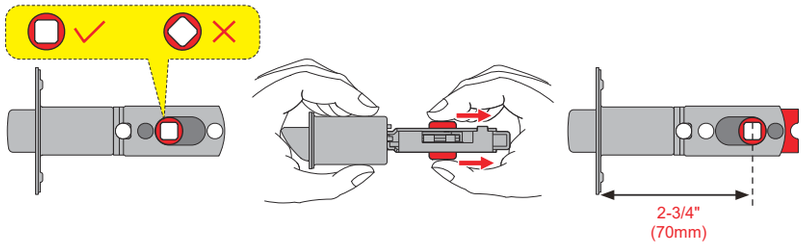


3. Install latch and strike

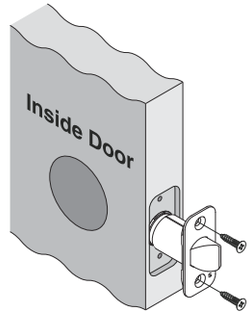


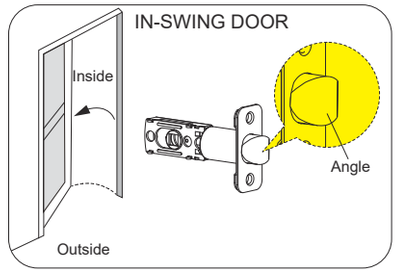

The Angle of the latch faces outside.

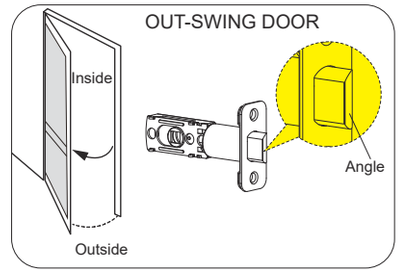


The Angle of the latch faces inside.

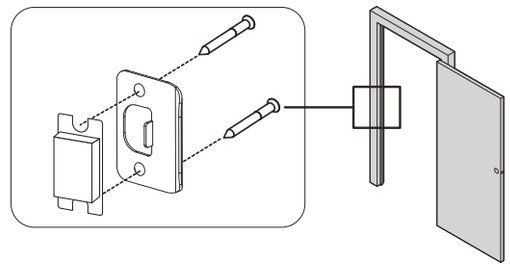

⚠IMPORTANT:
The latch should be aligned with the chiseled properly, make sure the hole in door frame is drilled a minimum of 1" (25.4mm) deep.

4. Install front and rear lever

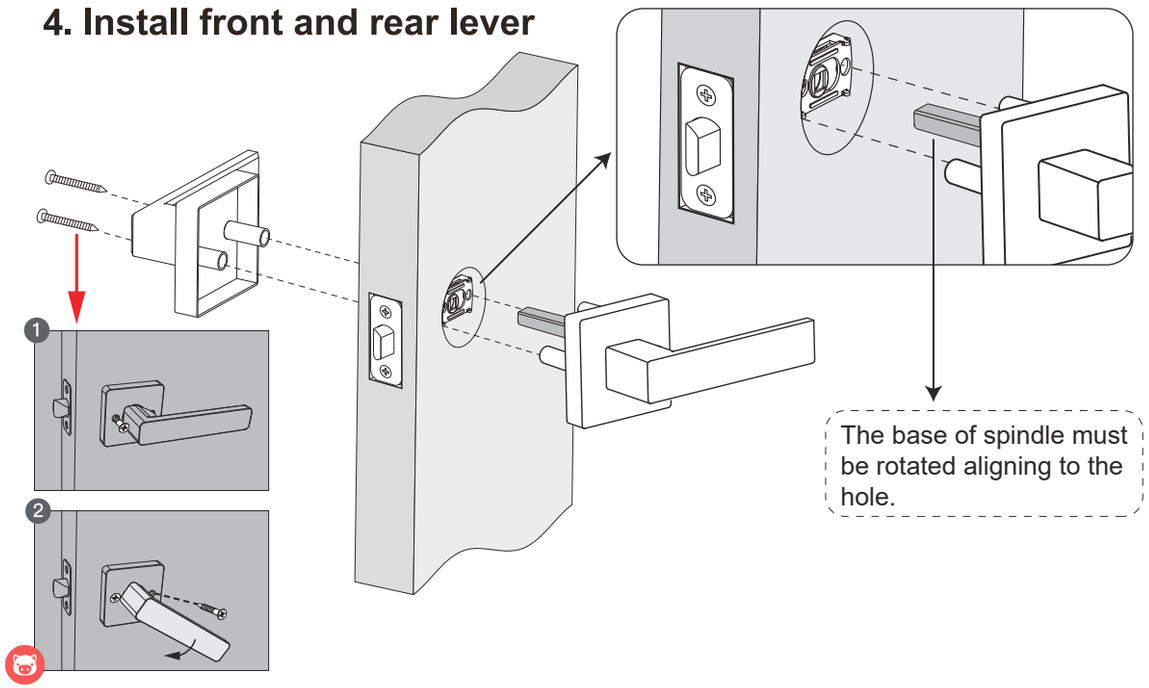

The base of spindle must be rotated aligning to the hole.

5. Test the lever

Keep the door open, checking out front and rear lever to test if it works smoothly.

