
Operation (Cont.)

- To adjust stands:
    1. Remove Linchpin and chained pin and adjust to the desired height.
    2. Place chained pin into hole location and attach the Linchpin and lock pin in.
    3. Carefully lower load onto stands.

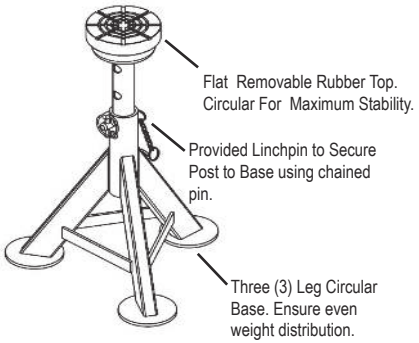



LINCHPIN:

Proper Connection of the Linchpin to the chained pin as seen above. Please make sure when receiving this product all parts are included.

NOTE: Only attachments and/or adapters supplied by the manufacturer shall be used with these jack stands. please consult with manufacturer for approved accessories for these jack stands.

Instruction Manual

4 Ton Heavy Duty
Jack Stands With Circular Pads



Read this manual and follow All Safety Rules and Operating Instructions before ANY use of this product.

CAUTION:

READ AND FOLLOW ALL WARNINGS, CAUTIONS AND INSTRUCTIONS ASSOCIATED WITH THE PROPER USE OF THIS PRODUCT, FAILURE TO COMPLY COULD RESULT IN DEATH, BODILY INJURY AND/OR DAMAGE TO EQUIPMENT.

Specifications

Model	Capacity (Per Stand)	Min. Height	Max. Height	Base Size
1	4 Ton *8,000 lbs.*	13.2” *335mm*	21.5” *546mm*	12” x12” *305mm*

Important Safety Information

Read these safety warnings before operation.

Failure to heed these markings may result in personal injury and/or property damage.

1. Study, understand, and follow all instructions before operating this device.
2. Do not exceed rated capacity.
3. Use only on hard, level surfaces.
4. Center load on saddle.
5. Use as matched pair to support one end of a vehicle only.
6. Wear ANSI-approved safety goggles and heavy-duty work gloves during use.
7. Do not use for aircraft purposes.
8. Support vehicle only at manufacturer-recommended locations.
9. Inspect before every use; do not use if parts loose or damaged.
10. Examine Jack Stands for cracks or damage before each use. Do not use if even a minor crack, bend or other damage/deformation appears. Discard Jack Stand if damaged or deformed.
11. Keep work area clean.Cluttered areas invite injuries.
12. Observe work area conditions.Keep work area well lighted.
13. Keep children away.Children must never be allowed in the work area.
14. Store idle equipment. When not in use, tools must be stored in a dry location to inhibit rust. Always lock up tools and keep out of reach of children.
15. There are certain applications for which this tool was designed. Do not modify this tool and do not use this tool for a purpose for which it was not intended.
16. Dress properly. Do not wear loose clothing or jewelry as they can be caught in moving parts. Protective, electrically non-conductive clothes and non-skid footwear are recommended when working. Wear restrictive hair covering to contain long hair.
17. Maintain tools with care. Keep tools clean for better and safer performance. Follow instructions for lubricating and changing accessories.
18. Stay alert. Watch what you are doing, use common sense. Do not operate any tool when you are tired.
19. Do not operate tool if under the influence of alcohol or drugs. Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not operate the tool.
20. Only use on proper surface. Only use the Jack Stands on a dry, level, flat surface, which is free of grease or debris. The surface to be used must be capable of supporting the combined weight of the vehicle and the Jack Stands.
21. The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.

Maintenance & Inspection

1. Visual Inspection shall be made before each use of the stands, checking for cracks, cracked welds and missing and / or damaged parts. Any stand that appears to be damaged in any way should be removed from service immediately.

2. Because of the potential hazards associated with the misuse of equipment of this type, no modifications should be made of the product without consent from manufacturer.

Operation

ALWAYS chock the wheel(s) opposite where you are lifting. Use recommended (2) wheel chocks in front and behind the wheel(s) to keep vehicle from shifting forward/backward.

- Refer to your vehicle owner’s manual for proper jacking procedures. Lift only on areas of the vehicle specified by the vehicle manufacturer.



NOTE: If only supporting one corner of the vehicle, place jack stand under the manufacturers recommended jacking point and adjust the height and lock in with the pin/linchpin.

SUPPORTING FRONT/REAR END:
If supporting the front or rear end of a vehicle, **ALWAYS** use jack stands in a pair locked and at the same height. **DO NOT** use any other materials such as wood, steel, etc. to gain extra height when supporting vehicle.

LIFTING ENTIRE VEHICLE:
If lifting the entire vehicle, support the front end first. Then, using a matching pair locked and set to the same height, lift the back end of the vehicle.

- Position stands under vehicle at points specified by the vehicle manufacturer as proper load support points.

ALWAYS inspect the vehicle load and jack stands to make sure that the jack stand(s) is/are positioned flat on the ground on all three sides and the vehicle **DOES NOT** shake or tilt while supported.



NOTE: Jack stands are **NOT** to be used as a permanent lifting/stability solution and are **ONLY** to be used during the repair of vehicle. **DO NOT** leave vehicle on jack stand(s) for an extended period. This may lead to damage to jack stand(s), vehicle, and/or worse possible harm/death.