Get Started!



Stay & Play® Wireless Fence with Replaceable Battery Collar

Before we begin

As you set up your new wireless fence, keep in mind:

This product creates a wireless play area for your pet to explore.

The transmitter emits a radio signal in a 5 to 105 foot radius in all directions, creating a circular boundary called the pet area.

Small flags will visually reinforce where the boundary zone is. Once your dog is properly trained, you will be able to remove the flags and allow your dog to roam freely in the pet area.

If your dog roams outside the pet area, the receiver collar sounds a warning tone, then delivers a safe static correction through the contact points. The correction is designed to get your dog's attention and prompt him to return to the safety of the pet area.

It may take a few tries to set up your transmitter.

The transmitter is the source of the radio signal and will always be at the exact center of the pet area. It should be placed off the floor in your home, away from any large metal objects. You may need to move the transmitter a few times before you find the best spot.

It is important to keep your pet comfortable and safe.

Avoid leaving the receiver collar on your dog for more than 12 hours a day. Before beginning, please read this guide and the customer care guide thoroughly for important safety information about how to fit and use the receiver collar.

Take care to choose the best correction level for your pet's temperament. Many dogs respond well to tone-only correction after proper training.


This product limits static correction duration to 15 seconds to prevent over-correction. In the unlikely event your pet leaves the pet area, he will not receive a static correction upon his return.

Training time may vary from pet to pet.


Properly training your pet is essential to the success of the wireless fence. The training guide included with this product will walk you through our recommended training method.

Keep your best friend safe on his home turf.


What you have

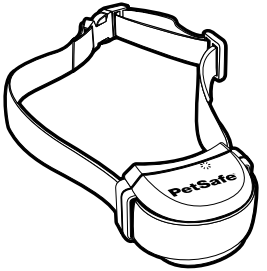

Receiver collar
with short contact points

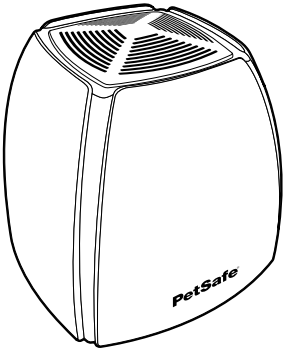


Transmitter

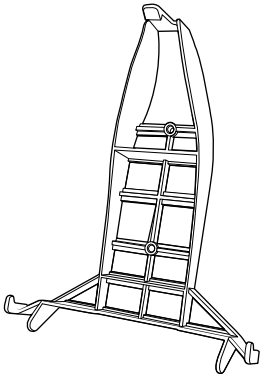


Mounting bracket
(comes attached to transmitter)



Mounting screws



Mounting anchors

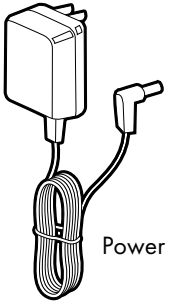

Power adaptor



RFA-67 battery
(placed in receiver collar)



Test light tool



Long contact points



Contact point
wrench




Boundary flags

What you need

- Screwdriver
- Scissors
- Lighter
- Tape measure
- Non-metallic collar and leash

1

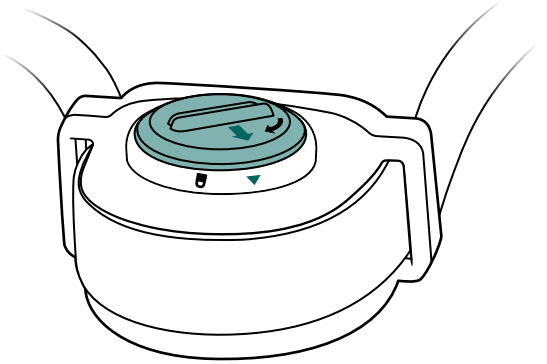


Locate the battery on the underside of the receiver collar. The arrow on the battery should be lined up with the triangle on the receiver collar.

In this position, the battery is installed but is not yet locked in place. This prevents the battery from draining prior to purchase.

Important: Always remove the receiver collar from your pet before installing or replacing the battery.


2

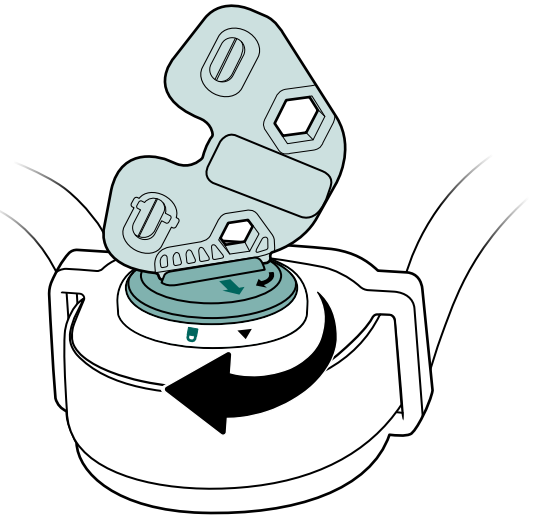

Using the edge of the test light tool, rotate the battery clockwise until the arrow on the battery lines up with the lock symbol on the receiver collar.

The battery is now locked in place and powering the receiver collar.


3

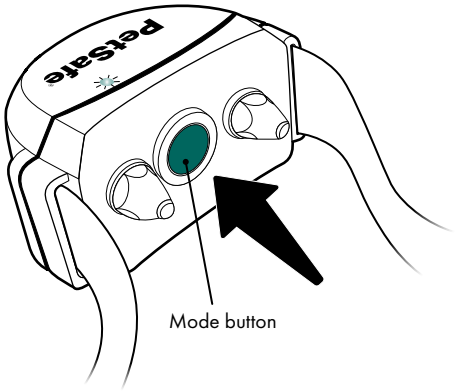

Turn the receiver collar on by pressing and holding the mode button for 5 seconds.

The indicator light will glow for 5 seconds (green or red to indicate battery status), and then will emit a series of red flashes representing the current static correction level.

4

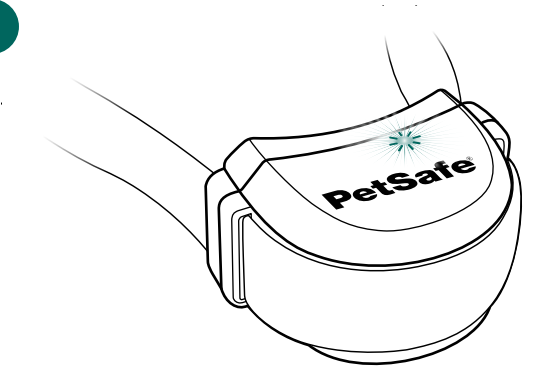


Indicator light	Meaning
Green, 5 seconds continuous or slow blinking (every 4 to 5 seconds)	The battery has sufficient charge.
Red, 5 seconds continuous or slow blinking (every 4 to 5 seconds)	The battery charge is low; replace the battery.
Red, quick flashing	The number of flashes reveals the current correction level: 1 flash = Tone only 2 flashes = Low static 3 flashes = Med-low static 4 flashes = Medium static 5 flashes = Med-high static 6 flashes = High static

To determine the correction level, press the mode button once and then count the red flashes (1 flash = level 1, 2 flashes = level 2, and so on).

To increase the correction level, press the mode button once to view the current correction level, then press the mode button again within 5 seconds. Each time you press the mode button within 5 seconds of the previous set of flashes, the correction level increases by one. The levels increase from 1 to 6, and then start over at 1.

We recommend setting the correction to level 2 (low static) or above for setup.

5

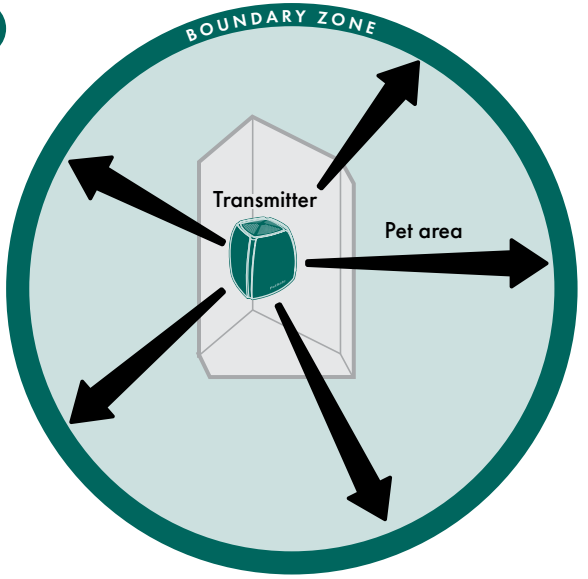


Use our wireless fence planner at **petfenceplanner.petsafe.net/wireless** to get a good idea of where to place the transmitter in your home and to see how large a pet area you will need.

If your neighbors use an in-ground fence™ system or robotic lawn mower, you may need to reduce the pet area or move the transmitter to minimize interference.

Make sure the transmitter is:


- On the ground level of your home, in a dry, well-ventilated area where temperatures do not go below 15°F or above 104°F.
- At least 2 feet above the floor, mounted to a wall or placed on a non-metal table or other hard surface to ensure proper ventilation.
- At least 3 feet from any large metal objects; these may affect the size and shape of the pet area. Placing the transmitter in a metal building, shed, or home with a metal roof can reduce its maximum range.

6

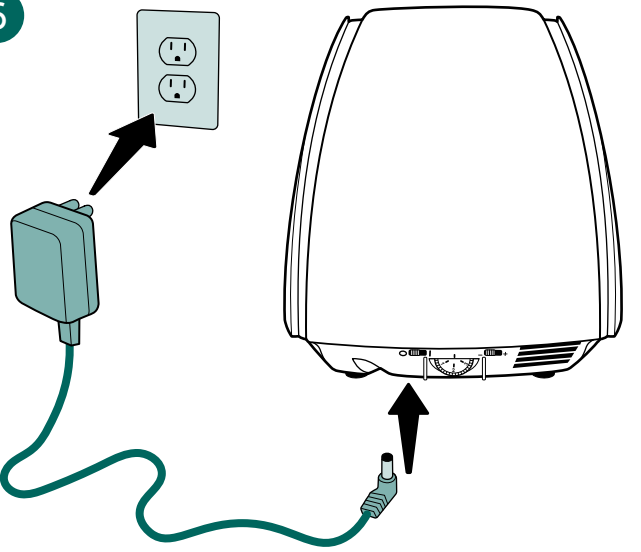

Plug the power adaptor into a wall outlet, then insert the other end into the power jack on the underside of the transmitter.


7

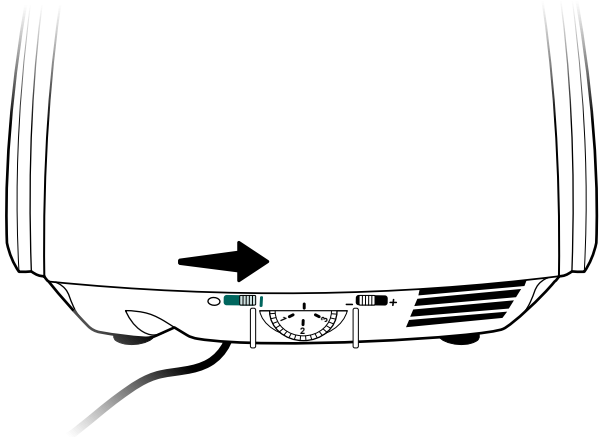

At the back of the transmitter, slide the power switch to the on (I) position.

The light on the front of the transmitter glows blue when the transmitter is powered on and functioning correctly.

8

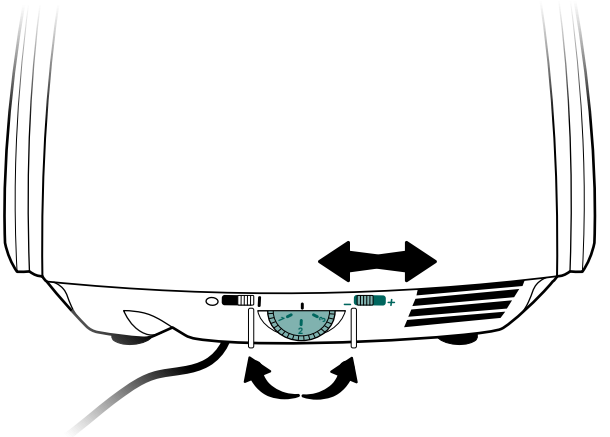


Referring to the table below, set the boundary switch and boundary control dial as needed to achieve the desired pet area radius:

Boundary control dial setting	Pet area radius, with boundary switch set to:	
	– (low)	+ (high)
1	5 feet	5 feet
2	10 feet	20 feet
3	15 feet	35 feet
4	20 feet	50 feet
5	25 feet	65 feet
6	30 feet	80 feet
7	40 feet	95 feet
8	50 feet	105 feet

You can determine this radius using the online fence planner tool, or by measuring the distance between the transmitter and the nearest edge of your planned boundary zone.

9

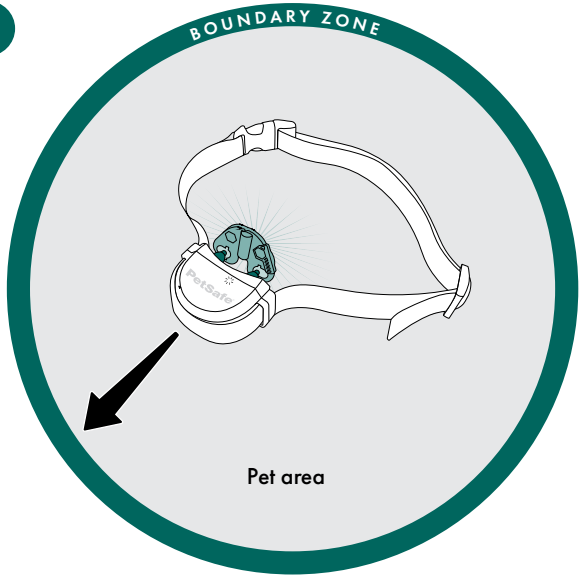


Once your boundary is set, it's important to walk your yard and make sure the pet area lies within your boundaries and stops at least 10 feet away from any danger zones like roadways. The easiest way to do this is to use your receiver collar and test light tool.

Make sure that the transmitter and receiver collar are on and that the receiver collar is set to correction level 2 or above.

Hold the test light tool contacts to the receiver collar contact points. Walk toward a critical point in your yard, holding the receiver collar about waist high, until the receiver collar emits a warning tone and the test light tool flashes.

Repeat this process at every critical point, adjusting the boundary settings or moving your transmitter as necessary.

10

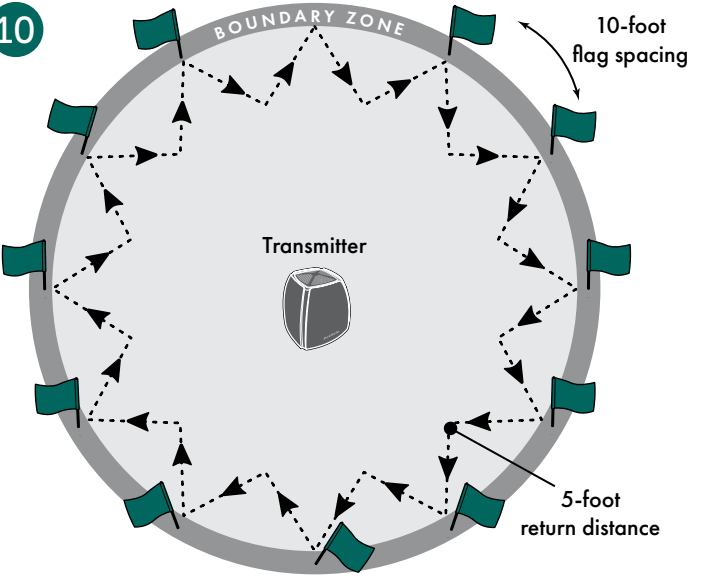


Now that you've made the necessary adjustments to your pet area, it's time to place the boundary flags. These flags will act as a visual aid for your dog during the training phase.

Hold the test light contacts to the receiver collar contact points and walk toward the boundary zone while holding the collar at waist height. As soon as the collar beeps, stop and place a boundary flag in the ground. Walk back into the pet area until the collar stops beeping (approximately 5 feet).

Repeat this process around the boundary zone until it is marked with flags at least every 10 feet. The more flags you place, the easier it will be for your dog to see where the boundary zone is.

11

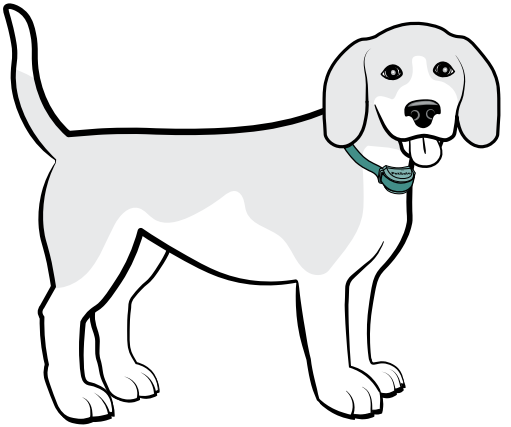


Turn off the receiver collar by pressing and holding the mode button for 5 seconds. With your pet standing comfortably, place the receiver collar around your dog's neck. The PetSafe® logo should be facing up, and the contact points should be centered directly under your dog's chin, touching his skin. If your dog has long or thick hair, it may be necessary to switch to the long contact points provided or trim (not shave) the hair around the contact points.

Check the tightness of the receiver collar by inserting one finger between the end of a contact point and your dog's neck. The fit should be snug but not constricting.

Once you are satisfied with the fit of the receiver collar, remove it from your pet and trim it (making sure to allow room for growth or a thicker winter coat). Seal the edge of the cut collar by applying a flame along the frayed edge.

Important: Check the receiver collar fit frequently. Take the receiver collar off when your dog is not using it.

12

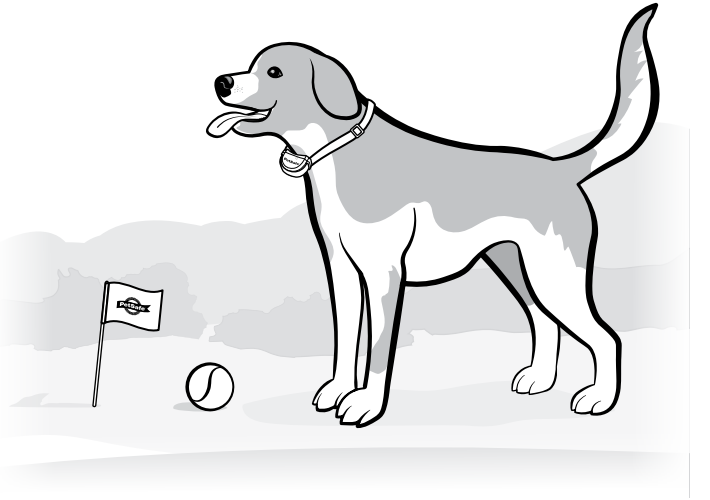

Now that your wireless fence is up and running, it's time to train your pet. The first two weeks of training are the most important. We have provided a training guide to make the training process quick, easy and fun for you and your pet. With a little time and a lot of praise, your pet will learn to roam freely within the pet area (while avoiding the boundary zone).

Whether your pet loves rolling on his back in the grass or playing a game of fetch, the PetSafe® Stay & Play® Wireless Fence with Replaceable Battery Collar will give him the freedom to safely enjoy the great outdoors.


Set your pal on the path to success with some fun, consistent training.

Additional helpful information

Mounting the transmitter

Once you have tested your fence system and are confident you have chosen the best transmitter location, you can wall mount the transmitter if desired.

1

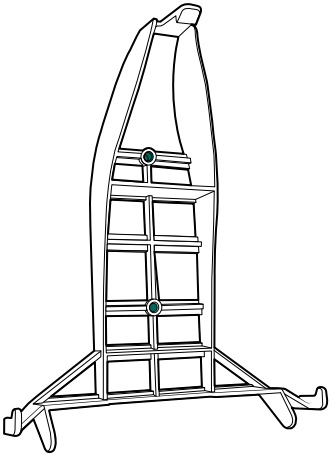


Hold the mounting bracket against the wall and mark the hole locations.

Drill holes for the mounting screws or anchors. If you are mounting the transmitter:

- Directly to wall studs, drill 1/16-inch pilot holes for the screws. You will not need to use the provided anchors.
- In drywall, drill 1/4-inch holes in the marked locations and insert an anchor into each hole.

Screw the bracket to the wall using the screws provided.

2

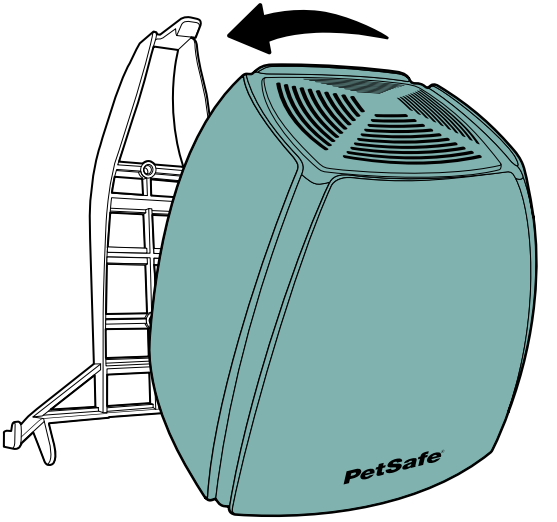


Place the bottom edge of the transmitter against the bracket, making sure the screw recesses are over the bracket hooks on both sides.

Rotate the transmitter up and push firmly until the top latch locks into place.

Replacing the receiver collar battery

When the receiver collar indicator light starts blinking red every 4 to 5 seconds during operation, it's time to replace the battery:


1

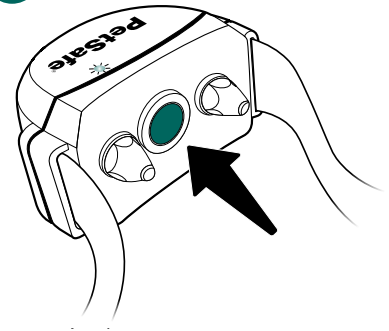

Remove the receiver collar from your pet.


Discharge all power by pressing and holding the mode button for at least 30 seconds, until the indicator light is no longer illuminated.

2

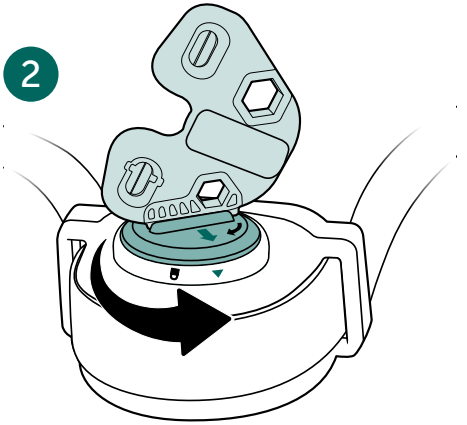

Use the edge of the test light tool to turn the battery counterclockwise and release it from the receiver collar.

3

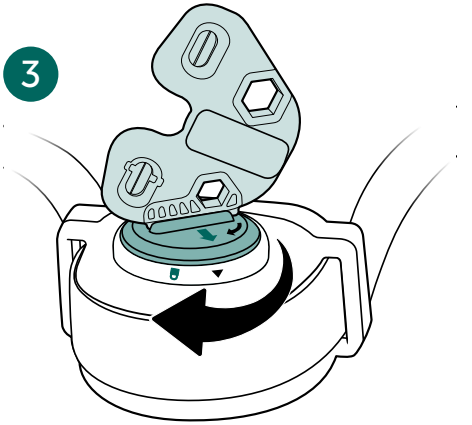

Insert the new battery, lining up the arrow on the battery with the triangle on the receiver collar.

Use the edge of the test light tool to turn the battery clockwise until the arrow on the battery lines up with the lock symbol on the receiver collar.

Resolving a power loss alarm

The transmitter has a built-in power loss alarm that will emit an intermittent tone for at least 20 minutes if the transmitter loses power. If you hear this alarm, it means that your boundary is no longer active, and your pet is no longer being contained. Before attempting to resolve the alarm, make sure your pet is secure and safe within your home.

Once you're sure your pet is secure, resolve the alarm by ensuring the power adaptor is connected properly and is plugged into a functioning power source. If the alarm is due to an ongoing power outage, you can stop the intermittent tone by unplugging the power adaptor from the bottom of the transmitter — but remember to plug it back in once power is restored.

Understanding the receiver collar lights and tones

The table below explains the indicator lights and audible tones you will notice if your pet approaches or passes the boundary:

Receiver collar activation status		
Indicator light	**Audible tone**	**Meaning**
Green, fast pulsating (3 flashes per second)	Warning tone	Your pet is receiving a warning tone.
Red, fast pulsating (3 flashes per second)	Tone for duration of static correction	Your pet is receiving a static correction (up to 15 second duration).
Green, continuous (10 seconds)	No tone	Over-correction protection has been activated and the receiver collar is locked for 10 seconds.

Let us help!

For questions or additional tips:

+1 (800) 732-2677

petsafe.com

©2021 Radio Systems Corporation | Models: PIF00-15001 | YU400-2560

For important safety instructions, please see the customer care guide.