
DOG TRAINING COLLAR

MODEL KT47

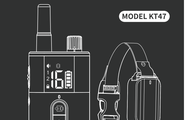

MANUAL

COMPONENTS



OVERVIEW

Handheld Remote

OVERVIEW

Screen

Receiver

CHARGING

▲ Note:

Charge for more than 4 hours before first use. Thereafter, do not exceed 3 hours each time to avoid damaging the battery.

1.Charge the Remote

Charging status: The screen displays the power charging progress bar.
Low battery indication: The red light keeps flashing.

2.Charge the Receiver

Charging status: The indicator shows red, if it turns from red to green, it means charging is completed.
Low battery indication: The red light keeps flashing.

TURN ON/OFF THE REMOTE AND RECEIVER

▲ Note:

The remote and receiver are already paired by default. If disconnected, re-pair manually. Refer to **Page 6 "MANUAL PAIRING"** section.

Turn on/off the Remote

Turn the knob clockwise to turn on the remote.

Check the battery status on the screen, if the battery level is low, please charge in time.

Unlock to start using.

Note: Remember to turn off the knob when not in use to extend the battery life.

Turn on/off the Receiver

Press the button to turn on the receiver. The receiver will emit a beep and vibrate signal,and the green indicator flashes once.

Re-press the button to turn off the receiver. The receiver will emit a long beep signal.

Note: If there is no operation within 15 seconds, the receiver will automatically enter sleep mode to save power. You only need to press any button on the remote to wake it up.

Note: Remember to turn off the collar when not in use to extend the battery life.

MAIN FEATURES

Beep Feature

Receiver delivers a beep signal to your dog (adjustable tone).

The beep icon on the screen flashes, and the indicators on the remote and receiver light up green simultaneously.

Vibration Feature

Receiver delivers a vibrating signal to your dog.(Adjustable vibrating intensity:1-16 levels)

The vibration icon on the screen flashes, and the indicators on the remote and receiver light up green simultaneously.

Intensity Adjustment
Rotate the knob to adjust the intensity from 1 to 16 levels.

Beep & Vibration Feature

The receiver delivers beep and vibration signals to your dog at the same time.

The beep and vibration icons on the screen flash, and the indicators and the indicators on the remote and receiver light up green at the same time.

Intensity adjustment is consistent with the "Vibration Feature" section above.

MANUAL PAIRING

This product work through a wireless signal. Only after successful pairing, the remote and the receiver can work together. If the remote and receiver lose contact due to interruption of the pairing signal, re-pair them manually.

Note: Please make sure the remote and receiver batteries are fully charged.

1.Turn on the remote and receiver.

2.Press and hold the power button on the receiver for 3 seconds until the red and green lights flash alternately, which means indicating that the pairing state is entered.

MANUAL PAIRING

3.Press the beep and vibration buttons at the same time during the red and green lights flash alternately 5 times.

4.When a long beep and vibration signal are emitted, pairing is complete.

MANUAL PAIRING

5. Test whether the pairing is successful: press any feature button on the remote, the receiver will send out a corresponding signal.

Test Beep & Vibration Function

Test Beep Function

Test Vibration Function

CHANGE CHANNEL

▲ Cautions

If you purchased one remote and one collar: channel 1 is locked by default to prevent disconnection of the remote and receiver due to mis-touch the channel button.

If you purchased one collar remote and two collars: channels are assigned by default: One remote can control 2 dogs at the same time by switching channel 1 and channel 2.

How to change the channel?

Press and hold the channel button on the left for 5 seconds until the numbers "1" and "2" on the screen flash simultaneously, after 3 flashes you can press the channel button again to select the channel.

Note: After you select a channel, the channel will not be locked and you can switch channels at will.

CHANGE CHANNEL

NEXT

If you want to lock the channel, press and hold the channel button for 5 seconds until the numbers "1" and "2" and the security lock on the screen flash simultaneously, after 3 flashes the channel is locked.

MAIN FEATURES

MAINTENANCE

Battery Maintenance

1. Do not place the product in an high temperature environment (over 60 °C)for long time, which may cause an explosion and result in a major security incident.
2. Do not disassemble, remember place the product in a dry environment like other electronic devices.
3. Charge regularly to avoid battery damage due to over-discharge if don't used for a long time.
4. Please unplug the power soon after a full charge, do not exceed 3 hours.
5. Each charging time takes about 2 hours, but the first charge is at least 4 hours.
6. When the battery is damaged, please do not repair or disassemble it by yourself.

Tip: When not using the product, remember to manually turn off the remote and receiver.

COMLIANCE

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Modication or changes to this equipment not expressly approved by Radio Systems Corporation may void the user' s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specic installation. If interference does occur to radio or television reception, which can be determined by turning the equipment o and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit diverent from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help."

CUSTOMER SERVICE

support_sodog@163.com