Gateway DMP-X series user's guide update

This document includes new and updated procedures for your DMP-X series jukebox.

New Procedures

Resetting the jukebox

If the jukebox does not respond when you press a button, you may need to reset the jukebox.

To reset the jukebox:

- Hold down on the |◀, MENU, and MODE buttons at the same time.

Downloading music from Napster

To download music from Napster:

1. Use the Napster program to download files to your computer's hard drive.
2. Use Windows Media Player to copy the files to your jukebox.

Updated Procedures

Transferring music to your jukebox

When you connect your jukebox and computer with the provided USB cable, the computer recognizes your jukebox as an external hard drive. This means that you can copy a file by selecting the Gateway DMP jukebox directly from within Windows Media Player.

Important

If you transfer files with Windows Explorer instead of Windows Media Player, you must reconcile the files before your jukebox can play them. Open Windows Media Player and when prompted to reconcile, click **Yes**.

To use Windows Media Player to transfer music between your jukebox and computer:

1. If you have not already installed the Windows Media Player plug-in from the *Gateway DMP-X series* CD, do so now. For more information, see "Installing the Windows Media Player plug-in" in your user's guide.
2. Connect your jukebox to your computer by following the instructions in "Connecting the USB cable" in your user's guide.

Important

You **must** connect the jukebox to your computer before starting Windows Media Player.

3. Click **Start**, **All Programs** or **Programs**, then click **Windows Media Player**. The Windows Media Player opens.

4. Click **Copy to CD or Device**. The *Select Items to Copy* screen appears.



5. Use the *Items to Copy* pane to locate the music you want to copy from your hard drive, then make sure that the check box next to each title you want to copy is selected.

6. Click the arrow button to open the **Items on Device** list, then click **DMP-X20**.
7. Click **Copy**.

Important

Do not click any titles below the Items on Device list before clicking copy. If you do, Windows Media Player may not be able to copy the files to your jukebox.

8. After you copy the music files to your jukebox, disconnect your jukebox from your computer by following the instructions in "Disconnecting the USB cable" in your user's guide.

Adding a song, album, or artist to a playlist

The jukebox can store up to 20 playlists. Each playlist can hold up to 4000 songs.

To add a song, album, or artist to a playlist:

1. With the song playing, press the scroll wheel.
2. Highlight **Add Track to Playlist**, then press the scroll wheel to select it.

   -OR-

   Highlight **Add Album to Playlist**, then press the scroll wheel to select it.

   -OR-

   Highlight **Add Artist to Playlist**, then press the scroll wheel to select it.

3. Highlight a playlist to add the track to, then press the scroll wheel to select it. The track, album, or artist is added to the selected playlist.

   -OR-

   Highlight **Create New Playlist**, then press the scroll wheel to select it. Use the scroll wheel to select the first letter of the playlist name, then press ►►. Continue using the scroll wheel to select additional letters of the playlist name, then press ►► after each letter. Press the scroll wheel when you have finished entering the new playlist name. The track, album, or artist is added to the new playlist.

You can also create playlists in Windows Media Player. For more information, see "Creating Playlists" in your user's guide.

Playing a playlist

To play a playlist:

1. Press the MENU button.
2. Highlight **Playlist**, then press the scroll wheel to select it.
3. Highlight a playlist in the Playlist submenu, then press the scroll wheel to select it.
4. Highlight a song in the Playlist list, then press ►II to play it. When the song is finished, your jukebox automatically plays the next song in the playlist based on the Play mode set. For information about setting the Play mode, see "Changing the Play mode" in your user's guide. The track, album, or artist is added to the selected playlist.

Listening to FM radio

To listen to FM radio:


1. Attach the remote control to your jukebox.

Important

If you cannot receive any FM stations, make sure the remote control is connected to the jukebox. The FM antenna is built into the remote control.

2. Attach the headphones to the remote control.

3. Press the MODE button to go to FM Radio mode.

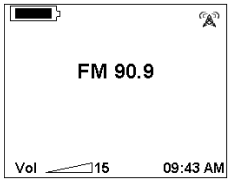

4. Use the control panel and tune to an FM station or select a preset station.

MAN UPD RX 11/03