aiwa®

2.1CH CINEMATIC SOUNDBAR

AWTK-2047



Instruction Manual

aiwa®

Japan est1951


Contents

IMPORTANT SAFETY INSTRUCTIONS..... 1
CONTENTS OF BOX..... 2
PRODUCT OVERVIEW..... 3
CONNECTIONS..... 4
SOUNDBAR SET UP..... 4
POWER ON INSTRUCTIONS..... 5
DISPLAY INDICATIONS OF AUDIO MODES..... 5
BLUETOOTH MODE..... 5
HDMI(ARC) MODE..... 5
AUX MODE..... 6
OPTICAL MODE..... 6
USB MODE..... 6
COAXIAL MODE..... 6
FM MODE..... 6
REMOTE COMPONENTS AND FUNCTIONS..... 7
TROUBLESHOOTING..... 8
TECHNICAL SPECIFICATIONS..... 9

IMPORTANT SAFETY INSTRUCTIONS ⚠ Attention!

Please read this manual carefully before use and keep it for future reference.

1. The soundbar is non dust proof and waterproof.
2. In order to reduce the risk of fire and electric shock, do not expose the soundbar to rain and fog.
3. The soundbar should work under specified rated power supply.
4. Do not cover the top panel of soundbar, It has inbuilt bass speakers.
5. Regularly clean the dust, Clean only with dry cloth.
6. Do not use the soundbar in greasy, damp, dusty or smoky environment. Oil or chemicals will cause malfunction.
7. Please handle with care during daily use.
8. Please cut off the power if the soundbar is out of use for long time.
9. Non-professionals are forbidden to disassemble the soundbar for testing.
10. This device is not intended to use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
11. This product is intended for indoor, household use only and not for commercial or industrial use.
12. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pool.
13. Do not use this device when condensation may occur.
14. Avoid placing the device on any surfaces that may be subject to vibrations or shocks.
15. The apparatus shall not be exposed to dripping or splashing. Make sure that no objects filled with liquids such as vases are not placed on or near the apparatus.
16. Do not use or store this product in a place where it is subject to direct sunlight, heat, excessive dust or vibration.
17. Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
18. Attention should be drawn to the environmental aspects of battery disposal. Batteries shall not be exposed to excessive heat such as sunshine or fire.
19. The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
20. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

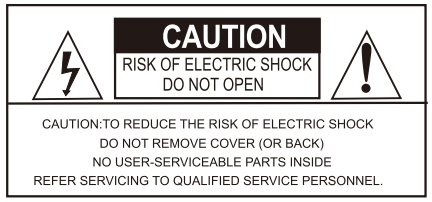






21. Please pay attention to important information related to the operation and maintenance of the soundbar. You should read this information carefully to avoid problems. Following safety instructions will increase the life of soundbar.
22. Please consult qualified personnel for installation and repair services, and do not use damaged wires, accessories and other peripherals.
23. Soundbar should be kept away from flammables, explosives, strong electromagnetic interference (large radar stations, power stations, substations), strong ambient light (avoid direct sunlight), etc.
24. Please use the original accessories specified by seller/manufacturer.
25. Keep adequate ventilation and make sure soundbar is not covered to avoid soundbar overheating.
26. Unplug this apparatus during lightning storms or when unused for long periods of time.
27. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture and it does not operate normally, or it has been dropped etc.
28. Do not bend or drag the power cord.
29. Do not put power cord under soundbar or any heavy objects.
30. Do not heat the power cord.
31. Avoid touching power cord with wet hands.

CONTENTS OF BOX:

1 X Soundbar
1 X AUX Cable
1 X Remote Control
2 X AA Battery
2 X L Shape Wall Bracket
8 X Screw
8 X Plastic Expansion
2 X Double Side Adhesive EVA pad
1 X Quick Start Guide


PRODUCT OVERVIEW

Soundbar Key Button Description

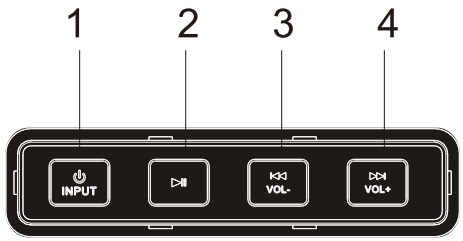


1. POWER / INPUT Button:
Press and hold to turn on the unit or switch it to standby.
(ON/OFF Switch on rear panel must be set to on)
Press to switch between available audio sources (USB / BT / OPTICAL / HDMI(ARC) / AUX / FM / COAXIAL) .
2. PLAY/PAUSE / SCAN Button:
Press to play or pause music.
In FM mode, press to scan available audio channels.
3. PREVIOUS / VOLUME – Button:
Press to play previous song.
Press and hold to reduce volume.
4. NEXT / VOLUME + Button:
Press to play next song.
Press and hold to increase volume.

Soundbar Rear Side Connection Description

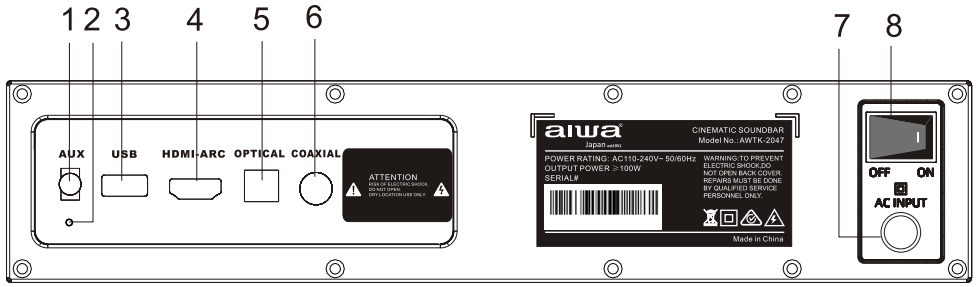


1.AUX
2.FM ANTENNA WIRE
3.USB
4.HDMI(ARC)
5.OPTICAL
6.COAXIAL
7.AC INPUT
8.POWER SWITCH

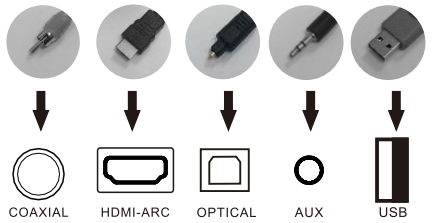

CONNECTIONS


- Choose one of these inputs to connect the soundbar to the TV (or other digital player): HDMI (ARC), AUX, OPTICAL Or COAXIAL.

  Note: To use HDMI (ARC), your TV must have an HD input with ARC capabilities. Check your TV user manual for details.

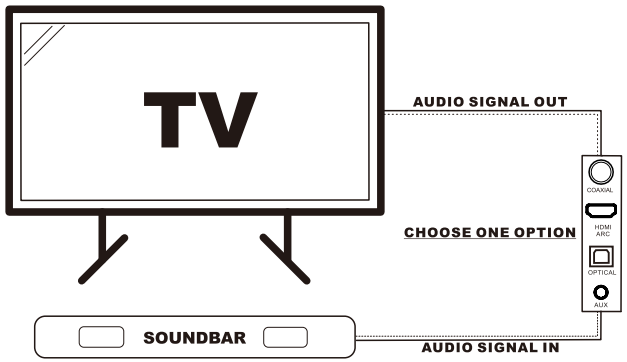

SOUNDBAR SET UP

- Place the soundbar on a flat surface in front of a non-wall-mounted TV or on wall-mounted brackets under a wall-mounted TV. Shown in Figures (a) and (b)
- Use wall bracket accessories provided with the soundbar for wall mount installation.
- Make sure to install wall brackets properly, improper installation can lead to damage to soundbar or wall. Take reference from the below-shown figure (b).
- Leave sufficient gap between the soundbar and the wall to ensure optimal sound output and good air flow around the unit.
- Do not place inside a cabinet.

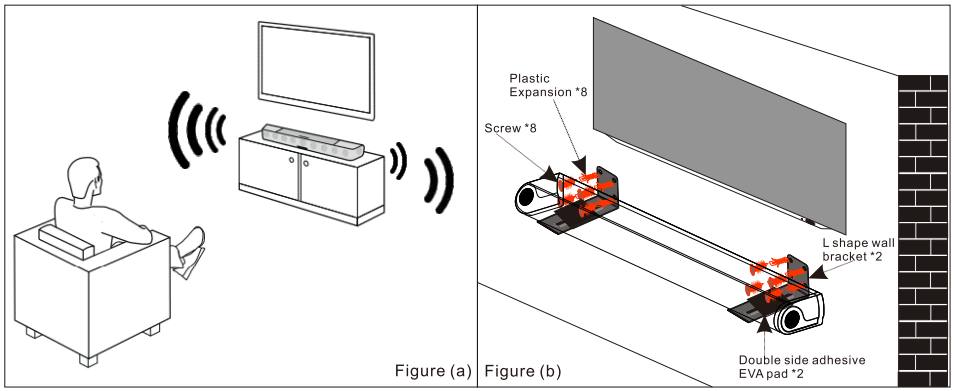

POWER ON

- Connect the soundbar to the power supply.
- Set the ON/OFF Switch on the rear of the soundbar to the on position.
- Wait for the soundbar power indicator to light up to standby mode.
- Press the "Power" button on the soundbar or the remote control to turn on the device.
- Once the soundbar power is on it will go to default connected audio source. If USB is connected then it will resume from the last played music file.

DISPLAY INDICATIONS OF AUDIO MODES

USB	HDMI (ARC)	COAXIAL	BLUETOOTH	AUX	OPTICAL	FM RADIO

BLUETOOTH MODE

- Turn on the soundbar and press the INPUT button(or MODE button on Remote Control) to switch to BLUETOOTH mode.
- Blinking of BT in Display refers to search of audio input device for pairing.
- Search for bluetooth name **Aiwa_AWTK-2047** in your audio device and connect with soundbar.
- When successfully paired, You will hear a tone and the LED Display will stop blinking.
- “PAIR” button on remote control refers to instant disconnect with paired device and search for new bluetooth connection. It can also reconnect with same device by pressing it again if there is no new device connected.

HDMI(ARC)MODE

- The soundbar supports HDMI(ARC) with Audio Return Channel (ARC).
- If your TV has a HDMI(ARC) input, you can listen to TV audio on your soundbar when connected using an HDMI(ARC) cable.
- Use a high-speed HDMI(ARC) cable, Connect one end of HDMI(ARC) Cable to the soundbar and the other end to the TV, (ARC might be labelled differently. For more details, see the user manual of your TV). Once the HDMI(ARC) is connected, the TV sound setting in "sound output" mode should be set as <external PCM Stereo> or similar.
- In addition, Digital should be set as <automatic> or <decoded output as PCM state> or similar.
- Press the INPUT button on the unit (or MODE button on remote control) to select HDMI(ARC) mode. Please refer to your TV user manual to select the correct slot.
- To connect devices such as a TV/Set-top box/DVD/Game console with HDMI(ARC) cable, set the audio output mode to <digital HDMI(ARC) output> or similar.

AUX MODE

- Connect the soundbar to your PC, tablet, smart phone, TV or other device using 3.5 mm Jack AUX audio cable.
- Short press the INPUT button (or MODE button on remote control) to switch to AUX mode.
- In this mode, playback can only be controlled from your connected device.

OPTICAL MODE

- Connect the soundbar to your Audio device using optical cable.
- Switch to OPTICAL mode by using INPUT button (or MODE button on remote control).
- In this mode, Playback can only be controlled from your connected device.

USB MODE

- Insert USB flash drive to soundbar to play audio files.
- Switch to USB mode by using INPUT button (or MODE button on remote control).
- It can only play MP3, WAV, WMA music formats.
- Make sure the USB drive has only audio files. Maximum size of USB device that can be connected is 128GB.
- It is better to format USB drive before transferring audio files to play smoothly.


COAXIAL MODE

- Connect the soundbar to your Audio device using COAXIAL cable.
- Switch to COAXIAL mode by using INPUT button (or MODE button on remote control).
- In this mode, Playback can only be controlled from your connected device.

FM MODE

- Use the INPUT button (or MODE button on remote control) to switch to FM mode.
- Leave the FM antenna wire on rear panel open for better signal.
- Use Play/Pause button to scan for available channel and Previous/Next buttons to switch to previous/next channel.

REMOTE COMPONENT AND FUNCTIONS

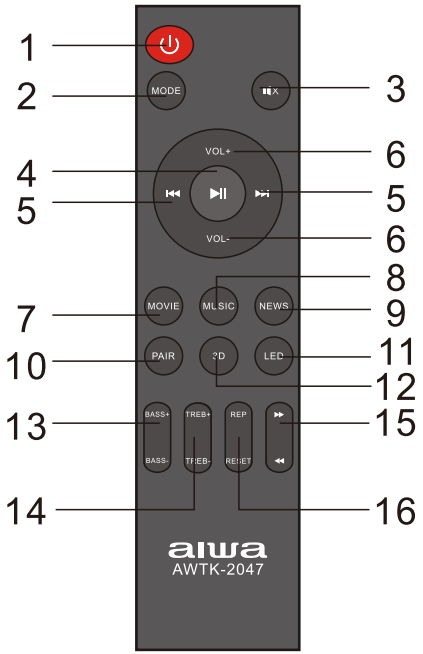


1.Power Button: Turn on the unit / switch it to standby.
(ON/OFF Switch on rear panel must be set to on)
2.MODE: Switch between available audio sources
(USB/ BT / OPTICAL / HDMI(ARC)/ AUX / FM / COAXIAL)
3. MUTE: Press to mute or restore sound
4. ⏯ To Play/Pause music
5. ⏭/⏮ :To select previous/next music file.
6.VOL+/VOL- : To adjust the volume.
7.MOVIE: Select movie mode.
8.MUSIC: Select music mode
9.NEWS: Select news mode.
10.PAIR: Disconnect/Reconnect
the paired bluetooth device
11.LED: Press to turn off / turn on display screen.
12.3D: Select 3D mode.
13.BASS+/BASS- : Adjust the bass intensity
14.TREB+/TREB- : Adjust the treble intensity.
15.⏪/⏩ Search fast forwards and backwards
16.REP: Select a play mode
(for USB mode only) repeat one or repeat all.
RESET : Reset all music settings.

BATTERY INSTALLATION

The remote control uses 2x'AA' batteries. Ensure correct polarities when inserting or replacing batteries.
Open the battery compartment; insert 2x'AA' batteries ensuring correct polarities; then close the battery compartment.

Note: Remove batteries if the remote will not be used for a long period of time.

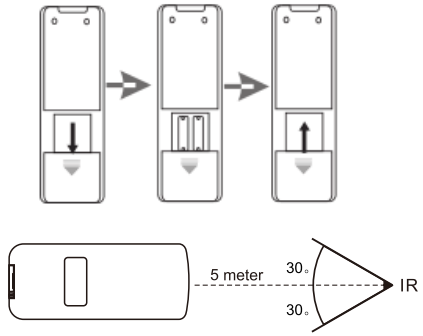

TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
The Soundbar does not turn on.	There is no power from the power cable.	Plug the power cable of device into the power outlet. If the power outlet has a switch, make sure that the switch is on.
The soundbar cannot connect with Bluetooth audio device.	The Bluetooth function is not enabled.	Make sure the Bluetooth function of the audio device and the soundbar are enabled.
	The Bluetooth device and the soundbar are not within 10 metres to each other.	Press PAIR button on remote control to enter pairing mode and try again.
No input source.	The audio source is not turned on or connected correctly.	Turn on the audio source and check if the signal cable is connected correctly.
	The soundbar is not correctly connected to the input source device.	Check the wireless/wired connection.
	The audio file format is not supported by the soundbar.	Not all formats can be played via USB. Read Technical specification area or Contact customer service for assistance.
Remote control does not work correctly	The batteries are out of power.	Replace both of the batteries with new ones.
	There is an obstacle between the remote control and the soundbar.	Remove the obstacle.
	You are too far away from the soundbar.	Move remote control closer to the soundbar.
FM radio is unstable.	The FM antenna wire is tangled or not opened properly	Make sure to keep FM antenna wire open for better signal.

TECHNICAL SPECIFICATIONS

USB AUDIO FORMAT	Mp3, WMA, WAV
INPUT SOURCE	USB*1, HDMI(ARC)*1, OPTICAL*1, AUX*1, COAXIAL*1
BLUETOOTH	5.0 Version
BLUETOOTH CONNECTIVITY RANGE	Within 10 metres range
SPEAKER DRIVERS	4
RMS POWER	≥100W
INPUT VOLTAGE	AC: 110-240V~50/60Hz
REMOTE CONTROL BATTERY SIZE	2* AA SIZE
PRODUCT DIMENSION	1000*140*83 MM
NET WEIGHT	5.1 KG