English

AX3000
WiFi Range Extender

Scan to view full video setup tutorial

OVERVIEW

LAN/WAN
1x10/100/1000Mbps Ethernet Port.

Power On
LED green light will blinking slowly.

Extended Status
LED green light slowly blinks to steady on.

Reset Button
When the extender powered on, press and hold the reset button until the device's green light starts blinking fast.

REPEATER MODE SETTING


Step 1
Plug the Extender into the power outlet near your existing WiFi router. The extender's LED green light will blink slowly.

Step 2
Activate the repeater by pressing the RESET button for 15 seconds, until therepeater fast flashes the green light. The repeater will reboot within 40 seconds.

Step 3
Open the mobile settings and turn on Airplane Mode.



Step 4
Open Wi-Fi on your mobile phone settings. Search and connect to the network default name WiFi Extender XXXX.

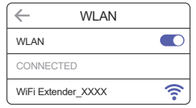


Step 5
The setting page will pop up automatically. Click to Log in.




Note: To open the setup page, you must connect to the WiFi Extender network-[extender's default name]. You will connect the Extender to your primary Wi-Fi network during a later step.

NOTE

If the setting page does not pop up automatically, launch your web browser and enter the IP address: 192.168.16.1 in the address bar.

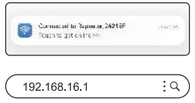

Step 6
Click on the Wi-Fi Extender Mode.

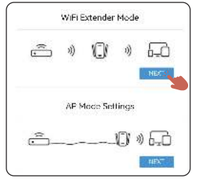

Step 7
The system will scans all networks. Select the Wifi Network you want to be extended.



Step 8
Type your Wi-Fi password into the Password box. Click the Next and Finish button.



Note: Double-check the password and remember that it is case-sensitive.
The password remains the same as the existing WiFi Router's Password.
The Extender's default name is your [Wifi Name-2.4G_EXT] and [Wifi Name-5g_EXT].

AP MODE SETTING

Step 1
Choose AP Mode and click Next button.



Step 2
Type your network SSID and Wi-Fi password.



Step 3
Click the Finish button. Once you complete the steps, your Extender reboots automatically.



Note: The password is case-sensitive. It had better be 8 - 12 characters. Please connect the ethernet cable from the Router to the Extender after the configuration is finished.

QA

1. How do I reset the Extender?
Press the RESET button for 15 seconds. The Extender will reboot within1 minute. You can setup the Extender again.

2. How far should the Extender be from the router?
The Extender should be halfway between the Wi-Fi Router and the area with poorsignal coverage. The Extender must receive a good signal from the Wi-Fi Router.

3. When i'm connected to Wi-Fi Extender, it says no internet.
This issue you have is because of the wrong password. Even if you are sureabout the correct password, please reset your device and set it up again.

4. Does the Extender increase my internet speed?
No, it increases the range of your Wi-Fi Network.

Need help?

We're here for you!

IF YOU HAVE ANY ISSUES WITH THE DEVICE, PLEASE CONTACT US FOR ASSISTANCE BEFORE OPENING A RETURN REQUESY

kocticwifi@outlook.com

Contact us now!

www.koctic.com

FR Cet appareil, ses accessoires, cordons et batterie ne recyclent

À DÉPOSER EN MAGASIN OU À DÉPOSER EN DÉCHETERIE

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

FR ÉLÉMENTS D'EMBALLAGE À SÉPARER ET À DÉPOSER DANS LE BAC DE TRI

RoHS

五折页
尺寸:450x110mm
单页尺寸：90x110mm