CARE AND MAINTENANCE


Store outdoor furniture indoors or cover well when not in use.
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum
Spills should be taken care of immediately before they harden or
stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item
* This item should be assembled on a soft surface to prevent scratching the finish during assembly
* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame		2X
B	Leg Frame		1X
C	Back frame		1X
D	Screw -1		2X
E	Screw -1		8X
H	Allen key		1X

Model# PAT7007


Product Dimensions:46.85" W x 26.38" D x 32.48" H



PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 10 minutes.
Tools Required for Assembly (included): Allen Key


1

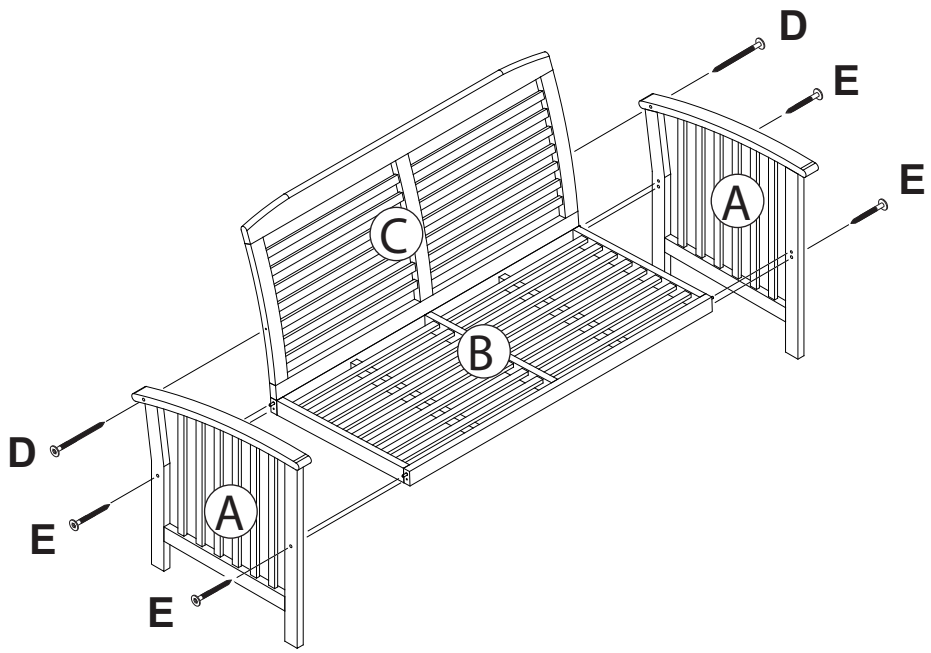

Step 1

Attach leg frame (A) to back frame (C) ,use screws-1 (D),tighten with allen key(H1).Use screw -1 (E) to connect leg frame (A) with seat frame (B), tighten with allen key (H1).

2

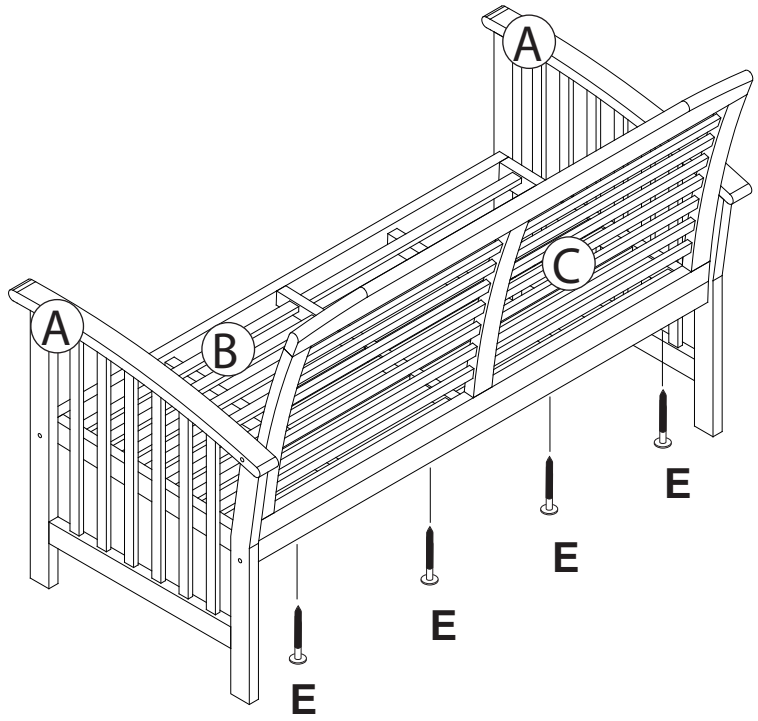

Step 2

Tighten screw- 1 (E) with allen key (H1) to attach seat frame (B) and back frame (C)

CARE AND MAINTENANCE



Store outdoor furniture indoors or cover well when not in use.
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum
Spills should be taken care of immediately before they harden or
stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item
* This item should be assembled on a soft surface to prevent scratching the finish during assembly
* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg Frame		2X
B	Seat Frame		1X
C	Back frame		1X
D	Screw -1	 6x80mm	2X
E	Screw -1	 6x60mm	6X
H	Allen key		2X

Model# PAT7007


Product Dimensions:23.23" W x 26.38" D x 32.48" H



PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 10 minutes.
Tools Required for Assembly (included): Allen Key

1

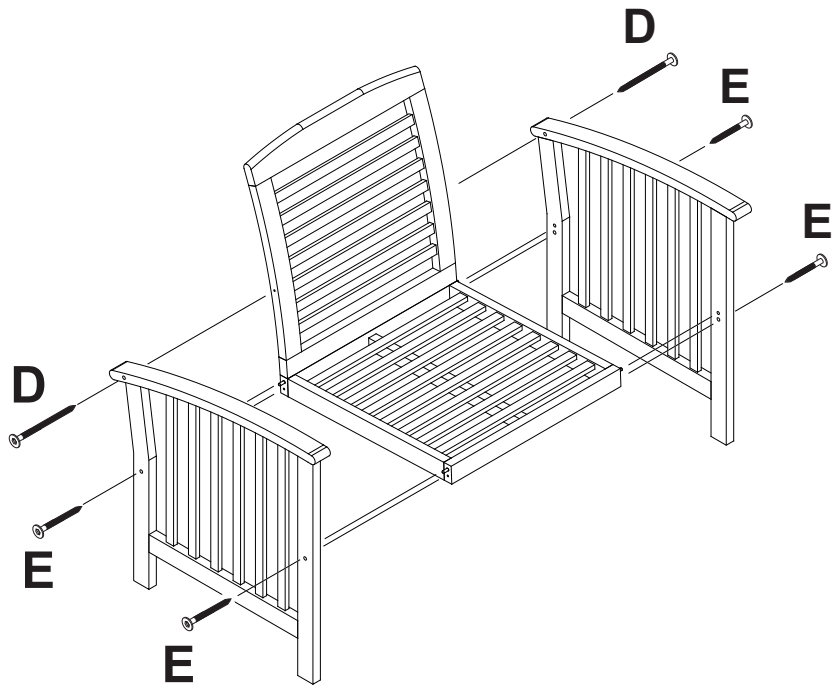

Step 1
Attach leg frame (A) to back frame (C) ,use screws-1 (D),tighten with allen key(H1).Use screw -1 (E) to connect leg frame (A) with seat frame (B), tighten with allen key (H1).

2

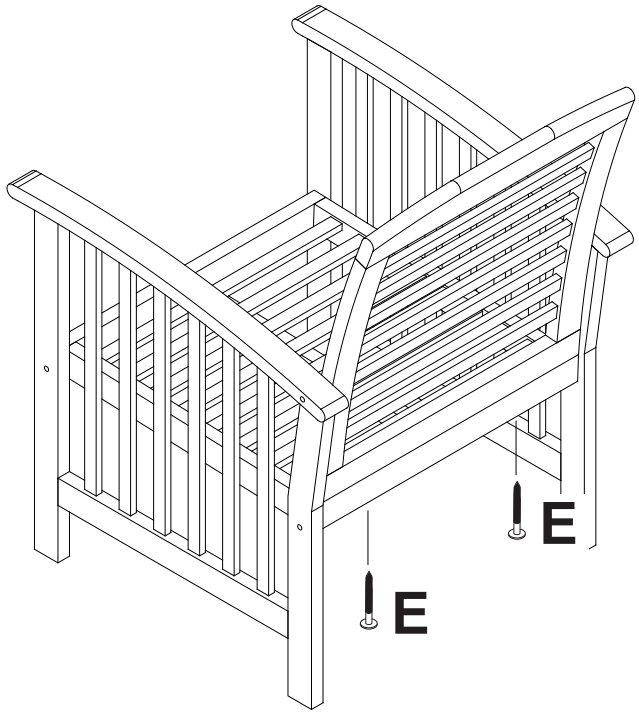

Step 2
Tighten screw- 1 (E) with allen key (H1) to attach back frame(C)

CARE AND MAINTENANCE



Store outdoor furniture indoors or cover well when not in use.
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum
Spills should be taken care of immediately before they harden or
stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE


* Please make sure that you have all parts indicated before you begin assembly of this item
* This item should be assembled on a soft surface to prevent scratching the finish during assembly
* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg frame		2X
B	Top table		1X
C	Cross bar		2X
D	Cross bar		1X
E	Screw		12X
H	Allen key		1X

Model# PAT7007


Product Dimensions:40.15" W x 19.68" D x 16.93" H

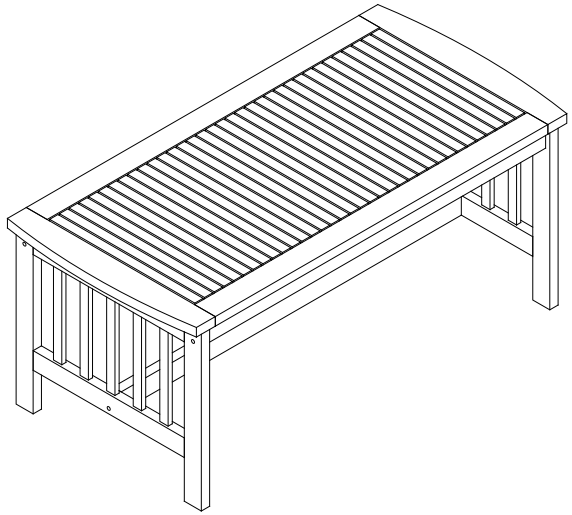

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 10 minutes.
Tools Required for Assembly (included): Allen Key

1

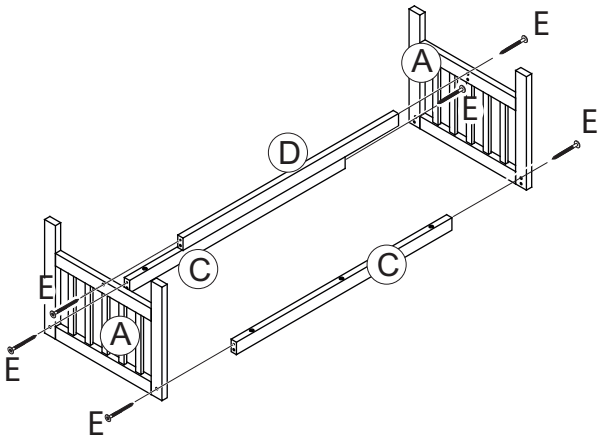


Step 1
Attach Leg frame (A) to (C),(D),use allen key (H) to tighten screws (E).

2

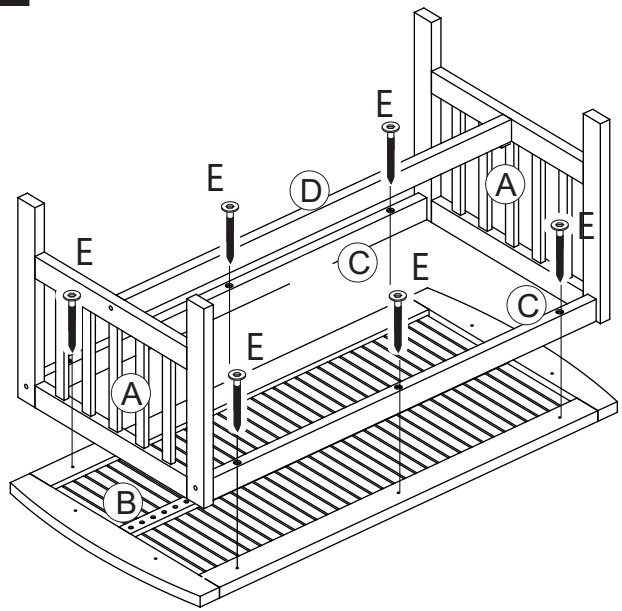

Step 2
Attach (A),(C),(D) to (B), use allen key (H) to tighten screws(E).

3

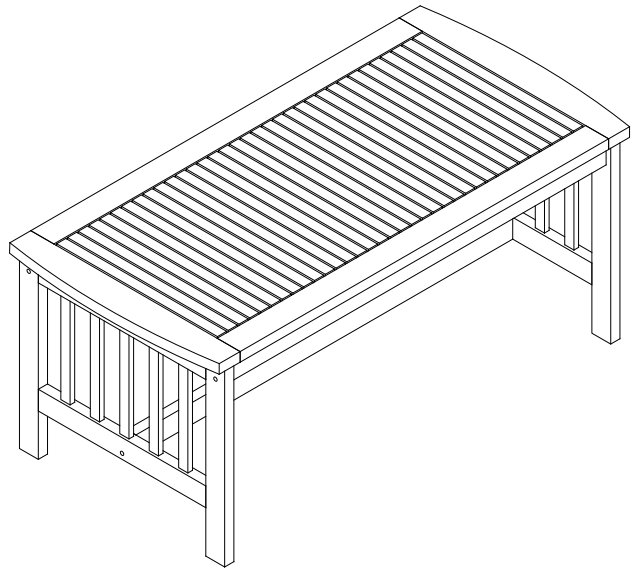

Step 3
Complete.