MECMIC®

steam cleaner

User manual

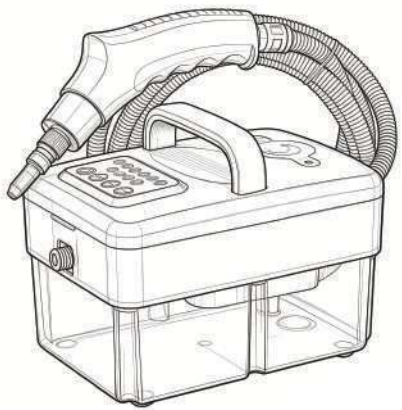

- Please read the use instruction for details before use!
- Products in kind prevail, pictures for reference only
- Customer support mail: mecmichelp@outlook.com

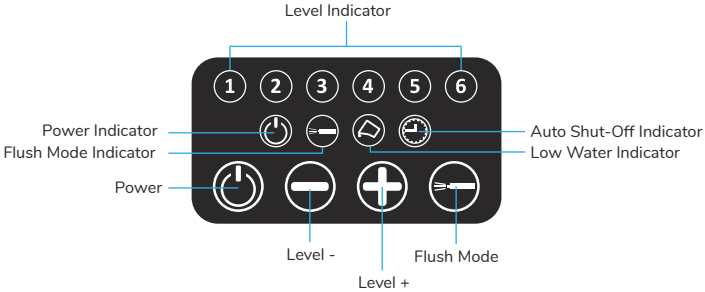



Big / Small Scraper for hardened dirt: grease/soap scum/residue /floor



Gloves



Spray Nozzle



Water Filling Funnel



Cloth



Big / Small Brush for grease/sink/faucets /tile grout lines/car surfaces



Squeegee (use with cloth) for window/mirror/fabric /windshield/shower door



Angled Nozzle for corner/tracks/grout line /car interior/toilet base



Extension Rod



Cleaning Cloth



Brass Brush for grill/grease/sink /bathroom/kitchen

NOTE

①The machine will automatically power off after 10 minutes of inactivity.
②Flushing function for large flow of steam, which can clean the internal pipes and parts that need lot of water vapor.

Extension Rod Installation

Model 1: Install the spray nozzle. Accessories can be connected directly to the spray nozzle



Model 2: Install the extension rod.
1.Remove the spray nozzle from the handle.
2.Then connect extension rod directly to the handle.
3.Attach the spray nozzle to the end of the extension rod.
4.Other accessories can be connected directly to the spray nozzle.
It is a spray nozzle and also a adapter

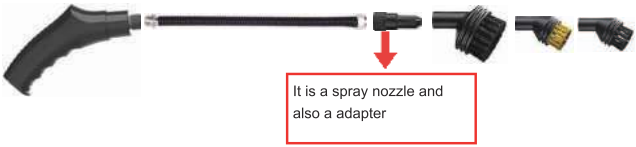

How to Use?



1. Add water to the water level line, do not exceed the maximum water level to avoid overflowing.



2. Plug in the power cord, press the power button, wait for the red light to flash for 10 seconds and the green light will on, the unit is ready for use.



3. Press the flush mode button and run it for 5 seconds helps clear air and impurities from the hose, ensuring better cleaning results, then turn off flush mode before steam cleaning.



4. Press the "+" button to start steam. There are 1-6 different pressure settings, which can be adjusted using the "+" and " -" buttons.
We recommend using the “+” button to set the steam level to 6 at startup to quickly generate stable steam and minimize excess moisture during use.

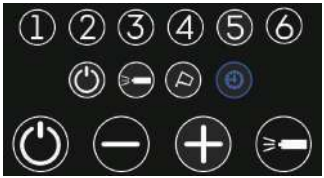

5. When plugged in but not in use, the machine will automatically shut off after 10 minutes, the auto shut-off indicator flashes blue. You need not worry about safety issues.



6. When the water tank is low, the the low water indicator reminds you to refill the water tank. shown in the picture will flash to remind you to add water.

Precautions

Before using, please read this instruction manual carefully and keep it properly for future reference.

DANGER

Do not immerse this product in water or other liquids, and do not rinse it under the tap.
Be careful of the hot steam generated by the steam cleaner. The steam may cause burns.

DANGER

*Check if the voltage indicated on the product corresponds to the local mains voltage before you connect the product to the power.
*Do not use the product if the plug, power cord or the product itself has been damaged noticeably, or the product has fallen or leaked.
*The product can only be sent to an authorized maintenance center for overhaul. Do not repair the product by yourself, otherwise the warranty will be invalid.
*If the power cord is damaged, it must be replaced by a professional person in the manufacturer's maintenance department or similar department to avoid danger.
*The user shall not leave when the product is electrified.

*This product is not suitable for children who are 8 years or younger,and people with physical disabilities, sensory or mental impairments, or lack relevant experience and knowledge unless they use this product under guidance or supervision by someone to ensure them to use safely and make them aware of the relevant hazards.

*Never allow children play with this product.

*When the product is electrified or cooling Please keep the product and its power cord out of reach of children under 8 years old.

*Children who are 8 years or older can only clean this product under supervision.

*When using,Do not touch the steam head and hot surfaces. This product will produce high-temperature steam in the course of use. Please do not aim it at people or animals, and do not iron clothes worn on the body to avoid the risk of scalding.

*Be sure to unplug the power plug before cleaning the product, installing or removing accessories, or filling water into the water tank.

Note

A)The product should only be used with a grounded socket.

B)If the product is hot or already connected to the power supply, do not let the steam nozzle come into contact with any surface when placing the product.

C)Regularly check whether the power cord is damaged.

D)During the operation of the product, do not let the power cord come into contact with high-temperature steam.

E)When you leave the product for a short period of time, please turn off the power of the product and unplug the power plug.

F)After the cleaning is finished, be sure to turn off the power and unplug the power plug, and let it cool down for 60 minutes before cleaning the product, installing or removing accessories, emptying the water tank or storing it.

G)This product is only for household use. Please do not use this product in a humid environment or outdoors.
H)Do not drag this product on the floor.The steam may damage or cause some walls or doors to fade.

I)According to the design, your product is suitable for using tap water. Never pour perfume, vinegar, descaling agent, starch spray or other chemicals into the water tank, because this product is not suitable for using these chemicals.

Before the First Use

-Remove any labels or protective covers on the steam head, and straighten the wire and place it upright before use.
-When using the cleaner for the first time, let it release steam for a few minutes. This will remove any impurities and odors that may have been left behind during the manufacturing process.
-To avoid circuit overload, it is recommended that when using this cleaner, do not use other electrical appliances on the same socket circuit simultaneously.
-When opening the package of the cleaner, check all the items you received against the parts list to prevent any items from being discarded.

Installation and Use

-Add an appropriate amount of water to the water tank, and install the water tank cover in place.
-Install the corresponding cleaning accessories on the handle according to the cleaning requirements.
-Connect the device to the power socket, turn on the power switch, and the machine will start preheating.
-Hold the handle, select the corresponding steam gear on the panel, and it can be used once the steam is generated.

Function

The steam cleaner uses high-temperature steam to remove stubborn oil stains and dirt.Steam cleaning is a physical method of cleaning,so it is environmental. There are no irritating chemicals, and it can safely clean and disinfect various surfaces.

This product is equipped with a variety of accessories and can be used for multiple purposes:

-For upholstery, grout, tiles and stoves.
-With the extension rod, it can easily reach into narrow spaces.
-For cleaning fabrics, curtains and bedding.
-It is very suitable for windows, mirrors and glass doors
-For handling hard surfaces such as countertops, sinks and shower door tracks.
-It is very suitable for kitchens, appliances, furniture surfaces and cars.
-It has functions such as oil removal, deep cleaning and disinfection.

After use

-When stop using, turn off the power switch or take off the power cord from the power socket.
-Empty the remaining water in the water tank.
-Place it vertically on a flat tabletop and wait for the product to cool down.

Maintenance, Cleaning and Storage

-Remove the accessories from the steam head and then clean it with a damp cloth. Please do not use rough or corrosive cleaning agents or solvents.
-Do not immerse the steam cleaner in water or other liquids.
-Do not drop, throw or bend it.
-Please do not try to disassemble the electrical appliance.
-Empty the water in the water tank after use.
-Do not place it near a heat source or expose it to direct
-Always ensure that the steam outlet holes are clean, free of scale and not blocked.
It is recommended to store the cleaner vertically in a flat position, such as in a cabinet.
-To clean the dirt inside the machine, mix citric acid and water in a ratio of 1:5. After it is completely dissolved, pour it into the water tank. Turn the steam to the maximum until the water in the tank is used up.
Then, pour clean water into the water tank and let the machine run normally for 10 minutes.

Troubleshooting

FAQ	Reason	Process
Product can not work after power on	There is no power	Insert the plug into the power socket
	The temperature controller or thermal protection is damaged	Ask professional to check and repair
	Internal wires fall off	Ask professional to check and repair
No steam or steam pressure reduced	The machine is not pre-heated sufficiently	Preheat the machine for 15 secs
	No steam gear selected	Select an appropriate steam gear
	Water tank level is too low, or waterway is blocked	Clean it and add water to the water tank
	Machine is inverted,it can not suck water from the water tank	Place the machine horizontally
	The internal steam passage is bent or disconnected	Ask professional to check and repair
	The heating plate is damaged	Ask professional to check and repair
	Water pump is damaged or blocked	Ask professional to check and repair
	The PCB board with problem	Ask professional to check and repair
	The inlet water filter is blocked	Clean the inlet water filter

Warranty card

Notice of warranty:

This product has been strictly inspected and delivered from the factory. The warranty period is 1years from the date of sale under the conditions of using the correct usage method and storage conditions of this instruction. During the warranty period, if it is found that the failure caused by quality problems, the warranty is guaranteed by our company or dealer. However, for the damagecaused by improper use, self-assembly and irresistible force and it is not in the scope of the warranty.
The maintenance fee shall be charged appropriately for the maintenance.

User name		Purchasing date	
User phone		Product model	
User address		Repair date	

Please feel free to contact us via mecmichelp@outlook.com