# What do the lights mean?




**Solid Blue**
Robot ready for use




**Flashing Blue**
Waste drawer full




**Solid Blue & Yellow**
Sleep mode enabled, within specified sleep time




**Solid Yellow**
Robot cycling




**Flashing Yellow**
Cycle interrupted or bonnet removed
Check for excess litter or check bonnet




**Solid Red**
Cat detected and wait time countdown initiated
No action required or press Reset to cancel timing




**Flashing Red**
Cat sensor fault
Check for excess weight (such as too much waste or litter) and press Reset



**What's in the Box**


Carbon filter


(3) Waste drawer liners


AC/DC power supply


Accessories
(optional – sold separately or in bundle)

Need help? Visit whiskersupport.com

LR3-8010-0g

# Quick start guide.

litter·robot
by whisker



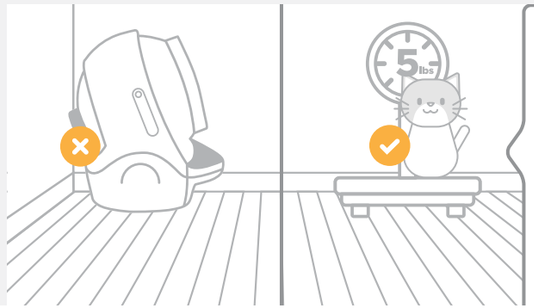


Never push the Litter-Robot against a wall or into a corner (must not be touching any walls).

Cats must weigh at least 5 lbs to safely use the Litter-Robot in Automatic Mode.

For a complete guided online experience and tips on acclimating your cat, please scan the QR code or visit **litter-robot.com/gettingstarted**

# Control panel icons




### Power

- Press and release the Power button ⏻ to turn the robot ON or OFF. The robot will begin a clean cycle when power is turned on.
- Press and hold, while at the home position, to enter night light setting mode.

Cycle

### Cycle

- Press and release the Cycle button to start a clean cycle.
- If already cycling, press Cycle to pause; press again to resume a cycle.
- Press and hold, while at the home position, to enter sleep mode.

Empty

### Empty

- Press and release the Empty button to start an empty cycle (empties all litter into the waste drawer).
- If already cycling, press Empty to pause; press again to cancel a cycle.
- Press and hold, while at the home position, to enter wait time setting mode.

Reset

### Reset

- Press and release the Reset button to reset the cat sensor. (Do this after emptying the waste drawer, adding litter, etc.)
- If already cycling, press Reset to pause; press again to cancel a cycle.
- Press and hold, while at the home position, to enter control panel lockout.



## 1 Ensure proper placement

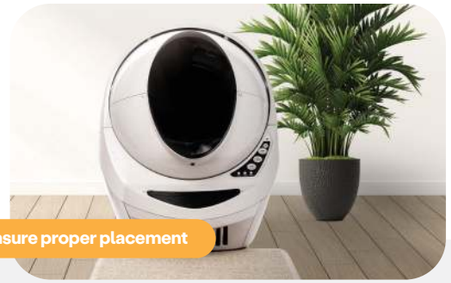

- If possible, place the Litter-Robot in the same location as the old litter box (at least during transition).
- Make sure the unit is indoors on a firm, level surface and in a cool, dry location.
- Place litter mats or rugs in front of the unit.

## 2 Add litter




- Use clumping litter or litter beads and crystals that are small enough to pass through the screen.
- Add litter until it meets the raised fill line when spread flat (8-10 lbs or 1 gal). Be careful not to overfill.




## 3 Power on



- Insert the small plug end of the power cord into the socket on the back of the base.
- Plug the AC/DC adapter into a wall outlet.
- Press the Power button on the control panel.

## 4 Download the app




- **Litter-Robot Connect units only – look for the WiFi symbol on the control panel.** Download the Whisker app and follow the onboarding instructions.

The Litter-Robot will now perform an initial clean cycle.

Need help? Visit whiskersupport.com