RENOGY
Superior Energy Solutions

Renogy

Pure Sine Wave Inverter

24V | 2000W

RIV2420P2-12S

VERSION A0

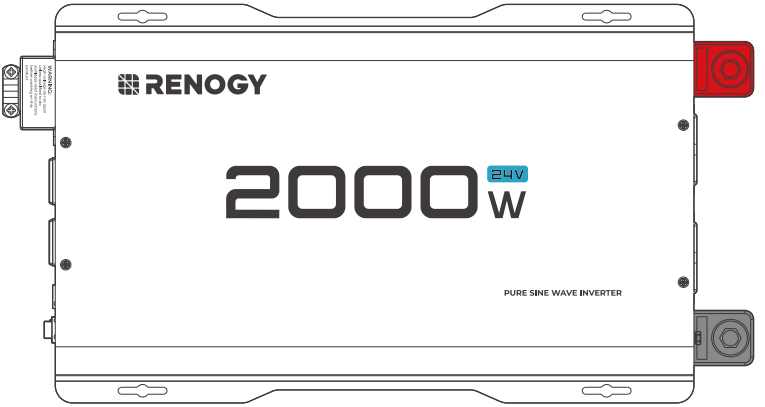

USER MANUAL

Table of Contents

Before Starting 01
Disclaimer 01
Symbols Used 02
Introduction 02
Key Features 02
SKU 02
What's In the Box? 03
Required Tools & Accessories 03
Get to Know the Pure Sine Wave Inverter 04
Dimensions 05
System Setup 06
Size a Battery Bank 07
Step 1. Wear Insulating Gloves 07
Step 2. Plan a Mounting Site 08
Step 3. Ground 09
Step 4. DC Wiring 09
Step 5. AC Wiring 11
Power On/O! 11
LED Overview & Troubleshooting 13
Pure Sine Wave 14
General Safety Information 14
Specifications 15
Renogy Support 16

Before Starting

The user manual contains important operating and maintenance instructions for the R enogy 24V 2000W Pure Sine Wave Inverter (hereinafter referred to as the inverter).

Read the user manual carefully before commissioning and keep it for future re ference. Failure to follow the instructions or precautions in the user manual may result in electric shoc k, serious injury or death or damage the inverter, possibly rendering it inoperable.

- Renogy guarantees the accuracy, completeness and applicability of the information in the enclosed operating instructions at the time of printing. However, due to possible continuous product improvements, Renogy assumes no liability or responsibility for any errors o r omissions in the manual.
- Renogy accepts no responsibility or liability for personal injury or damage to property, whether direct or indirect, caused by the user not installing and using the product in accordance with the operating instructions.
- Renogy accepts no responsibility or liability for failure, damage or injury caused by attempted repair by unqualified personnel, improper installation or improper operation.
- The illustrations in the user manual are for demonstration purposes only. Details may vary slightly depending on the product version and market region.
- Renogy reserves the right to change the information in the user manual without prior notice. For the latest user manual, visit renogy.com.

Disclaimer

Renogy 24V 2000W Pure Sine Wave Inverter User Manual © 2024 Renogy. All rights reserved.

RENOGY and RENOGY are registered trademarks of Renogy.

- All information in this user manual is subject to copyright and other intellectua l property rights of Renogy and its licensors. The User Manual may not be modified, reproduced or copied in whole or in part without the prior written permission of Renogy and its licensors.
- The registered trademarks in the user manual are the property of R enogy. Unauthorized use of the trademarks is strictly prohibited.

Symbols Used

The following symbols are used throughout the user manual to highlight important information.

WARNING: Indicates a potentially **hazar**dous condition that could result in injury **or dea**th.

CAUTION: Indicates an important procedure for **saf**e and proper **installa**tion and operation.

NOTE: Indicates an important step or tip for **optimum perf**ormance.

Introduction

The Renogy 24V 2000W Pure Sine Wave Inverter (hereafter referred to as the inverte r) is perfect for most o!-grid systems, whether it's for a van, a semi-truck, an RV, a ca bin, or any other remote location that requires power. The inverter converts the direct current store d in the batteries into usable alternating current for appliances. Thanks to Renogy's advanced pure sine wave technology, you can power almost any AC appliance without damaging even your most sensitive devices.

Key Features

- **Powerful DC-AC conversion**
  Continuous rated output power with a maximum conver sion e#ciency of 93 % and up to 2-fold overvoltage for starting loads.
- **Guaranteed protection for household appliances**
  Pure sine wave technology is similar or even better than mains power and can extend the life of appliances as it delivers a smooth sine wave that won't damage them. There are no strange humming noises and your appliances can run smoothly.
- **Easy to use**
  Provides an integrated 5V/2.1A USB port, AC power outlet(s), hardwired AC output terminal and wired remote control port.

SKU

Renogy 24V 2000W Pure Sine Wave Inverter	RIV2420P2-12S

What's In the Box?

Renogy 24V 2000W
Pure Sine Wave Inverter × 1

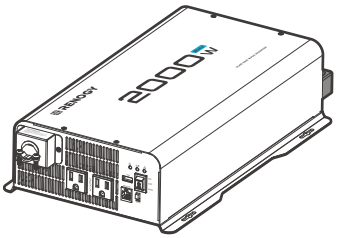



User Manual × 1

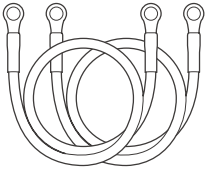

2000W:Cables (3 AWG @ 3ft) × 2



Wired Remote
Control × 1

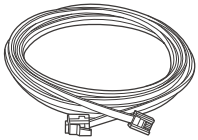

RJ12 Ethernet Cable
(5m) × 1

- Make sure that all accessories are complete and free of any signs of damage.
- The accessories and product manual listed are crucial for the installation, excluding warranty information and any additional items. Please note that the package contents may vary depending on the specific product model.

Required Tools & Accessories



Phillips Screwdriver (#1)

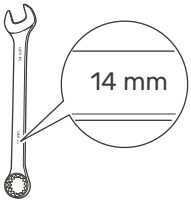

Wrench (9/16 in)

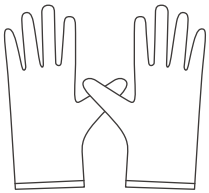

Insulating Gloves



Slotted Screwdriver (1 mm)



Wire stripper

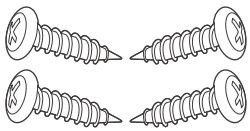

Self-tapping Screws (ST4 or ST6) × 4

- Prior to installing and configuring the inverter, prepare the recommended tools, components, and accessories.
- Choose proper mounting screws specific to your installation site. This manual takes self-tapping screws for wooden walls as an example.

Get to Know the Pure Sine Wave Inverter

AC Side View

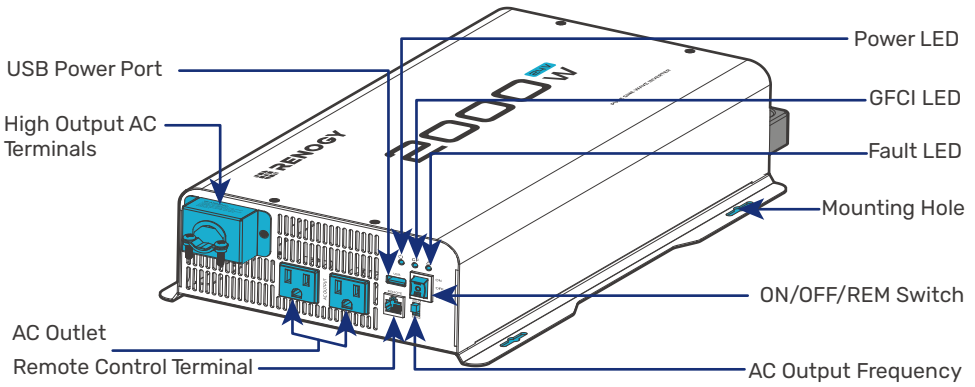

Part	Description
ON/OFF/REM Switch	Turns the inverter ON, OFF, or REMOTE.
Power LED	Indicates the operation status of the inverter.
Fault LED	Indicates that the inverter shuts down due to overheating, overload, undervoltage, or overvoltage. Solution: Immediately turn o! all AC appliances. Allow the inverter to cool before continuing. Make sure that the ventilation vents are not blocked. Ensure all cables are of proper sizes and lengths.
GFCI LED	Indicates that the ground fault circuit has been interrupted. In such case, restart the inverter.
High Output AC Terminals	Remove the two screws on the protective cover to access 20A the terminals. Remove the two screws on the protective cover to access the terminals. Terminal layout (facing the front panel) ● Left: Live (L) ● Middle: Neutral (N) ● Right: Ground (G) Note that Neutral and Ground are bonded inside.
AC Outlet	120V AC, 50/60 Hz, Up to 15A.
USB Power Port	Supplies 5V/2.1 A for charging tablets, smartphones, and other small appliances.
Remote Control Terminal	Connects to the Wired Remote Control.
AC Output Frequency	Configure the AC output frequency of the inverter in accordance with the frequency of the connected AC loads.

DC Side View

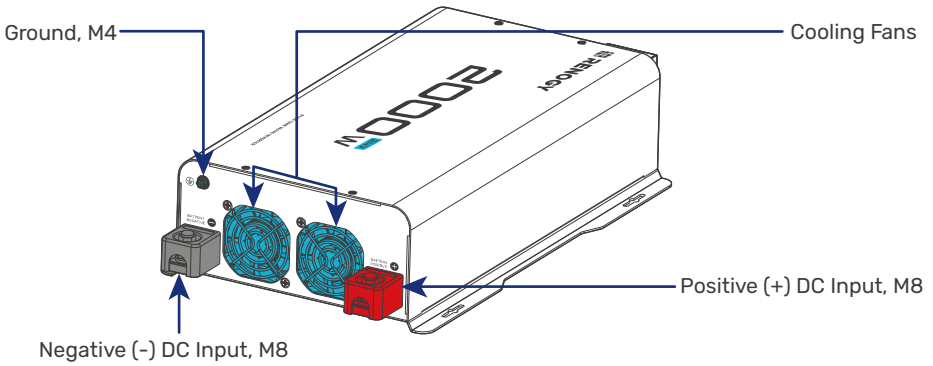

Dimensions

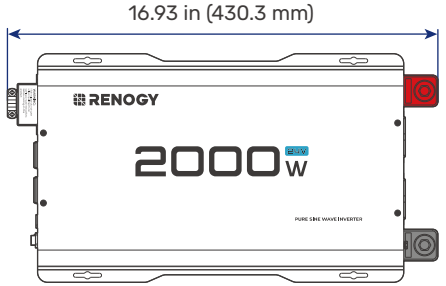

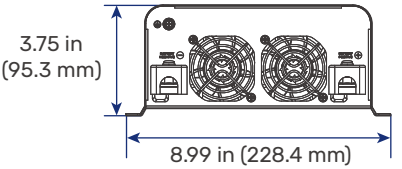

Dimension tolerance: ±0.2 in (0.5 mm)

System Setup

AC Side View

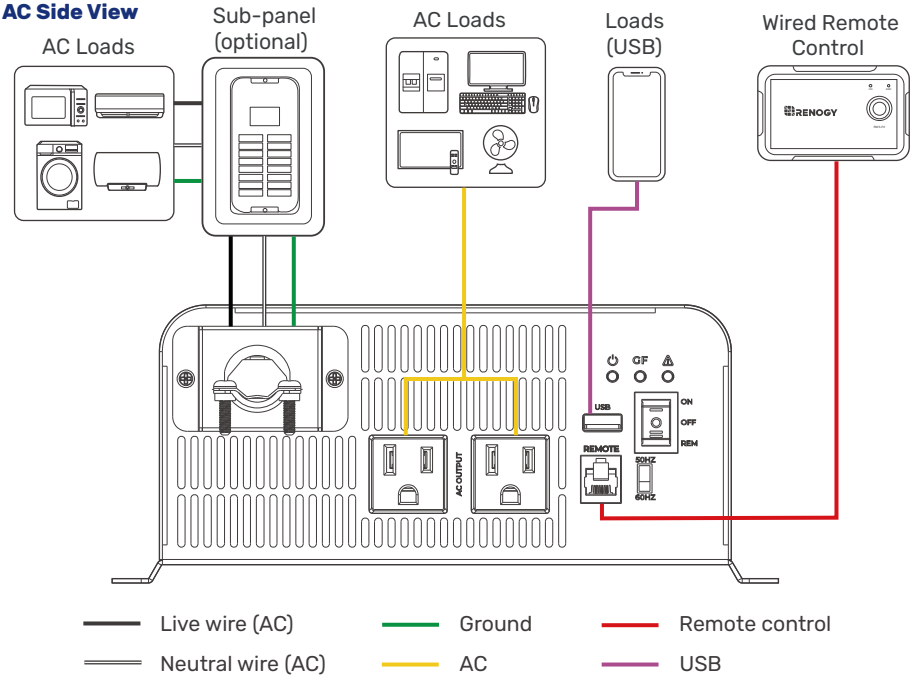

DC Side View

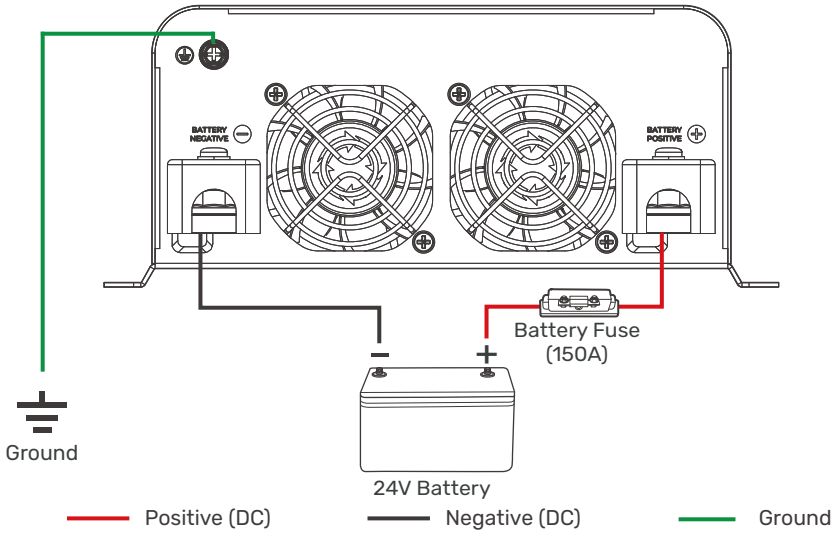

The 2000W inverter requires a 150A battery fuse.

Size a Battery Bank

Battery types and capacity relate to the overall inverter performance. To size a prope r battery bank, you need to identify the loads that you will be utilizing, as well as an estimate duration (hours/day) you will be using the load. The inverter is only compatible with 24V battery banks, and oversizing should be considered due to e#ciency losses.

1. **Determine Your Watts (Amps x Volts)**
   Every electronic will have a sticker or plate identifying the watts directly (W) or will sho w you the voltage value (V) as well as amperage (A) which need to be multiplied to get Watts. T he formula is below:
   Watts (W) = Volts (V) x Amps (A)
   Example: Fan Watts = 120V * 0.4A = 48Watts

2. **Estimate Load Run-Time in Watt-Hours (Wh)**
   Estimate how many hours per day you will be using the load and multiply this by your Watts per load.
   Example: Fan Watts x 12 hours = Watt-Hour (Wh)
   48W x 12h = 576Wh

Determine Battery Capacity in Amp-Hour (Ah)

Divide your Load Run Watt-Hour result by the battery voltage.
Load Run-Time (Wh)/Battery Voltage (V) = Amp-Hour (Ah)
Use 24V, supported voltage of the inverter as a reference.
576Wh/24V = 24 Ah

Oversize the Battery

The calculated Amp-Hour value represents the minimum size battery capacity to run your load for your intended time. Note that this assumes 100% use of a battery, which is not recommended. Assuming 50% depth of discharge, you want to multiply this value by 2 and you also want to multiply by 1.25 to account for some e#ciency losses.
Formula:
24Ah x Oversize x Efficiency Losses = Recommended Amp-Hour
24Ah x 2 x 1.25 ≈ 60Ah
Therefore, a 60Ah battery bank, or close, will be able to support a 12-hour run time while also prolonging battery life for the best system size possible.

You will need a battery charging source as this is a non-charging inverter and will only work to deplete the battery.

Actual battery quantities vary by battery capacity and rates of discharge.

Step 1. Wear Insulating Gloves

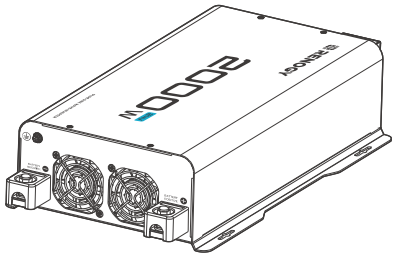

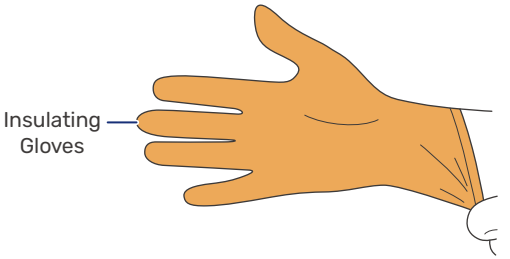

Step 2. Plan a Mounting Site

Follow the guidelines below:

- **Cool, dry, well-ventilated area**
  The inverter must be installed in a site where the fans are not blocked or where they a re not hit directly by the sun. The site should be free of any kind of moisture with a clearance of a t least 10 inches around the inverter for adequate ventilation.
- **Protection against fire hazard**
  The inverter should be away from any flammable material, liquids, or any other combustible material.
- **Close proximity to battery bank**
  Put the inverter close to batteries banks to prevent excessive voltage drop. Choose a p roper sized wire going from the battery bank to the inverter.
- **Limiting electromagnetic interference (EMI)**
  Ensure the inverter is firmly grounded to a building or vehicle. Alternatively, it can be earth grounded. Keep the inverter away from EMI receptors such as TVs, radios, and othe r audio/ visual electronics to prevent damage/interference.
- **Secure mounting**
  The inverter should be stand-alone or mounted by using the outlying terminals with M4 and M6 screws on the inverter.

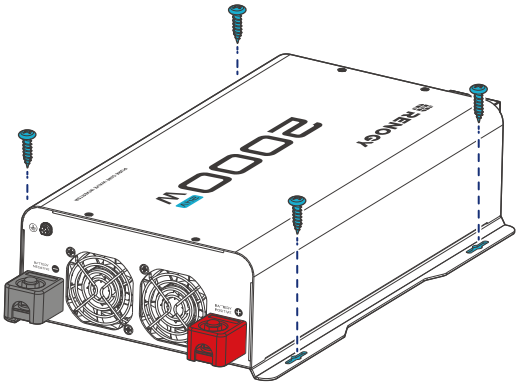



-4°F to 131°F / -20°C to 55°C

⚠ Do not over-torque or overtighten the terminals. This could potentially damage th e unit.

⚠ Refer to the technical specifications for maximum wire sizes on the controller and for the maximum amperage going through wires.

⚠ Ensure the inverter is in the OFF position before connecting to anything.

⚠ Do not install the inverter in the same compartment as the battery bank because it could serve as a potential fire hazard.

⚠ Never mount the inverter vertically on a vertical surface since it would present a hazard for the fan opening, undermining cooling the inverter.

Step 3. Ground

If available, the chassis ground lug should be connected to a ground point such as a vehicle chassis or boat grounding system. In fixed locations, connect the ground lug to earth ground. The connections to ground must be tight and against bare metal. Grounding is highly recommended for both when using the inverter in a mobile application, such as an RV, or in a building.

Empfohlene Komponenten

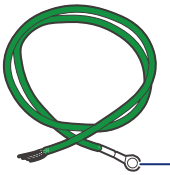

Grounding Cable (12 AWG)

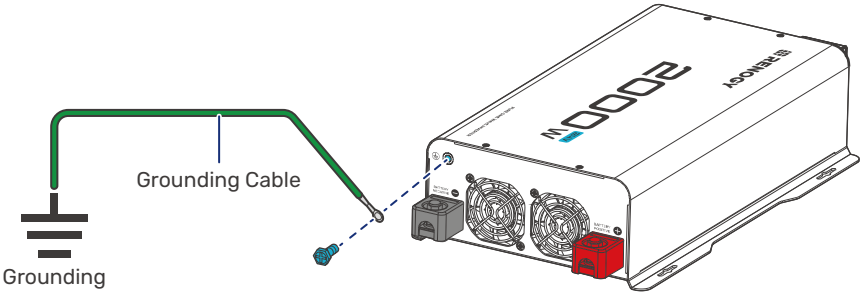

Step 4. DC Wiring

- Be careful of the positive and negative poles. Reversing the poles might cause permanent damage to the inverter and will void the warranty.
- For your safety, it is recommended to use a 150A battery fuse.
- The inverter is suitable for 24V battery bank systems ONLY. Not following the minimum DC requirement will cause irreversible damage to the device.
- The input terminals of the inverters are embedded with large capacitors. The input circuit is completed once the terminals are connected to both positive and negative wires. This commences drawing a heavy current momentarily. As a result, there may be a sparking occurring even if the inverter is in the o! position. To minimize sparking, it is recommended that you should choose an appropriate sized wire feeding into the inverters and/or install an external fuse leading into the inverter.

Step 1: On the AC side, set the ON/OFF Switch to the OFF position.

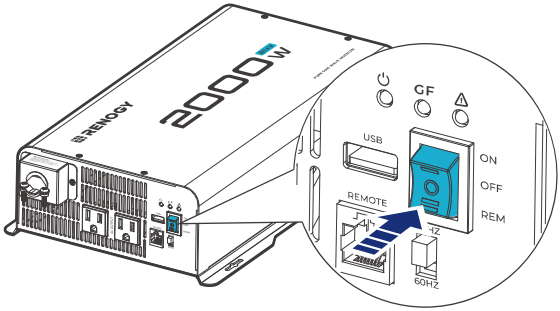

Step 2: On the DC side, remove the protection caps.

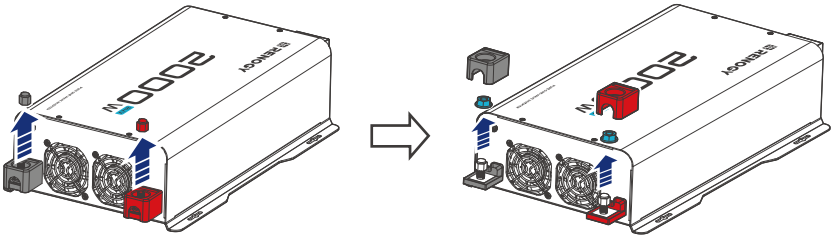

Step 3: Unscrew Positive and Negative DC Input Terminals, connect a battery **ban**k to the terminals, and tight the terminal screws. Torque: 14(±0.5) N•m

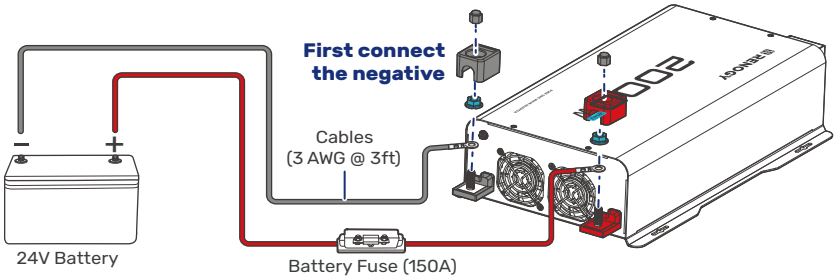

Cables	Battery Fuse
2000W: Cables (3 AWG @ 3ft)	2000W: 150A

Step 5. AC Wiring

AC Outlets

You can plug your AC loads directly into the AC Outlets on the inverter's AC side.

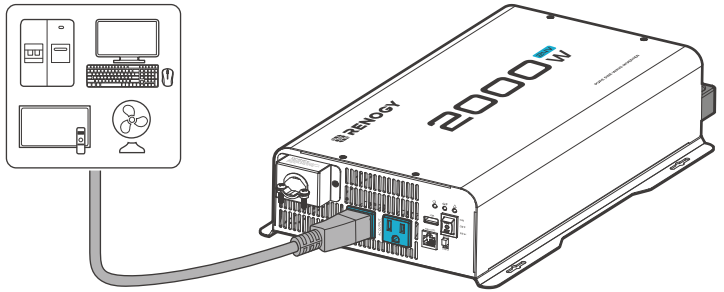

High Output AC Terminals

You can also permanently connect the AC output from the AC hardwire terminal through the High Output AC Terminals into a load sub-panel or additional AC outlets powered by the 2000W inverter.

From left to right, the terminal block indicates: Live/Hot (L), Neutral (N) and Ground (G).

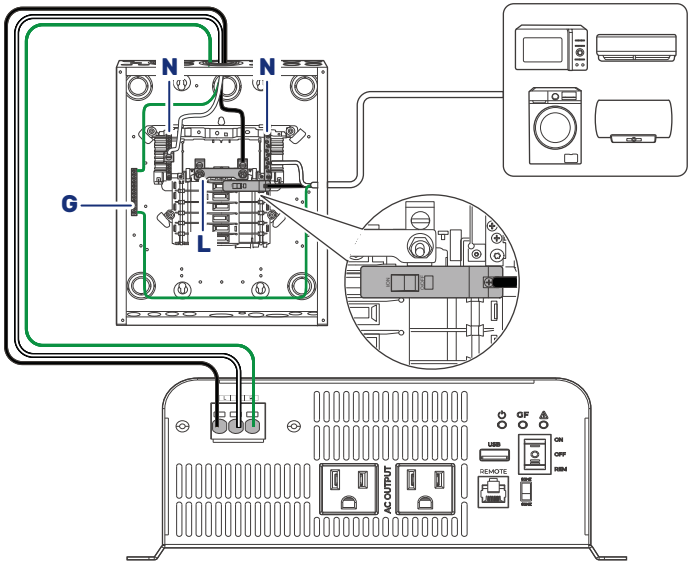

Power On/Off

Operations on Inverter

After proper battery and AC load connections, you can operate the inverter.

1. On the AC side, rock the ON/OFF Switch to the ON position.

2. The inverter is operating normally.

When finishing using the inverter, power o! the AC loads first, and then rock the ON/OF F Switch to the OFF position.

How to Properly Install Cable Clamps?

The AC Output Port with cable clamps to ensure that the wiring connections remain secure and do not come loose due to vibrations.
Step 1: Loosen the screws on a cable clamp with a Phillips Screwdriver.
Step 2: Lift the clamp, and run the cables through the clamp.
（You will need 1 x 3 prong (10 AWG recommended Black, White, Green) ac cables not provided with this product. Measure the required length for your particular application. for ac output of the inverter.SJT0 and SJT,SJ0 are recommended wire）
Step 3: Secure the clamp by fastening the screws.

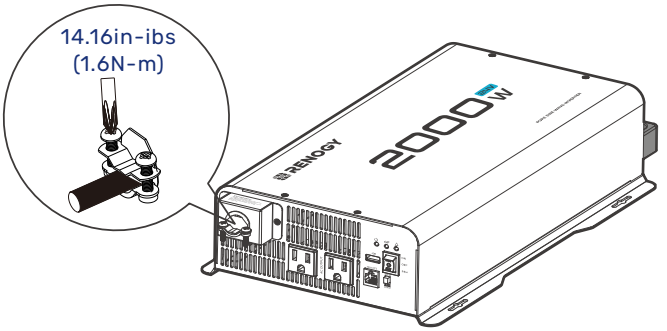

- Do not use the bare wires if there is any visible damage.
- Do not use SP-3, SPT-3 type wire
- The screw torque of a cable clamp is 14.16 in·lbs (1.6 N·m). Do not over tighten the screws to prevent damage

Power On/Off

Operations on Inverter

After proper battery and AC load connections, you can operate the inverter.

1. On the AC side, rock the ON/OFF Switch to the ON position.

2. The inverter is operating normally.

When finishing using the inverter, power o! the AC loads first, and then rock the ON/OF F Switch to the OFF position.

- When the inverter turns on, it is normal to see the fans run for a second and hear a beep.
- Avoid powering on the inverter with the load (electronic devices) already switched on. This may trigger an overload since some electronic devices have an initial high power surge to start.
- When switching o! the inverter, turn o! the electronic devices first. Although the inverter is o!, the terminal capacitors will still have a charge, so the DC and AC terminals must be disconnected if altering the circuitry.

Wired Remote Control

The Wired Remote Control gives you the opportunity to power on/o! the inverter from a distance (approximately 16.4 ft / 5 m).

Note that the inverter ON/OFF switch should be in the REM position.

Step 1: Connect the Wired Remote Control to the inverter via the Remote Control Connector .

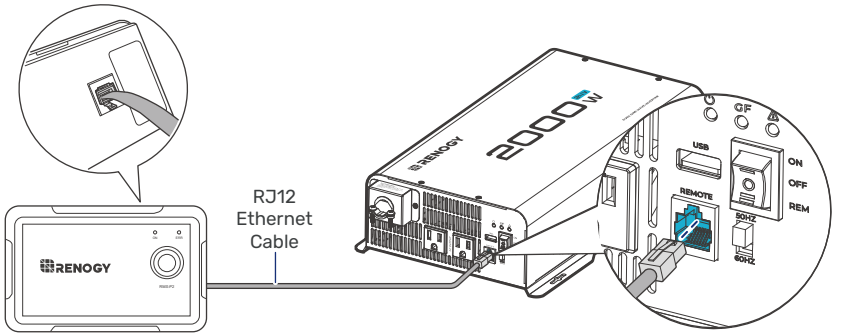

Step 2: Rock the ON/OFF Switch to the REM position, and you can power **on**/o! the inverter via the Wired Remote Control.

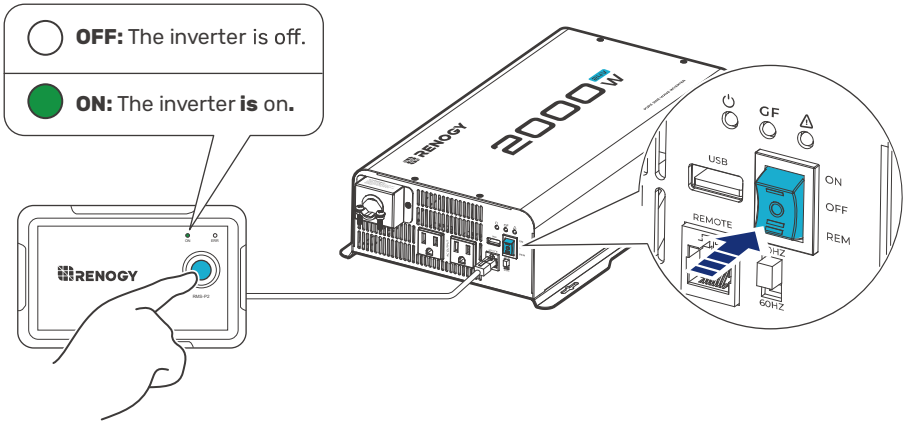

LED Overview & Troubleshooting

LED Status	Alarm	Protection & Alarm	Inverter Status
Fault LED in solid red 	Long steady beeping sound	Overtemperature protection	No output from the inverter.
		Undervoltage shutdown	No output from the inverter.
		Overload protection	No output from the inverter output side. After 5s, the inverter automatically restarts. After five times of failed restart, the inverter needs to be restored by manually turning it on.
		Short circuit protection	
		Undervoltage protection	No output from the inverter.
Fault LED in Quick flashing 	Red LED Quick flashing	Input voltage is below 22.4V.	Keep input voltage above 22.4V.
		Input voltage is above 32.7V.	Keep input voltage below 32.7V.
Power LED in solid green and fault LED o! 	No sound	Inverter recovers output	Normal output from the inverter output side.
GFCI LED in solid yellow GF 	Long steady beeping sound	GFCI protection	1. No output from the inverter. 2. Disconnect all appliances, and use the ON/OFF/Remote switch to reset the inverter. Attempt to connect various appliances one at a time, observing if the yellow LED on the inverter remains illuminated. If it stays o!, this suggests a current leakage issue with one of the appliances. If the LED remains on, kindly reach out to Renogy via renogy.com/ contact-us for further assistance.
	No sound and the inverter is o!	GFCI tripped	Disconnect appliances, and use the ON/OFF/Remote switch to reset the inverter.

For further assitance, contact Renogy technical support service at https:// www.renogy.com/contact-us.

Pure Sine Wave

The inverter outputs a pure sine wave similar to the waveform of the grid power. In a pure sine wave, the voltage rises and falls in a smooth fashion with very low harmonic distortion and c leaner utility-like power.

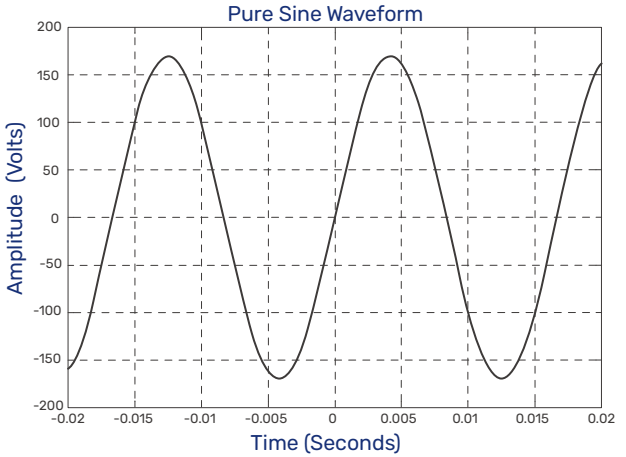

This technology allows the inverter to supply electronic devices that require a high quality waveform with little harmonic distortion. In addition, the technology enables the inverter to be more e#cient than traditional ones, allowing you to use less energy to supply more devices. The inverter can provide su#cient, stable power for tools, fans, lights, computers, and other electronics without any interference.

General Safety Information

WARNING

- Have the inverter installed by a qualified technician in accordance with the local and nati onal electric codes (NEC).
- There are no serviceable parts for this inverter. Do not disassemble or attempt to repai r the inverter.
- Ensure all connections going into and from the inverter are tight. There may be sparks when making connections; therefore, there should not be flammable materials or gases near the installation site.
- The inverters are suitable for 24V battery banks ONLY.
- Always ensure the inverter is in OFF position and disconnect all AC and DC devices associated with the inverter.
- Never connect the AC output of the inverter directly to an Electrical Breaker Panel or Load Center which is also fed from the utility power or generator.
- Please confirm the polarity of the devices before connection. A reverse polarity contact can cause injury and damage the device.
- Be careful when touching bare terminals of capacitors as they may retain high lethal voltages even after power is removed.
- Do not let the positive (+) and negative (-) terminals of the battery touch each other. Use onl y deep-cycle sealed lead-acid, flooded, gel, or lithium batteries.
- Risk of explosion! Never install the inverter in a sealed enclosure with flooded batteries! Do no t install in a confined area where battery gases can accumulate.

- Be careful when working with large lead acid batteries. Wear eye protection and have fresh water available in case there is contact with the battery acid.
- Overcharging and excessive gas precipitation may damage the battery plates and activate material shedding on them. Too high of an equalizing charge or too long of one may cause damage. Carefully review the requirements of the specific battery in use.

VORSICHT

- Install the inverter in a well-ventilated, cool, and dry environment. Make sure the f ans of the inverter and the ventilation holes are not blocked.
- Do not expose the unit to rain, moisture, snow, or liquids of any type.

Specifications

General Data	
Model	RIV2420P2-12S
Output Waveform	Pure Sine Wave
AC Terminals	2x AC Socket & Terminal Block
DC Terminals	M8 x 25 mm
Operating Temperature	-4°F to 131°F / -20°C to 55°C
Storage Temperature	-40°F to 158°F / -40°C to 70°C
Humidity	Max 95%, non-condensing
Cooling	Thermally Controlled Fans
Dimensions (L x W x H)	16.93 x 8.99 x 3.75 in 430.3 x 228.4 x 95.3 mm
Weight	10.14lb /4,6 Kg
Electrical Data	
Continuous Output Power	2000W
Continuous Output Current	16.7A AC
Total Harmonic Distortion (THD)	< 3%
Power Factor	1
Surge Rating	4000W (@2S)
Output Voltage	120V AC
Output Frequency	50Hz / 60Hz
Rated Battery Input Voltage	24V DC
Battery Input Voltage Range	23V to 30.7V DC
Maximum Continuous Battery Output Current	106A
Inverter Efficiency	Max. 92%
Full Load Efficiency	89%
Power Consumption	< 19.2W
Battery Overoltage Shutdown	33.3 V (±0.5 V) DC
Battery Low Voltage Alarm	22.4 V (±0.5 V) DC
Battery Low Voltage Shutdown	21.8 V (±0.5 V) DC

Wired Remote Data	
Front Plate Dimensions	2.8 x 4.3 x 1.3 in / 70 x 110 x 31.8 mm
Wired Length	16.4 ft / 5 m

Renogy Support

To discuss inaccuracies or omissions in this quick guide or user manual, visit or **co**ntact us at:

G | renogy.com/support/downloads

contentservice@renogy.com

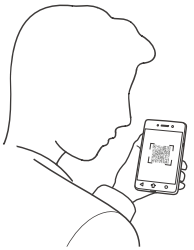

Questionnaire Investigation

To explore more possibilities of solar systems, visit Renogy **L**earning Center at:

G | renogy.com/learning-center

For technical questions about your product in the U.S., contact the Renogy technical support team through:

G | renogy.com/contact-us

1(909)2877111

For technical support outside the U.S., visit the local website below:

Canada	ca.renogy.com	**China**	www.renogy.cn
Australia	au.renogy.com	**Japan**	renogy.jp
South Korea	kr.renogy.com	**Germany**	de.renogy.com
United Kingdom	uk.renogy.com	**Other Europe**	eu.renogy.com

Renogy Empowered

Renogy aims to empower people around the world through education and distribution of DIY-friendly renewable energy solutions.

We intend to be a driving force for sustainable living and energy independence.

In support of this effort, our range of solar products makes it possible for you to minimize your carbon footprint by reducing the need for grid power.

Live Sustainably with Renogy

Did you know? In a given month, a 1 kW solar energy system will...



Save 170 pounds of coal from being burned



Save 300 pounds of CO_2 from being released into the atmosphere



Save 105 gallons of water from being consumed

Renogy Power PLUS

Renogy Power Plus allows you to stay in the loop with upcoming solar energy innovations, share your experiences with your solar energy journey, and connect with like-minded people who are changing the world in the Renogy Power Plus community.



@Renogy Solar



@renogyofficial



@Renogy

Renogy reserves the right to change the contents of this manual without notice.



技术要求

印刷颜色：彩印
要求：快装页面上下左右需要留好出血
印刷方式：双面印刷
装订：骑马钉
说明书大小：A5
纸张重量：157g
材质：铜版纸