2-ZONE WATER TIMER USER MANUAL



Suitable for: lawns, gardens, shrubs, grounds yards, flower pots, holiday watering, etc.

INTRODUCTION

1.Thank you for purchasing the Water Timer produced by our company.
2.This manual provides guidelines and precautions for use of this product.For the best application performance of this product, please read this manual carefully before use and keep it for further reference.
3.The Company reserves the right to update and modify the design specifications and the contents of this manual without prior notice.

PRODUCT FEATURES

1. Load the battery, the product is automatically switched on
2. HD backlit display, default 30 seconds screen rest.
3. According to your needs, you can comfortably and flexibly set up the A/B Zone independent irrigation programme.
4. Rain sensor function helps to prevent over-watering.
5. Manual watering operation is available at any time.
6. With screen unlock function to avoid misuse.

BUTTON INSTRUCTION



Set current time

A zone

B zone

Confirm button

Manual button

Rain sensor

Screen lock

Stop button

High-definition backlight display

Up and down to adjust the time
Left and right to switch programs

Note: If you need to view the program set by A/B zone, directly press the A/B zone button to view the PI-P4 program. After viewing, press A/B zone to exit the viewing.
If you need to stop the P1-P4 program, select the program to be stopped and press the stop button, then this group of programs will be closed.

LCD SCREEN INFORMATION

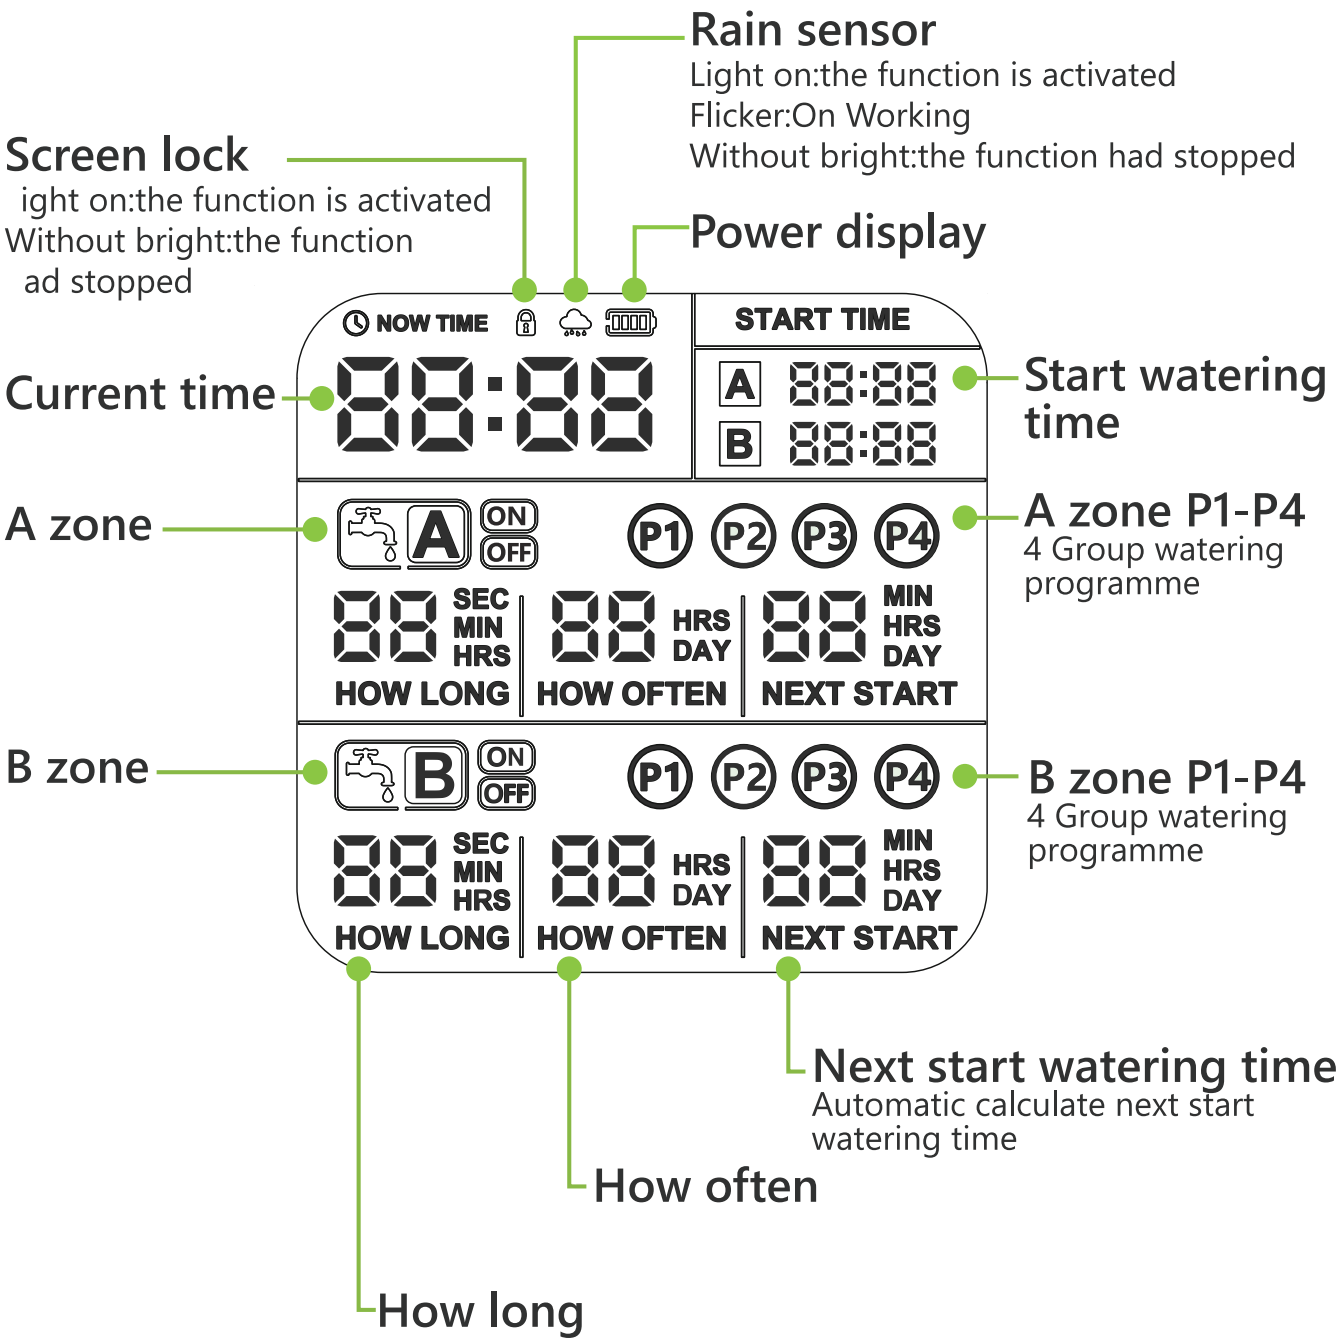

SETTING WATERING PROGRAMME AUTOMATIC

1 Set current time



Short press (time button) set current time,switch minute and hour by ◀ and ▶ button, adjust time by + and − button,press “OK” button confirm .

2 Set A zone watering programme

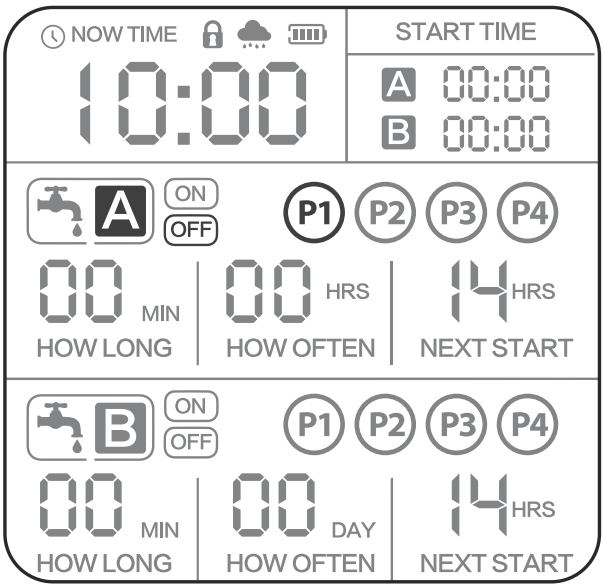

Short press”A” button,screen will show P1 programme flickers, press ◀ and ▶ button,choose P1-P4 programme.Press “OK” button confirm,programme will turn to “START TIME” automatic.

SETTING WATERING PROGRAMME AUTOMATIC

❸ Set “START TIME“

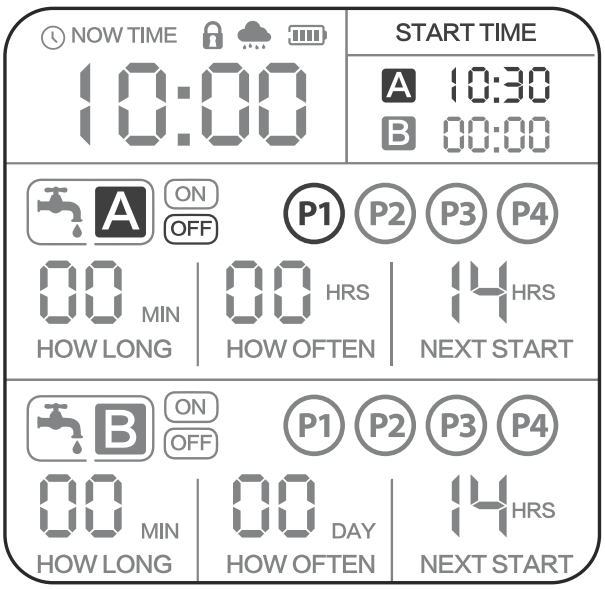

Switch minute and hour by ◀ and ▶ button,adjust time by + and — button,press “OK”button confirm, programme will turn to “HOW LONG “watering time automatic.

❹ Set “HOW LONG” watering time

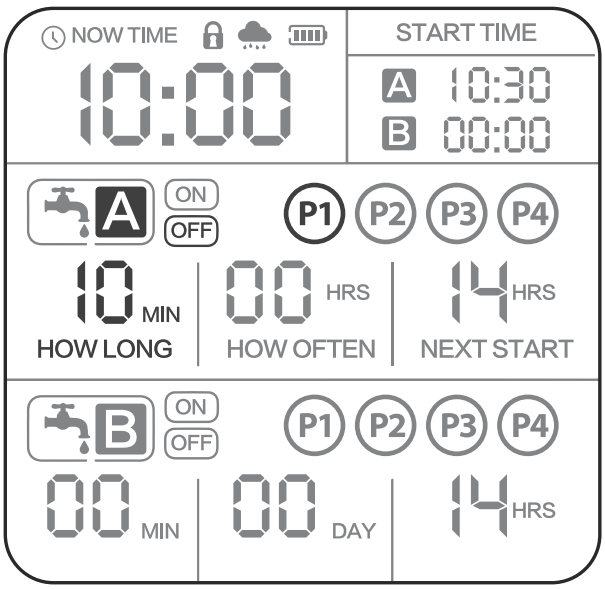

Adjust number by + and — button(Short press change the number,long press speed up number)
Second range:1s-59s
Minute:1min-59min
Hour:1-24hours
Press“OK”confirm,programme will turn to“HOW OFTEN” automatic.

SETTING WATERING PROGRAMME AUTOMATIC

5 Set “HOW OFTEN” watering time

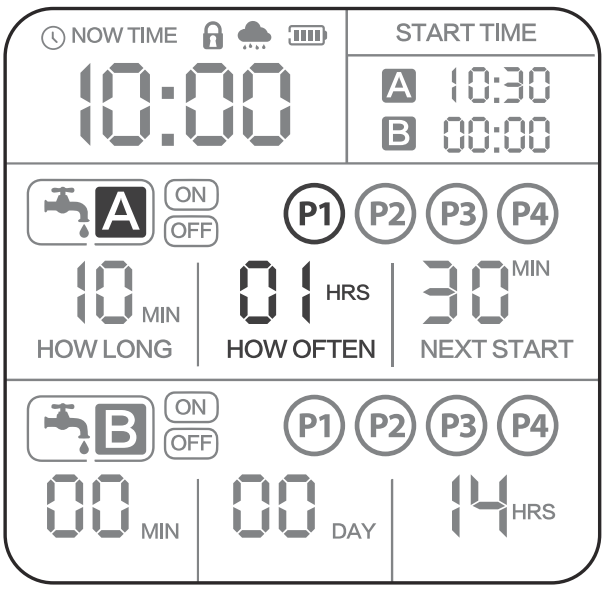

Adjust number by + and − button(Short press change the number,long press speed up number)
Hour:1-24hours
Day:1-32days
Press “OK”confirm, programme will turn to “NEXT START TIME ” automatic.

Note 1: If you need to set the same time every day watering, then "HOW OFTEN" is set to 24 hours;
If you need to water every other day, then "HOW OFTEN" is set to 1 day;
If you need to water every second day, then "HOW OFTEN" is set to 2 days.
.....

Note 2: Setting watering time（HOW LONG）cannot be longer than the interval time(HOW OFTEN). If it is longer than the interval time, the machine will always be in the watering state.

SET MANUAL WATERING

❶ Set Manual watering

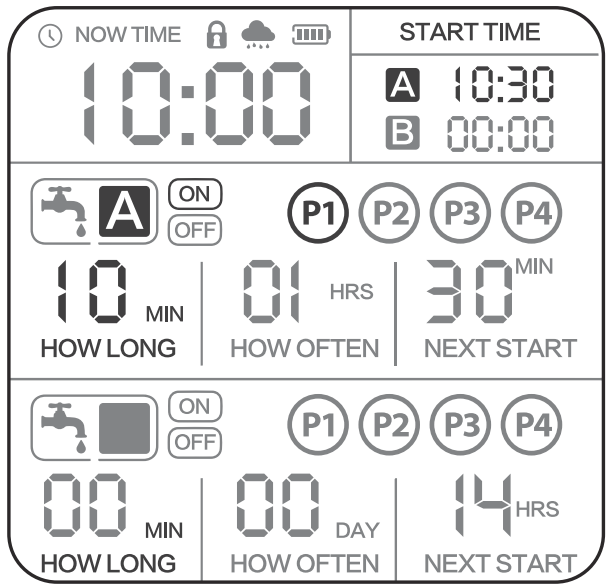

Press the button

1 .A zone and B zone “HOW LONG” in the screen is flicker,the original time is 10 minutes, press “OK”confirm,A/B zone will start manual watering.

2.A zone and B zone “HOW LONG” in the screen is flicker,press “A” zone button adjust time ,then press “B” zone button adjust time, press “OK” confirm,A and B zone will start manual watering one by one.

3.A zone and B zone “HOW LONG” in the screen is flicker,press “A” zone button adjust time,press “OK”confirm,A zone will start manual watering.

4.A zone and B zone “HOW LONG” in the screen is flicker,press “B”zone button,adjust time,press “OK”confirm,B zone will start manual watering

Seconds:1s-59s. Minutes:1min-59min. Hour:1h-24 hours.

OTHER SETTINGS

1. Low Battery Alert

Low battery automatically exit the watering programme , and keep 3 minutes standby time for battery replacement.

2. Rain Sensor Function

Under normal working condition, the rain sensor function is on by default, if you want to turn off the rain sensor function, please long press  and  button for 5 seconds to turn off or turn on the rain sensor function.

3. Screen Lock

The screen lock is turned off by default, if you need to lock the screen, long press  for 5 seconds to lock the screen.

4. Distance to the next watering:

The system automatically enters the countdown time.

5. Stop Button

If you want to stop watering,press the  button stop current watering programme.

6. To turn off P1-P4 watering programme, select the programme to be turned off and press the  button.

7. If want to clear all programme,long press  button for 5s,all programme will be cleared.

Note: The device is running normally in the resting state, every time you need to check the working status, press any one of the keys, you can light up the screen.

PRODUCT INFORMATION



Name:2 Zone Water timer	Model:WT08
Size:120*60*125mm	Net weight: 473g
Waterproof level:IP54	Power supply:2*1.5VAA
Working water pressure:0.5-8kg	Outlet Connector:3/4”
Water inlet connector:6 point thread	

PACKING LIST



Packed box	*1	
Manual	*1	
Pacifier connector	*2	

MAINTENANCE

1. The replacement and maintenance of the batteries:
   *Please replace the batteries in time when  flicker on the LCD screen.
   *When not using the product for a long time,remove the batteries to prevent them from leaking and damaging the life of the product.
   *Used batteries must be disposed of in accordance with local laws and regulations
2. Do not store this product in the following environments:
   *Places that may be soaked in water or highly dusty.
   *With high concentration of salt or sulfur in the air.
   *With high temperature and high humidity
3. Do not disassemble the product or attempt to change the internal structure.
4. Alcohol, thinner, etc. on the product shell, especially the LCD display has a corrosive effect so clean the product with a small amount of water to gently wipe.

PRECAUTIONS

1.This product is for outdoor use only,horizontal or inverted installation is prohibited.
2.Do not soak the product in water and please prevent it from high dust.
3.Do not store it with high concentration of salt or sulfur in the air.
4.When expecting freezing temperatures,the product should be removed from the hose faucet and store indoors to avoid potential freeze damage.
5.The product itself does not produce pressure, with the pressure of tap water; tap water or a pressure water source, the product can only produce water normally.

6.Please clean the stainless steel filter regularly to avoid clogging; if damaged, please replace it in time.
7.When the power is low,please replace the batteries in time to avoid the interruption of the normal operation; when replacing the batteries, please make sure that the battery compartment is dry.
8.Children should be forewarned that they could not play with the product while it is under working.
*Any loss resulted from violation of above rules will not be borne by our company.

TROUBLES SHOOTING

THE LCD SCREEN DOES NOT DISPLAY ANYTHING WHEN THE BATTERIES ARE INSTALLED. Check If:

*The two batteries loaded are new 1.5V AA alkaline batteries.
*The batteries are properly placed as per the mark of +/- .
*The LCD screen goes to sleep.

WATER DOES NOT COME OUT AT THE SETTING TIME. Check If:

*The current time is set correctly.
*Start time for irrigation is set accurately.
*Rain sensor is on.Clear if necessary.
*The product is in the OFF interface(pause state).
*The battery power is exhausted.
*The faucet is turned off.

THE HOSE TAP CONNECTION /OUTLET LEAKS. Check If:

*The O-ring is installed correctly.
*The hose tap connection /outlet / water pipe is broken.
*Whether the faucet/water pipe thread is consistent with the product thread.
Use an appropriate adapter or PTFE tape if necessary.

WARRANTY CARD

Thank you for purchasing our products. Users who purchased our products are provided withr conditional warranty You may contact local distributors or special repair stations with the prod d invoice and warranty card if your device fails due to quality problems

Notes of Warranty:

1.Within one year from the date of purchase by the user, in case of failure of the product under normal use, the Company shall provide free warranty and parts replacement services according to the fault conditions.

2.This warranty card and the purchase invoice is the company to provide customers with after-sales service credentials This card should be filled in the following form in detail, and the dealer stamped with the official seal is valid.

3.In any of the following circumstances,no free warranty service is provided,and instead, charge will be made for repairs:

(1) Beyond the warranty period;

(2) Damage caused by improper use, maintenance or storage;

(3)Failure or damage caused by disassembly repair or modify cation of the product without the permission of the Company;

(4)Machine Failure or damage to machinery due to force majeure;

(5) Wearing parts and accompanied accessories.

Thank you very much for purchasing our product. If you have any problems, please contact us promptly

E-mail：

sales@rfkjcare.com