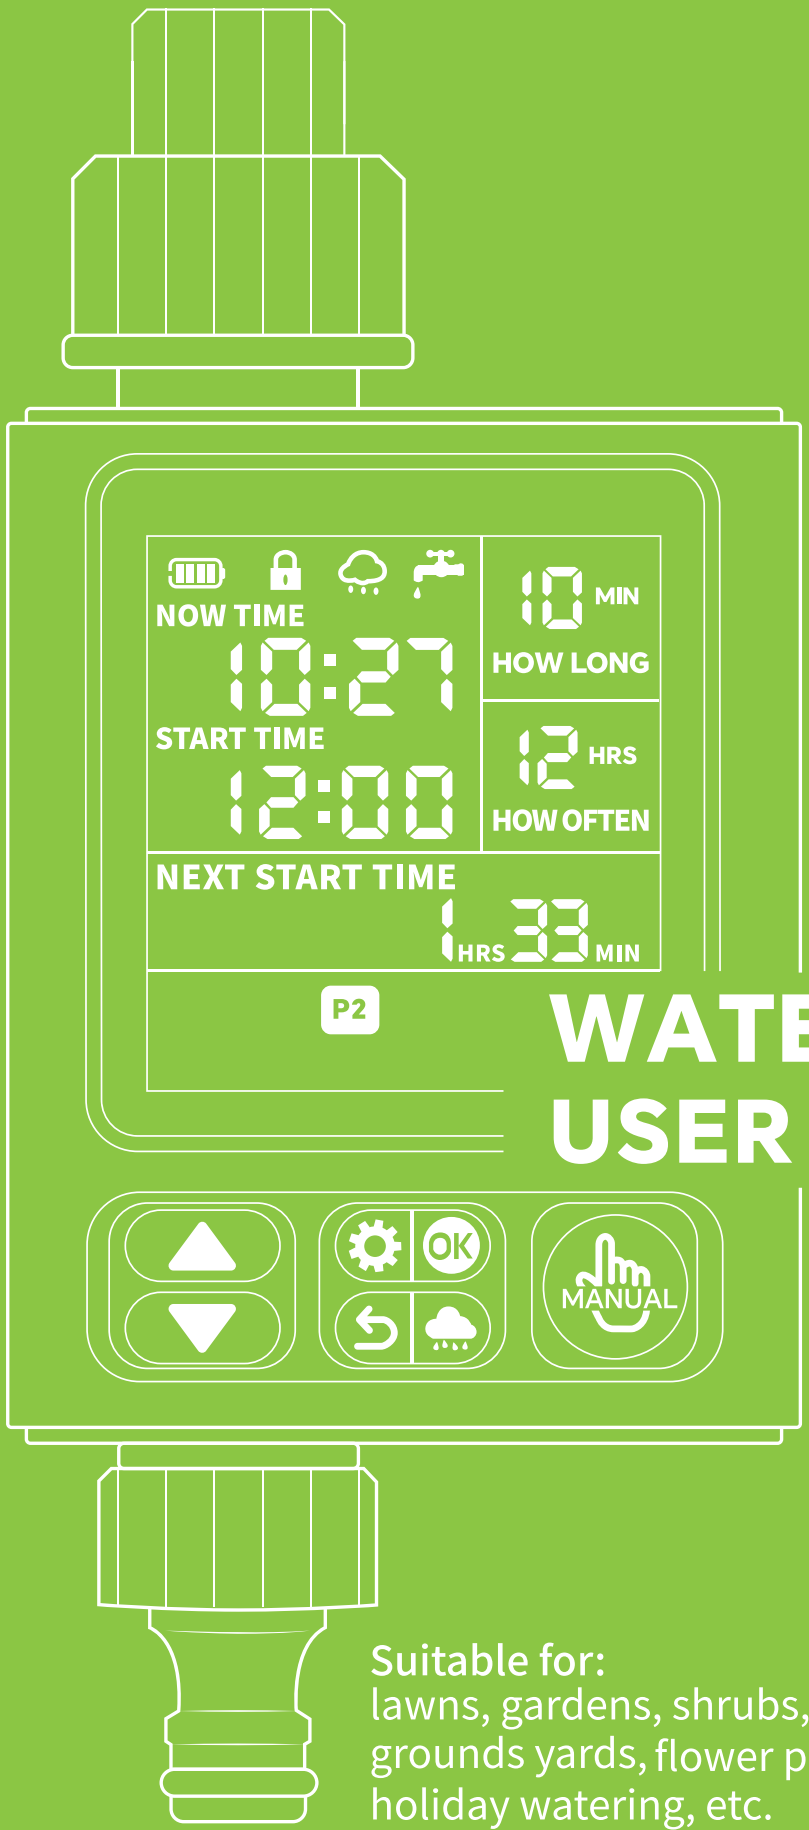


WATER TIMER USER MANUAL

Suitable for:
lawns, gardens, shrubs,
grounds yards, flower pots,
holiday watering, etc.

INTRODUCTION

1.Thank you for purchasing the Water Timer produced by our company.


2.This manual provides guidelines and precautions for use of this product.For the best application performance of this product, please read this manual carefully before use and keep it for further reference.

3.The Company reserves the right to update and modify the design specifications and the contents of this manual without prior notice.

PRODUCT FEATURES


1. Load the battery, the product is automatically switched on.
2. HD backlit display, default 10 seconds screen rest.
3. According to your needs, you can comfortably and flexibly set up the 10 groups independent irrigation programme.
4. Rain sensor function helps to prevent over-watering.
5. Manual watering operation is available at any time.
6. With screen unlock function to avoid misuse.

01/ Button instruction

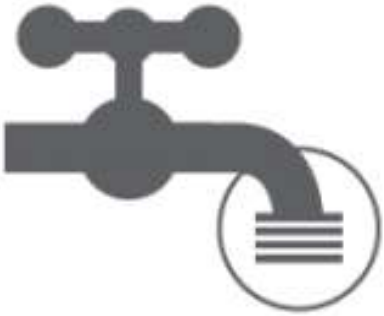



02/ LCD Screen information

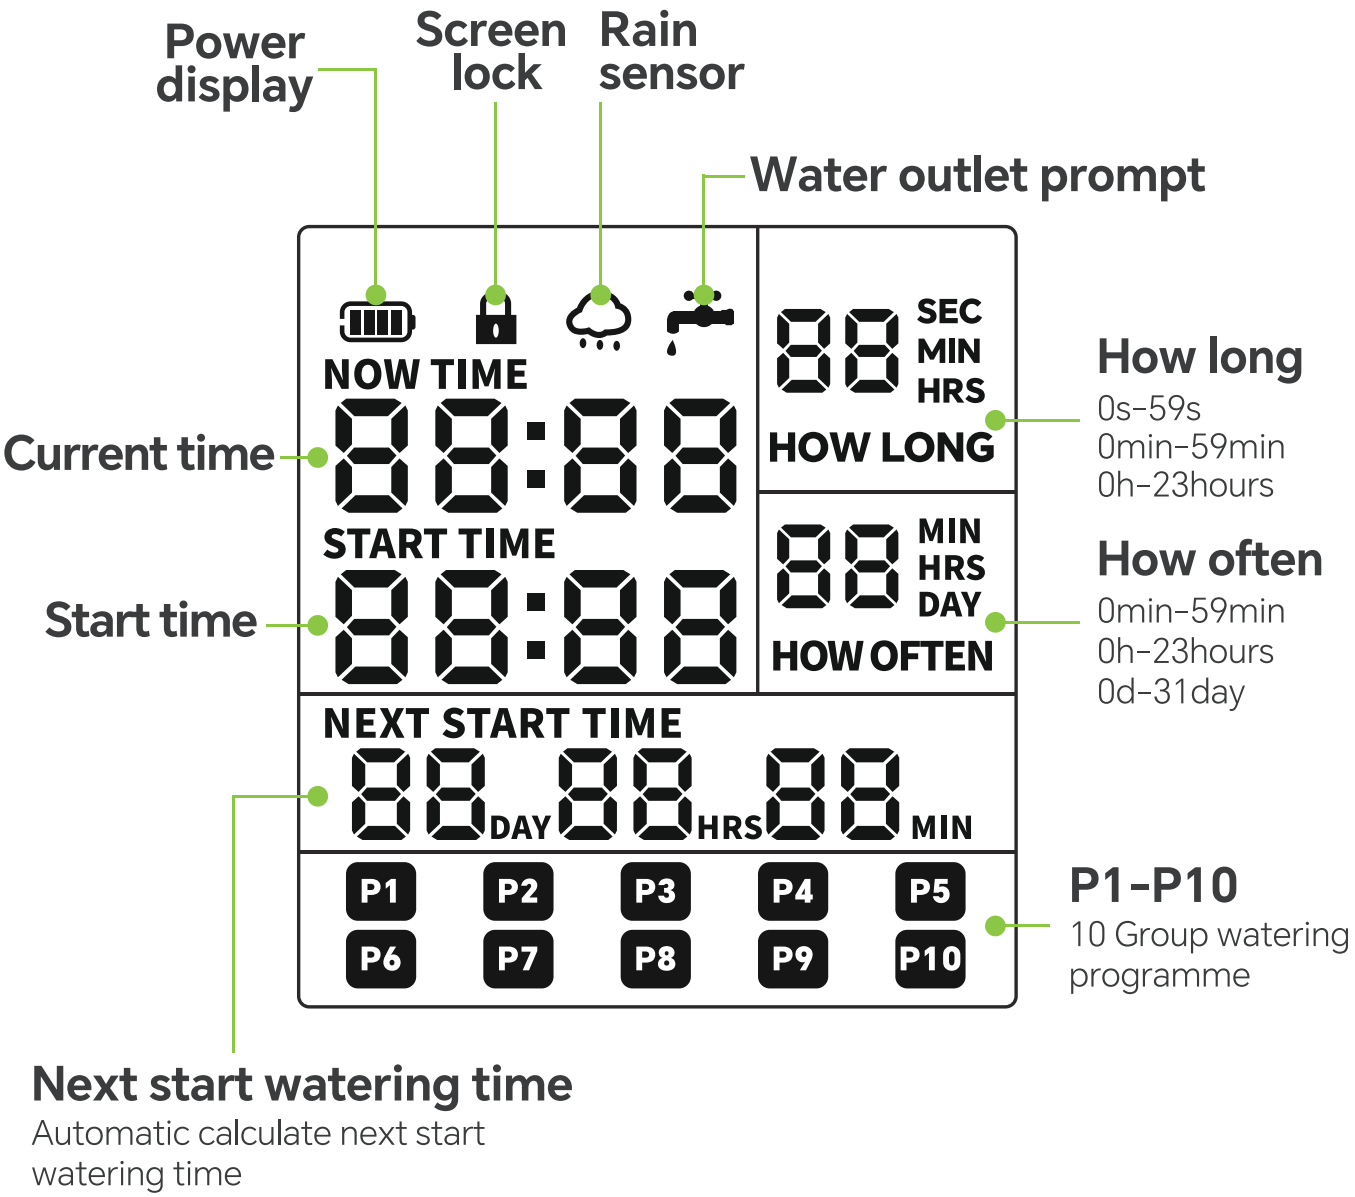


03/ Setting watering programme automatic



1 Set "NOW TIME"

Short press the "⚙" key to set the current time,
Press" ▲▼ "key adjust hour,
Press" OK "confirm.
Press " ▲▼ "key adjust minute,
Press" OK "confirm.
" NOW TIME"setting finished, the system automat jumps to set "P1-P10"programme.

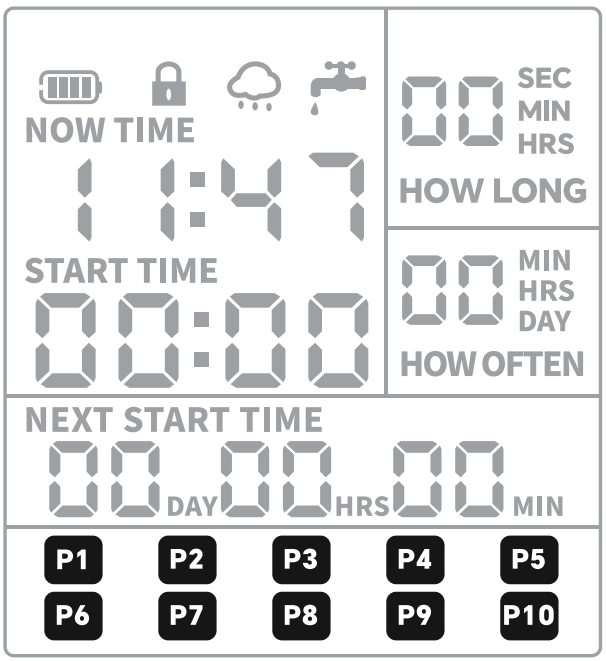

2 P1-P10 program


Short press the "▲▼" key to select the P1-P10 program group,
Press the "OK" key to confirm.

03/ Setting watering programme automatic



3 Open/close program

The product is already enabled by default at the factory,To close this group of programs, please press "▲▼" Select 'no' key and press the "OK " key to confirm,Close the watering program for this group.

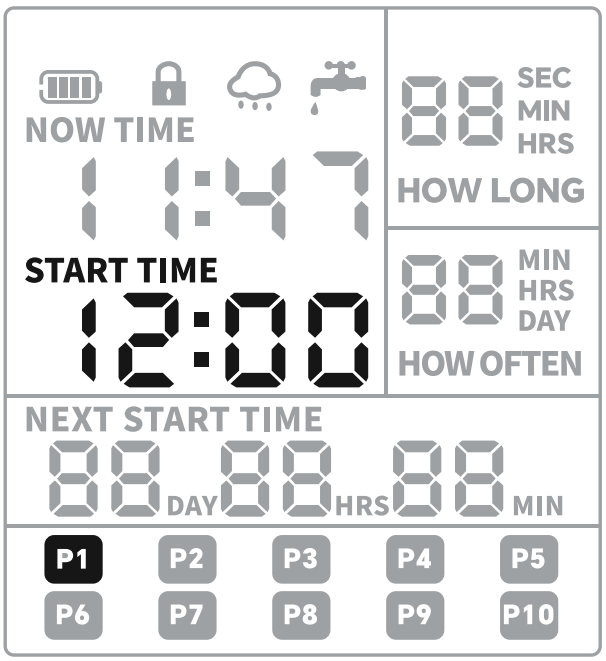

4 Set “START TIME”

Press "▲▼"key adjust hour,
press "OK"confirm.
Press "▲▼" key adjust minute,
press "OK"confirm.
"START TIME"setting finished,
the system automatic jumps to
set "HOW LONG"watering.

03/ Setting watering programme automatic



5 Set “HOW LONG” watering time

"HOW LONG"watering could set:
Second:0-59s
Minute:0-59m
Hour:0-23h
Factory default hour,
Press "▲▼"key adjust hour,
press "OK"confirm
(Setting second and minute is same with hour).
"HOW LONG"setting finished,
the system automatic jumps to set "HOW OFTEN"watering.



6 Set “HOW OFTEN” watering time

"HOW OFTEN"watering could set:
Minute:0-59m
Hour:0-23h
Day:0-31days
Factory default days,
Press "▲▼"key adjust day,
press "OK"confirm
(Setting minute and hour is same with day).
"HOW OFTEN"setting finished.

04/ Set manual watering

If you want watering immediately-could set manual watering.



Short press the " " key to enter the manual watering setting. The factory default setting is 10 minutes,

Second:0-59s

Minute:0-59m

Hour:0-24h

Press the " " key to set the duration.

Press the " OK " key to confirm.

05/ Other settings



1. Restore Factory Defaults

Press and hold the "⮌" key for 10 seconds to reset and restore to factory default values.

2. Screen Lock

Press the "🌧" and "OK" keys simultaneously for 5 seconds to activate or deactivate the child lock.

3.Rain sensor turn on the switch

Short press the "🌧" key to turn on or off the rain sensing.

4. LCD Backlight

Press any button to turn it on, and turn it off for 10 seconds without any button operation.

06/ Product information



Name: Water timer

Size: 22*10*6.5cm

Power supply:2*1.5VAA

G.W:420g

Outlet Connector: 3/4 " standard garden hose

Working water pressure:0.5-8kg

Water inlet connector:6 point thread

07/ Packing list



Packed box	*1	
Manual	*1	
Pacifier connector	*1	
6 point thread connector	*1	
Active cover	*1	
Product	*1	

MAINTENANCE

1. The replacement and maintenance of the batteries:
   *Please replace the batteries in time when  flicker on the LCD screen.
   *When not using the product for a long time,remove the batteries to prevent them from leaking and damaging the life of the product.
   *Used batteries must be disposed of in accordance with local laws and regulations
2. Do not store this product in the following environments:
   *Places that may be soaked in water or highly dusty.
   *With high concentration of salt or sulfur in the air.
   *With high temperature and high humidity
3. Do not disassemble the product or attempt to change the internal structure.
4. Alcohol, thinner, etc. on the product shell, especially the LCD display has a corrosive effect so clean the product with a small amount of water to gently wipe.

PRECAUTIONS

1.This product is for outdoor use only,horizontal or inverted installation is prohibited.
2.Do not soak the product in water and please prevent it from high dust.
3.Do not store it with high concentration of salt or sulfur in the air.
4.When expecting freezing temperatures,the product should be removed from the hose faucet and store indoors to avoid potential freeze damage.
5.The product itself does not produce pressure, with the pressure of tap water; tap water or a pressure water source, the product can only produce water normally.

6.Please clean the stainless steel filter regularly to avoid clogging; if damaged, please replace it in time.
7.When the power is low,please replace the batteries in time to avoid the interruption of the normal operation; when replacing the batteries, please make sure that the battery compartment is dry.
8.Children should be forewarned that they could not play with the product while it is under working.
*Any loss resulted from violation of above rules will not be borne by our company.

TROUBLES SHOOTING

THE LCD SCREEN DOES NOT DISPLAY ANYTHING WHEN THE BATTERIES ARE INSTALLED. Check If:

*The two batteries loaded are new 1.5V AA alkaline batteries.
*The batteries are properly placed as per the mark of +/- .
*The LCD screen goes to sleep.

WATER DOES NOT COME OUT AT THE SETTING TIME. Check If:

*The current time is set correctly.
*Start time for irrigation is set accurately.
*Rain sensor is on.Clear if necessary.
*The product is in the OFF interface(pause state).
*The battery power is exhausted.
*The faucet is turned off.

THE HOSE TAP CONNECTION /OUTLET LEAKS. Check If:

*The O-ring is installed correctly.
*The hose tap connection /outlet / water pipe is broken.
*Whether the faucet/water pipe thread is consistent with the product thread.
Use an appropriate adapter or PTFE tape if necessary.

WARRANTY CARD

Thank you for purchasing our products. Users who purchased our products are provided withr conditional warranty You may contact local distributors or special repair stations with the prod d invoice and warranty card if your device fails due to quality problems

Notes of Warranty:

1.Within one year from the date of purchase by the user, in case of failure of the product under normal use, the Company shall provide free warranty and parts replacement services according to the fault conditions.

2.This warranty card and the purchase invoice is the company to provide customers with after-sales service credentials This card should be filled in the following form in detail, and the dealer stamped with the official seal is valid.

3.In any of the following circumstances,no free warranty service is provided,and instead, charge will be made for repairs:

(1) Beyond the warranty period;

(2) Damage caused by improper use, maintenance or storage;

(3)Failure or damage caused by disassembly repair or modify cation of the product without the permission of the Company;

(4)Machine Failure or damage to machinery due to force majeure;

(5) Wearing parts and accompanied accessories.

Thank you very much for purchasing our product. If you have any problems, please contact us promptly

E-mail：

sales@rfkjcare.com