材质：157g 铜版纸

尺寸：140X140MM

装订方式:扇形折

颜色:四色印刷

Petory

# User Manual

## Wi-Fi Pet Feeder

**F01W**

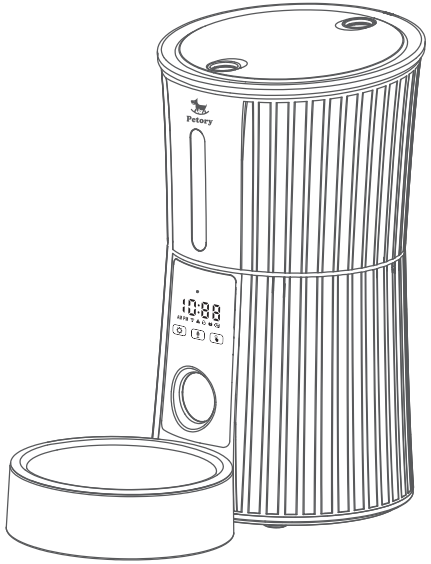
Petory
10:88

Please read this manual careful before using.

0.3.0.02.PF01W001-10-02

## IMPORTANT SAFETY INFORMATION

Thank you for choosing Petory F01W Pet Feeder. Petory brand dedicated to using technology to create a better life for you and your pets.

## WARNING

- Dispose of all packaging materials properly. Some items may be packed in plastic bags; these bags could cause suffocation; keep away from children and pets.
- Do NOT allow small children to play with, in or around the pet feeder.
- To reduce the risk of injury, please keep close supervision when an appliance is used near children.
- Do NOT use the feeder with pets not able to reach the food tray or with any physical disability.
- Do NOT immerse the base part in water at any time as it may damage electronic components like the control panel.
- Do NOT place any foreign object in the pet feeder
- Do NOT use outdoors. Check operation frequently to be sure the unit is dispensing properly.
- Do NOT use wet, canned or moist food.
- Do NOT disassemble the unit other than as instructed in this User Guide.
- Do NOT use the feeder for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the pet feeder.
- Do not operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the pet feeder yourself. Contact our customer service immediately for further instructions.
- Examine the feeder after installation. Do not plug in if there is water on the power cord or plug.
- To avoid tripping, always position power cord out of the way of foot traffic.

## CAUTION

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store to protect the power cord.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet feeder where it will be exposed to weather or temperatures below 4°C/40°F.
- Use alkaline D batteries to power. Do NOT use rechargeable batteries.
- Check the batteries regularly. Before Leaving for extended time, always replace batteries with new ones.
- Do NOT lift the pet feeder by lid, food tank, or food tray. Lift and carry it using both hands and the base, while keeping the unit in an upright position.
- Suitable for dry food ONLY, with kibble size ranging from 5-18mm/0.2-0.7in in diameter. Larger kibble may get stuck at the food outlet.
- Do not put your fingers into the food outlet or let your fingers touch the rotor.
- Read and observe all important notices listed on the pet feeder and in the packaging.

## Product Overview

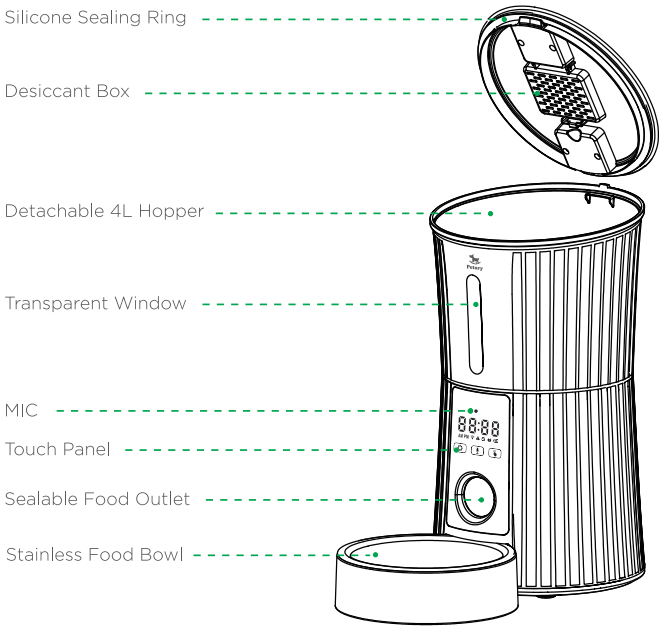
Silicone Sealing Ring
Desiccant Box
Detachable 4L Hopper
Transparent Window
MIC
Touch Panel
Sealable Food Outlet
Stainless Food Bowl

## Product Specifications

| | |
|---|---|
| Product Model | F01W |
| Input | DC5V |
| Dimensions | 13*7.7*14 inches; 4.45 Pounds |
| Dual Power | Type-C/3 cell D batteries |
| Capacity | 16.9 Cups(only dry food) |
| Programmable | 1-50 portions; 10g per portion; 10 meals per day |

## Prepare for setting

1.Assemble the bowl. Plug in power adaptor, make sure the Power Switch at "I" location.

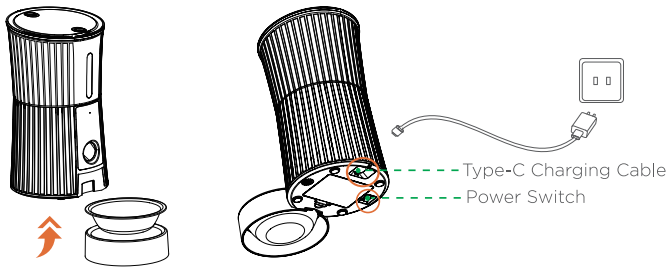
Type-C Charging Cable
Power Switch

2. Recommended to install battery to ensure that the feeder works properly when the power is off.

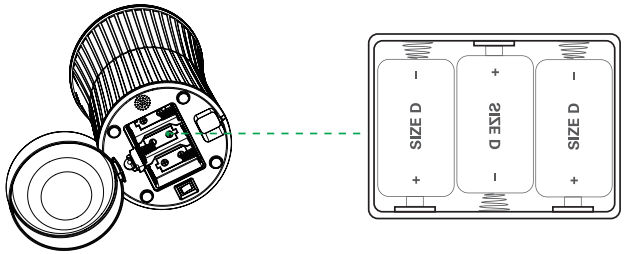
SIZE D
SIZE D
SIZE D

3. Press inward at the same time to open the lid.
•Recommended kibble size: 5-18mm/0.2-0.7 inch in diameter.

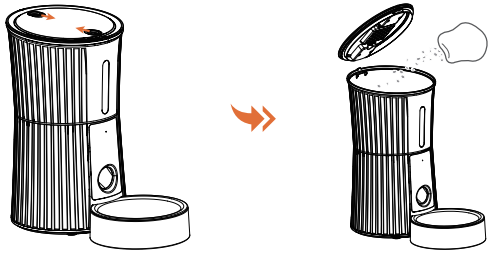

## Operation Interface

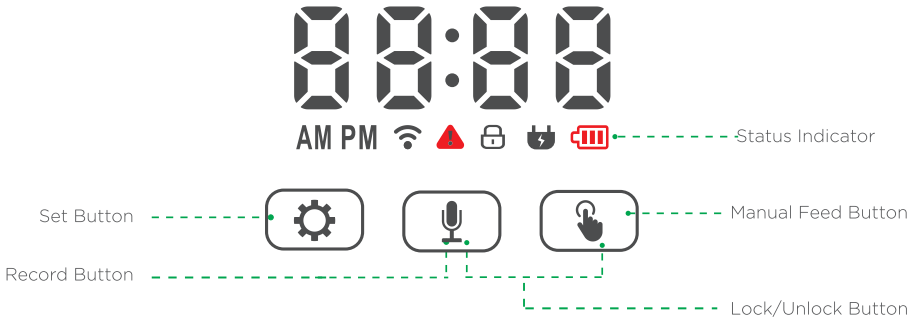
AM PM
Status Indicator
Set Button
Record Button
Manual Feed Button
Lock/Unlock Button

## Indicator/Button Quick Guide

| Icon | Meaning |
|---|---|
| 10:08 | Initial setting time is 10:08, automatically synchronize network time when connected to the network |
| 📶 | **White blinking:** Waiting to connect to network<br>**White solid:** Connected to Wi-Fi<br>**Red blinking:** Offline |
| ⚠ | **Red blinking:** Mechanical error |
| 🔒 | **White solid:** Button locked |
| 🔌 | **White solid:** Connected external power |
| 🔋 | **Red blinking :** No battery<br>**White solid:** Batteries installed<br>**Red solid:** Low battery |
| ⚙ | Long press to switch Wi-Fi indicator status |
| 🎙 | Long press to record or cancel audio. Audio can be up to 10s. |
| 🎙 👆 | Press and hold 2s at the same time to unlock/lock the feeder |

**Note: The screen will be locked automatically without operation for 90s.**

## Connect to APP

**System Requirements:**

* iPhone with iOS 10.0.0 or later or compatible Android smartphone 5.0.0 or later
* Not suitable for iPad
* Wireless router 2.4GHz

**Install the APP and Log in**

1. Search for "**Petory**" in your phone's app store or scan the QR code to download the app.

2. Sign up and log in your account

**Add the Device**

**A: Add the feeder via Bluetooth mode**


No devices
Add Device
Home
Me

Open Bluetooth and click "**Add Device**"


Add Device
Discovering devices...
Add
Add Manually
Wi-Fi Pet Feeder

Searching for nearby devices. Make sure your device has entered pairing mode.

Add discovered device


Cancel
Choose Wi-Fi and enter password
Wi-Fi Name
Password
Next

Enter your Wi-Fi name or allow location access to find nearby Wi-Fi devices.

Enter 2.4GHz Wi-Fi name and password


Add Device
Done
1 device(s) being added
Wi-Fi Pet Feeder
Being added

Waiting for connecting

## B: Add the feeder Manually


Add Device
Add
Add Manually
Wi-Fi Pet Feeder

Searching for nearby devices. Make sure your device has entered pairing mode.

Discovering devices...

Choose “**Add Manually**”


AP Mode
Next
Resetting Devices

Reset the device

1. Power on the device after it has been powered off for 10s.
2. Hold the SET button for 6s, to switch mode.
3. Please confirm the Wi-Fi indicator is blinking slowly (1 flash in 1 second).

○ Confirm the indicator is blinking slowly.

Choose “**AP Mode**”, confirm the Wi-Fi indicator is flashing slowly


Common router setting method
Wi-Fi - 5Ghz
Wi-Fi - 2.4Ghz
Wi-Fi Name
Password
Next

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz.

Enter your Wi-Fi name or allow location access to find nearby Wi-Fi devices. Open

Enter 2.4GHz Wi-Fi name and password


WLAN
SmartLife-XXXX
Go to Connect

Connect your mobile phone to the device's hotspot

- Connect your phone to the hotspot shown below:
- Go back and add devices.

Go to the Wi-Fi connection interface on your phone, find the device “**SmartLife-xxxx**” and tap to connect


01:57
Scan devices.
Register on Cloud.
Initialize the device.

Adding device...

Keep the network stable.

Back to APP and waiting for connecting

## Manual Feeding

Choose “**Feed Portion**” → “**Manual Feed**”
(For reference: 1 portion about 1/10 cup)


Wi-Fi Pet Feeder
Standby
Meal Schedule
Feeding Record
3
4
5
6
Feed Portion(1 portion about 1/10 cup)
Manual Feed

## Set Meal Schedule

“**Meal Schedule**”→”**Add**”→Set feeding time, feeding days, feeding portions


Cancel
Add
Save
AM
PM
01
02
03
04
05
06
07
08
09
10
Sun
Mon
Tue
Wed
Thur
Fri
Sat
Feed Portion(1 p...
1
Feed Portion(1 portion about 1/10 cup)
1
2
3
Cancel
Confirm


Meal Schedule
Add

The timing may have an error of about 30 seconds.

AM 06:00
Every Day
Feed Portion(1 portion about 1/10 cup): 3

AM 10:30
Every Day
Feed Portion(1 portion about 1/10 cup): 4

PM 02:30
Every Day
Feed Portion(1 portion about 1/10 cup): 4

PM 07:00
Every Day
Feed Portion(1 portion about 1/10 cup): 4

PM 11:30
Every Day
Feed Portion(1 portion about 1/10 cup): 3

## Feeding Record & Alarm Notification

After feeding, there will be feeding records in the APP. The feeding records for the last 7 days will be shown. When an error occurs, the number of portions will show 0. You can click “**ME**”→“**Message Center**” to view the alarm notification.

## Setting Page Guide

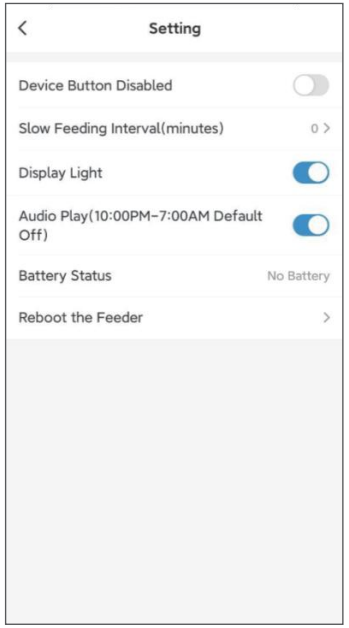

Setting

Device Button Disabled ○

Slow Feeding Interval(minutes) 0 >

Display Light ●

Audio Play(10:00PM-7:00AM Default Off) ●

Battery Status No Battery

Reboot the Feeder >

**Device Button Disabled:**
Turn on this, all feeder buttons are disabled, the screen displays "LLLL" when button is pressed.

**Slow Feeding Interval(minutes)**
Set interval time between each portion

**Display Light**
Turn on/off the indicators on the display
**(If the power supplied by the adaptor only, the display will always be lit. If it's supported by 3*D batteries only without operation for 2 min, the screen will turn off automatically. Press any button can awake it. )**

**Audio Play**
The recording is played 3 times during each feeding and not from 10:00 pm to 7:00 am.

**Battery Status**
Show battery level, low battery, and no battery

**Reboot the feeder**
Reboot feeder, the feeding setting that have been set will not be changed.

## About Cleaning

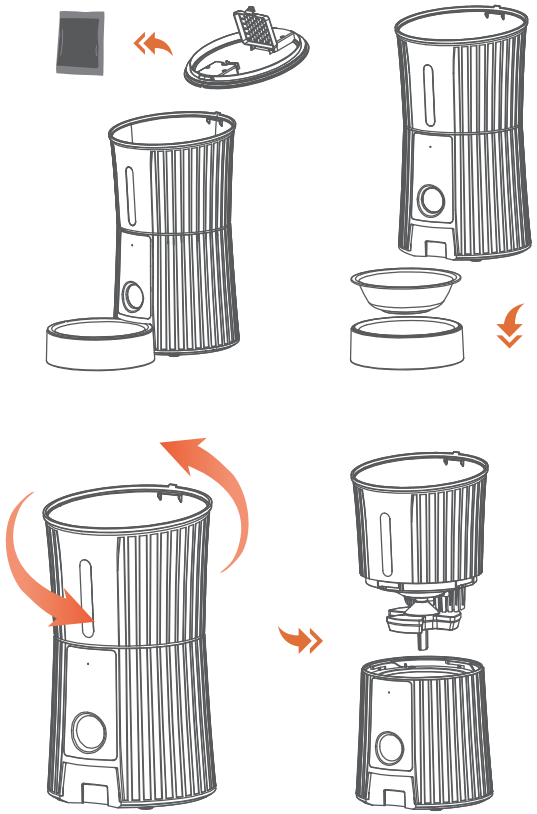

(1) Open the lid and take out the desiccant.
(2) Remove the feeding bowl and empty the grain in the hopper.
(3) Counterclockwise rotate the hopper to separate the hopper from the base.

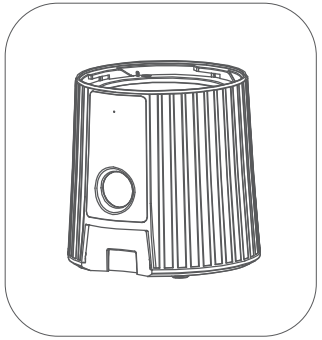

The base unit cannot be submerged in water.

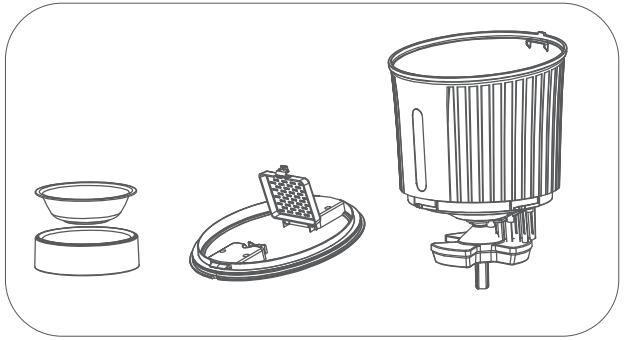

Food bowl, stainless steel bowl, hopper and lid can be washed in the sink.

## Troubleshooting

| Question | Solution |
|---|---|
| **Fail to connect to the network** | 1. Please use USB power adapter to supply power.<br>2. Make sure the phone and router are as close to the device as possible.<br>3. Please select 2.4GHz network or multi-band network.<br>4. Please make sure the Wi-Fi name and password are correct, and do not contain special characters or spaces. |
| **How to check the MAC address of the feeder** | Online status, click ✎ - "Device Information", to check MAC address. |
| **The feeder is offline/ Red Wi-Fi indicator light on** | 1. When the router signal is disconnected, red Wi-Fi indicator flashing fast.<br>2. Power by batteries only, feeder will automatically disconnect from the network to save power. Red Wi-Fi indicator solid. |
| **Offline status, does feeder dispenser food on schedule?** | Of course, the display time on the feeder will be saved even if the feeder offline, it can dispenser food on schedule. |
| **The fault indicator is light on** | E-01: Food outlet is blocking<br>E-02: Food jam or motor does not turn<br>E-03: Food is run out |

| | |
|---|---|
| **How to factory reset the feeder?** | unlocked state, press and hold the setting button for 6 seconds until you hear the beep. |
| **The display time is not correct** | 1. Check network connect status, automatically synchronize network time when connected to the network.<br>2. Check the time zone. “Me”→click profile photo→”Time Zone” |
| **Display screen dimmed** | 1. 10:00 pm-7:00 am the display screen dimmed automatically<br>2. Low battery status, the display screen will dimmed |

## Warranty

Petory offered **ONE YEAR WARRANTY** for F01W, please email our support team via **support@petory.net** or ***1-855-888-9922*** if you have any issues, and attach your order ID in your mail. We will get back to you in 24 hours.

@PetoryStore
Petory Official
✉ support@petory.net
☎ 1-855-888-9922

Made in China

▶ Get Operation Guide