
REDLINE PARLUX

TRIPLE TAILGATE LIGHT BAR (2PC)
FOR 2007~2021 TUNDRA 2ND GEN

INSTALLATION GUIDE

WHAT'S INCLUDED

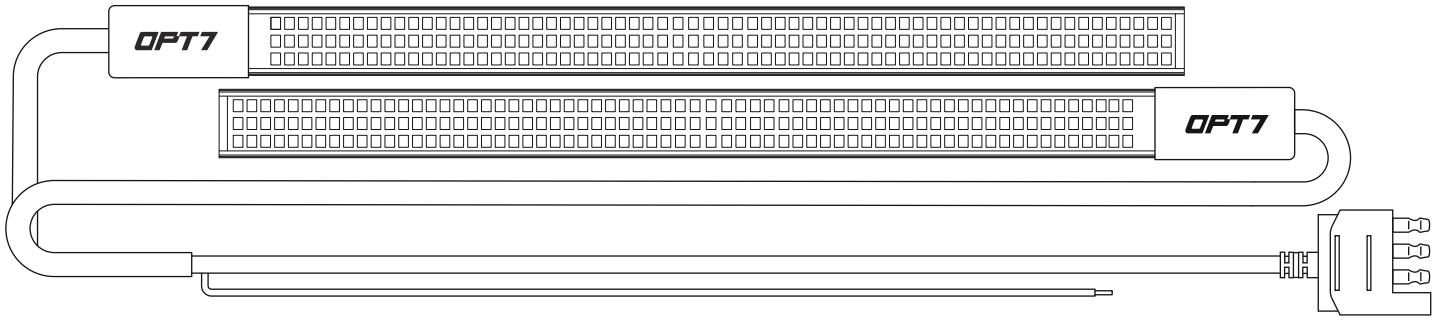


1X Triple Redline LED Bar




1X Plastic Aligner (*Use this part for Option 1, Step 4-5)




1X EVA foam (*Use this part for Option 1, Step 4-5)

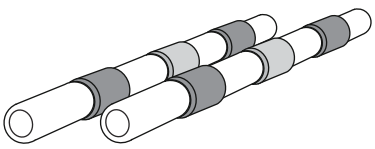

2X Heat Shrinkable Wiring Connector

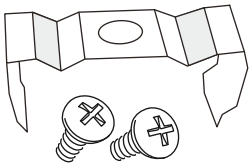


4X Mounting Clips

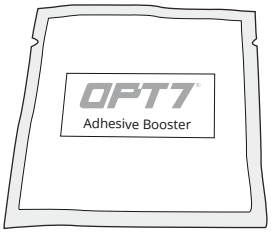


1X Adhesive Booster

INSTALLATION

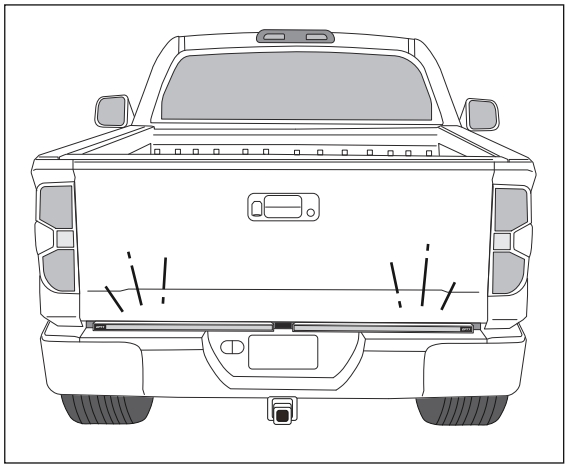


STEP1

Before mounting the Redline Light Bar, perform a bench test by connecting the Redline LED Light Bar to the vehicle. Ensure all the lighting functions work.
*RECOMMENDATION: For a successful install, we encourage you to carefully remove the truck's tailgate from the vehicle to achieve the best results.

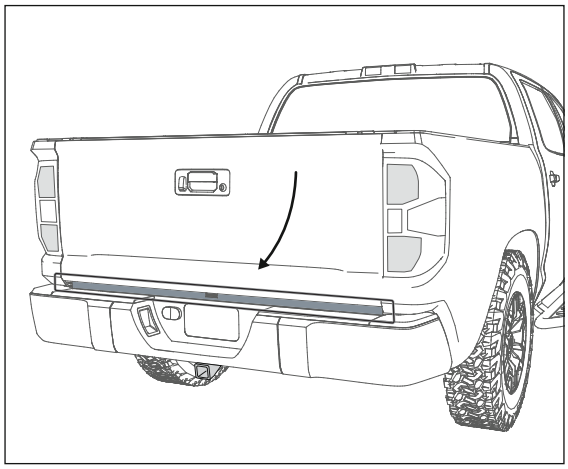


STEP2

Once you have remove the tailgate, prep the area by taking a wash cloth to remove any dirt and debris from the area. Next, using the Adhesive Promoter apply in the area you will be mounting the light bar.

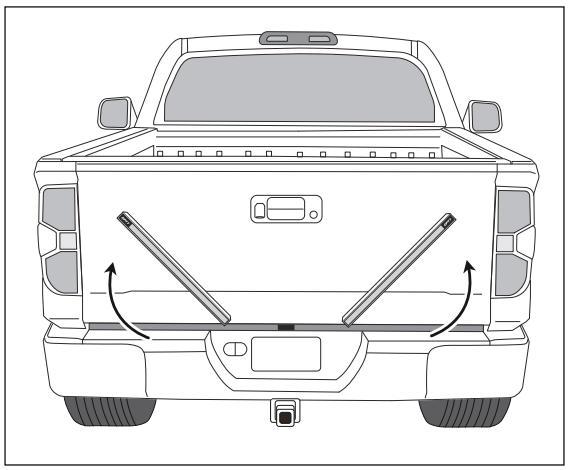

STEP3

Position the Redline Light Bar according to your preference, with the center hatch as a reference point for measurement. For accurate sequential alignment of the light bar, ensure that the OPT7 logos on each end of the vehicle are oriented correctly.

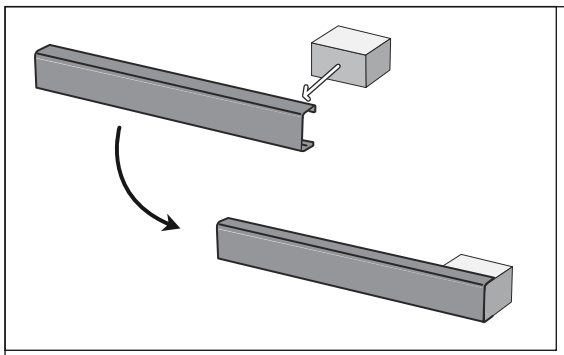



STEP4


OPTION 1


Utilize the EVA and Plastic Aligner to achieve a parallel and horizontal alignment of the LED bars. The EVA will need to be temporary inserted into the middle gap hitch.

INSTALLATION

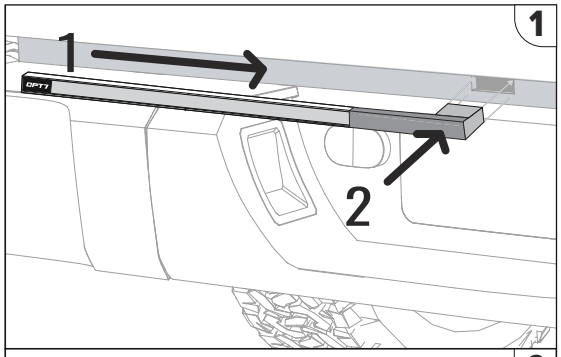

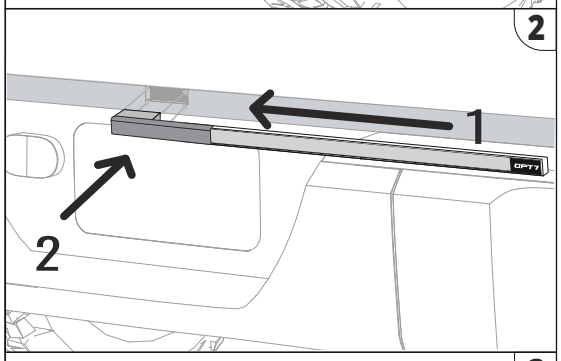

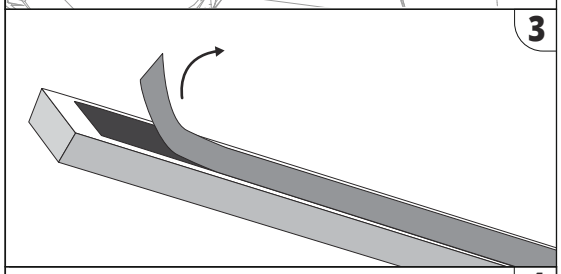

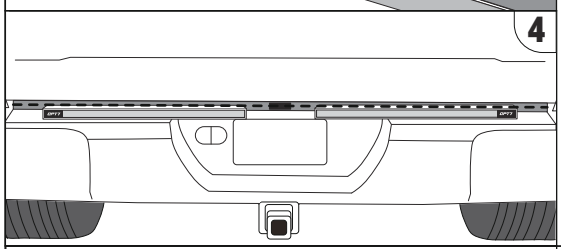


STEP5


1 Take the Plastic Aligner and connect to the LED bar to level the light bar for the left side of the vehicle.

2 Next, repeat this step for the right side of the vehicle.

3 Gently remove the adhesive backing from each LED light bar.

4 Ensure both LED light bars are mounted at the same level.

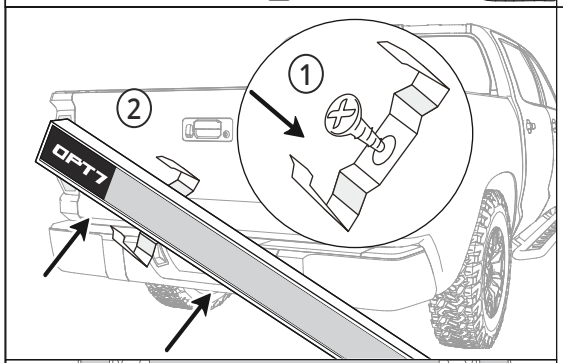

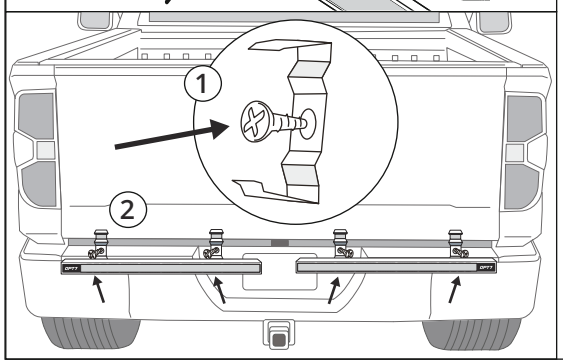

STEP4


OPTION 2

For optimal installation of the Redline LED Bar, carefully plan and mark the desired bracket mounting locations, taking placement into consideration to ensure a straight application.

STEP5

Securely mount the Redline LED Bar to your vehicle using the provided screws and clips to ensure a solid installation.


INSTALLATION

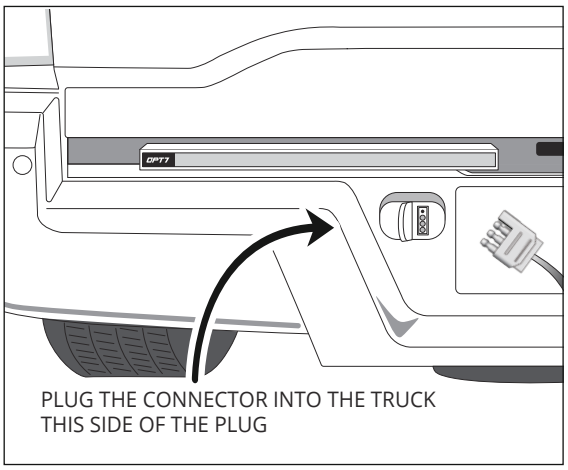

STEP6


OPTION 1: You may plug the 4-pin flat connector into the proper receptacle on the vehicle.

OPTION 2: For a neater installation while retaining the ability to use your trailer plug, consider utiliing the **OPT7 Easy Connect USCAR 7 Pin to 4 Pin Harness with Reverse Wire** available on our website.

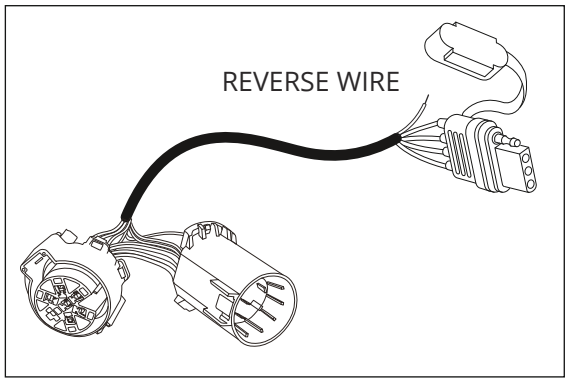


OPT7 Easy Connect USCAR 7 Pin to 4 Pin Harness with Reverse Wire

***Sold separately. Please visit www.opt-7.com for purchasing options.**

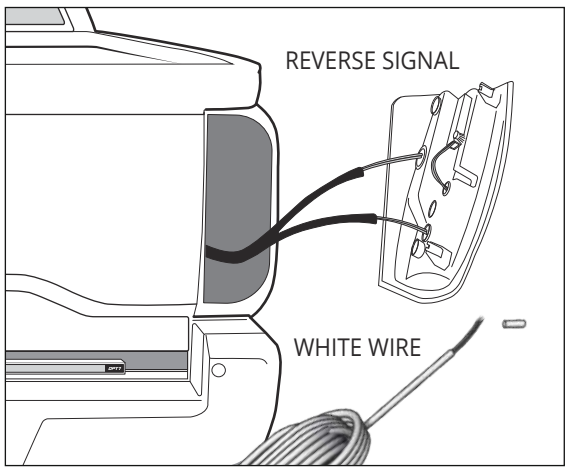

STEP7 WHERE TO CONNECT THE REVERSE SIGNAL ?

If you are not using the OPT7 Easy Connect USCAR 7 Pin to 4 Pin Harness with Reverse Wire, here is another option to connect the Redline Light Bar Reverse Function. Remove the OEM tail lights to locate the OEM reverse wire, using the provided heat shrinkable wiring connector, tap into the connector.

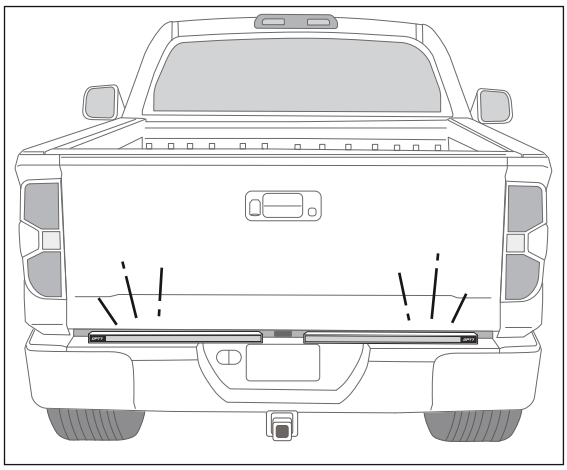


STEP8

Re-test the functionality of the Redline Parlux Tundra LED Light Bar. Ensure all the functions are working.


OPTIONAL

OPT7 Easy Connect USCAR 7 Pin to 4 Pin Harness with Reverse Wire

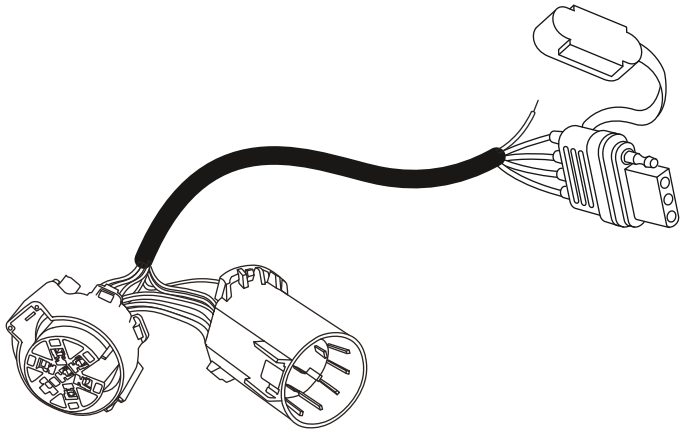

HARD WIRING

If hard-wiring, use image below to identify wire color functions and pair them to appropriately identified wires on vehicle.

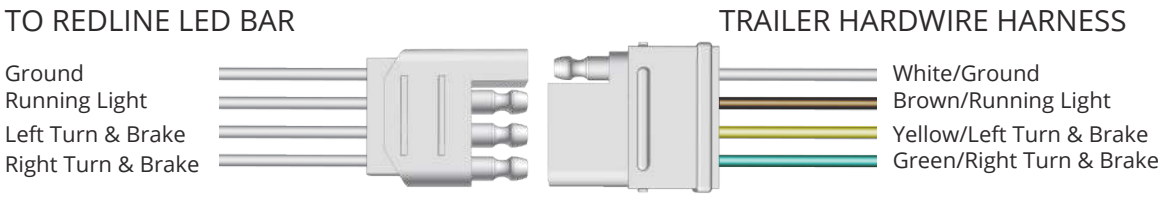

DISCLAIMER

OPT7 Lighting is not liable for damages, injuries, or death while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

1 YEAR WARRANTY