Roof Rack

BXG.1069-S
(INSTALLATION INSTRUCTION)

CONTENTS


Qty	Part Name	Size(mm)	Picture
2	Button Bolts	M8×25	
34	Button Bolts	M8×20	
4	Hex Head Flange Bolts	M8×20	
8	Button Bolts	M6×10	
38	Flat Washer	M8×20×1.5	
8	Flat Washer	M6×12×1.5	
8	Flange Hex Lock Nuts	M8	
8	Tee Sliding Slot Nuts	M6	
2		68×28×2	
2	Mounting Brackets Covers Rubber Mat	79×15×6	
2	Nylon Round Spacer	M8×20×7	
2	Rivet Nut Plate	M8	

INSTALLATION INSTRUCTION

Step 1

Short Aluminum Crossbar Assembly.


- (8) M6x10 Button Bolts
- (8) M6x12x1.5 Flat Washers
- (8) M6 T-nuts

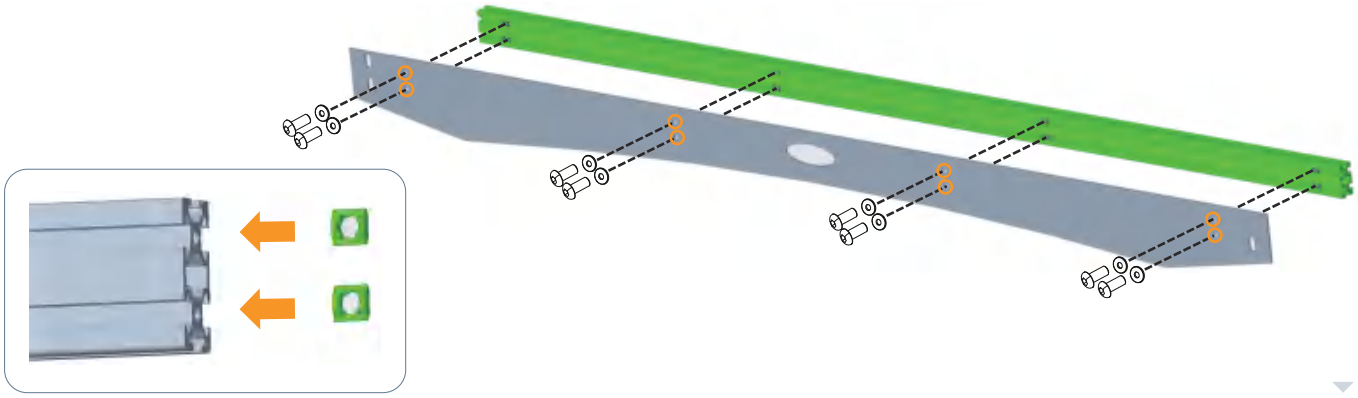


Step 2

Front & Rear Farings Assembly. Repeat this step on the other side of the roof rack. Do not fully tighten to allow adjustability.

- (8) M8x20 Button Bolts
- (8) M8x20x1.5 Flat Washers
- (8) M8 Flange Hex Lock Nuts

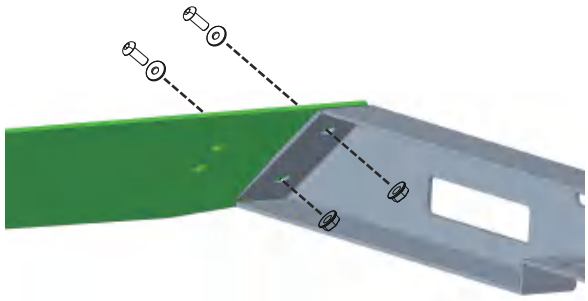


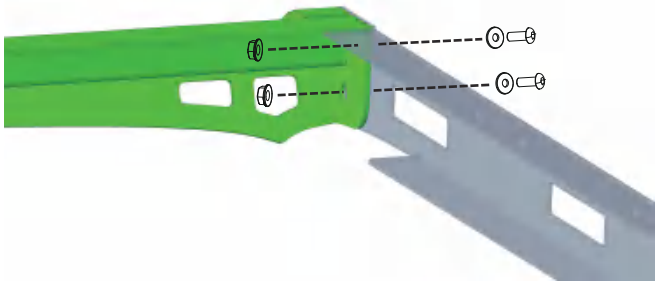

Step 3

Secure the mounting brackets to the side rails.
Do not fully tighten to allow adjustability. Repeat this step on the other side of the roof rack.

- (4) M8x20 Hex Head Flange Bolts
- (4) M8x20x1.5 Flat Washers
- (2) M8 Rivet Nut Plates

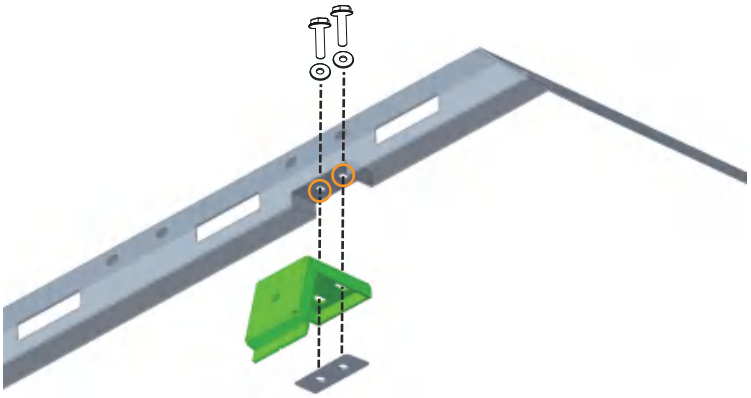

Step 4

Snap the Rubber Mat into the front mounting brackets. Stick the EVA to the front mounting brackets covers and rear mounting brackets.

- (2) 79*15*6 Rubber Mat
  (2) Front Mounting Brackets



- (2) EVA 70×37×2
  (2) Front Mounting Brackets Covers




- (2) EVA 68×28×2
  (2) Rear Mounting Brackets



Step 5

Long Aluminum Crossbar Assembly.
Repeat this step on the other position of the roof rack. Do not fully tighten to allow adjustability.

- (20) M8x20 Button Bolts
- (20) M8x20x1.5 Flat Washers

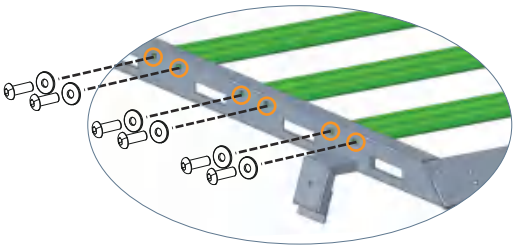


Step 6

Secure the rear mounting brackets to the vehicle. Do not fully tighten to allow adjustability.

- (4) Factory Bolts






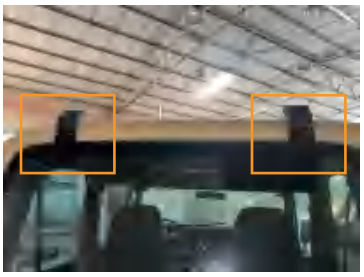

Step 7

Lift the roof rack to the roof of vehicle and adjust it to the desired location. Do not fully tighten to allow adjustability.


- (4) M8x20 Buttom Bolts
- (4) M8x20x1.5 Flat Washers

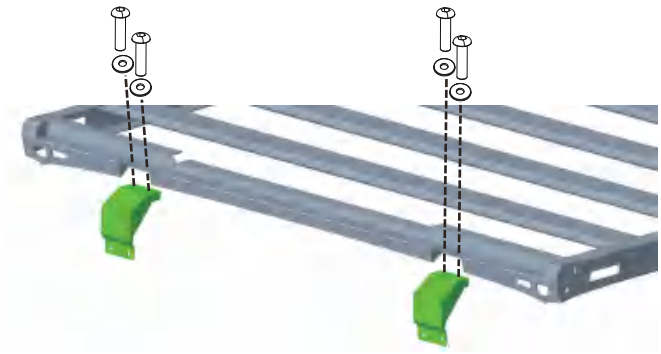


Step 8

Install the mounting bracket covers.
At last, tighten up all bolts.

- (2) M8x25 Buttom Bolts
- (2) M8×20×7 Nylon Round Spacer
- (2) M8x20 Buttom Bolts
- (2) M8x20x1.5 Flat Washers

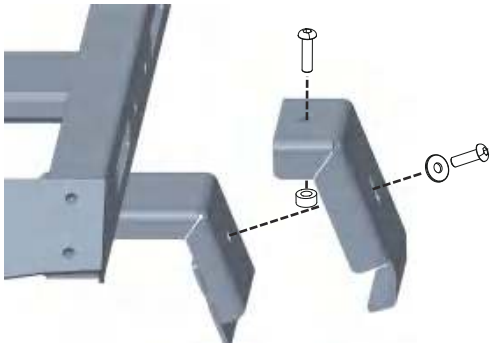

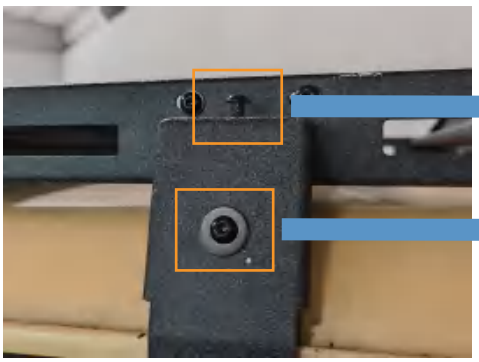

Tighten the upper bolt first, and then tighten the lower bolt.

Step 9

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

