NOTE: IT IS VERY IMPORTANT TO READ AND FOLLOW THE DIRECTIONS IN THE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING WITH THIS REAR WALL TEMPLATE.

This Rear Wall Template serves to position the bottom mounting plate and to locate the horizontal exhaust outlet.

1. Use a level to check that the template is positioned accurately.
2. Locate and mark at least one stud on the left or right side of the centerline.

NOTE: It is important to use at least one wood screw mounted firmly in a stud to support the weight of the microwave. Mark two additional, evenly spaced locations for the supplied toggle bolts.

3. Drill holes in the marked locations. Where there is a stud, drill a 3/16" hole for wood screws. For holes that do not line up with a stud, drill 5/8" holes for toggle bolts.

NOTE: DO NOT INSTALL THE MOUNTING PLATE AT THIS TIME.

4. Remove the template from the rear wall.
5. Review the Installation Instruction book for your installation situation.

3/8" TO EDGE

12"

4"

F. CUT OUT FOR HORIZONTAL OUTSIDE EXHAUST

CUT HOLE THROUGH REAR WALL FOR EXHAUST ADAPTOR

CAUTION - IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE RECOMMENDED DIMENSION, GREASE-LADEN AIR WILL DISCHARGE INTO HOUSE STRUCTURE.

Trim the rear wall template along the dotted line.


Locate and mark holes to align with holes in the mounting plate.

IMPORTANT:
LOCATE AT LEAST ONE STUD ON EITHER SIDE OF THE CENTERLINE.
MARK THE LOCATION FOR 2 ADDITIONAL, EVENLY SPACED TOGGLE BOLTS IN THE MOUNTING PLATE AREA.

30" MINIMUM WIDTH REQUIRED

Trim the rear wall template along the dotted line.

REAR WALL TEMPLATE

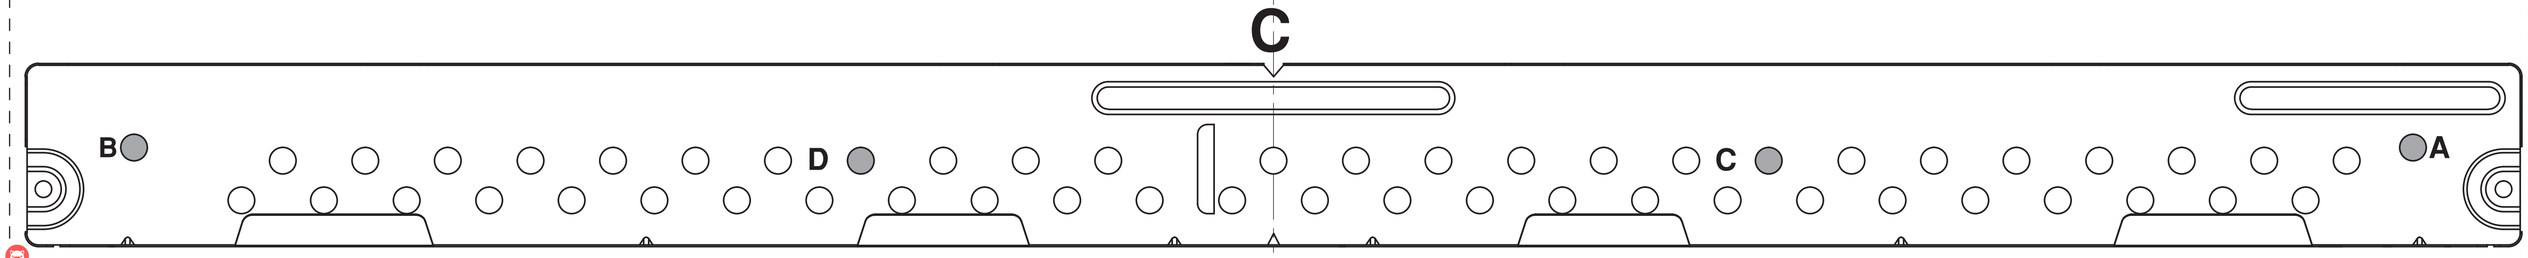

NOTA: ES MUY IMPORTANTE LEER Y SEGUIR LAS INSTRUCCIONES DE INSTALACIÓN ANTES DE CONTINUAR CON ESTA PLANTILLA DE PARED TRASERA.

Esta plantilla de pared trasera sirve para colocar la placa de montaje inferior y ubicar la salida de escape horizontal.

1. Use un nivel para verificar que la plantilla esté colocada con precisión.
2. Ubique y marque al menos un montante en el lado izquierdo o derecho de la línea central.

NOTA: Es importante utilizar al menos un tornillo para madera montado firmemente en un montante para soportar el peso del microondas. Marque dos ubicaciones adicionales, espaciadas uniformemente, para los pernos de palanca provistos.

3. Taladre agujeros en los lugares marcados. Donde haya un montante, taladre un orificio de 3/16" para tornillos para madera. Para los orificios que no se alinean con un montante, taladre orificios de 5/8" para pernos de palanca.

NOTA: NO INSTALE LA PLACA DE MONTAJE EN ESTE MOMENTO.

4. Retire la plantilla de la pared trasera.
5. Revise el libro de instrucciones de instalación para su situación de instalación.

Recorte la plantilla de la pared trasera a lo largo de la línea punteada.

3/8" HASTA EL BORDE

12"

4"

F. CORTE PARA EL ESCAPE EXTERIOR HORIZONTAL

CORTE EL ORIFICIO A TRAVÉS DE LA PARED TRASERA PARA EL ADAPTADOR DE ESCAPE

PRECAUCIÓN: SI EL ADAPTADOR DE ESCAPE SE COLOCA FUERA DE LA DIMENSIÓN RECOMENDADA, EL AIRE CARGADO DE GRASA SE DESCARGARÁ EN LA ESTRUCTURA DE LA CASA.

ANCHO MÍNIMO DE 30" REQUERIDO

Recorte la plantilla de la pared trasera a lo largo de la línea punteada.

Ubique y marque los agujeros para alinearlos con los agujeros en la placa de montaje.

IMPORTANTE:
UBIQUE AL MENOS UN MONTANTE A CUALQUIER LADO DE LA LÍNEA CENTRAL.
MARQUE LA UBICACIÓN PARA 2 PERNOS DE PALANCA ADICIONALES ESPACIADOS IGUALMENTE EN EL ÁREA DE LA PLACA DE MONTAJE.

PLANTILLA DE PARED TRASERA

