Connection of wiring harness



Positive (+) of Low Beam

Positive (+) of High Beam

Ground (-) of Headlight & Halo



Yellow Wire/Positive (+) of Amber Halo/Turn Light (IF ANY)



Red Wire//Positive (+) of White Halo/DRL (IF ANY)

Installation Steps (To Exemplify)



1.Turn off the engine, disconnect the battery and carefully remove the front grille.



2.Remove the existing headlights from the bumper and keep all hardware that attaches the headlights to the vehicle.



3.Unplug the connector of the existing headlight.

NOTE: On newer models there is a red button on the plug that must be pushed up, and a green button that must be pressed and held to unplug the existing lamp.



4.Plug in the headlight H4 plugs.Tap wire to the positive of DRL and turn signal light on both sides(IF ANY).



5.Test these lights to make sure they work well before you put back the hardware.




6.Install fixing screws and the existing hardware.

H4 to H13 Adapter Wiring Harness



Note: Some products may not come with this adapter cable, please refer to the description on the product page.

Lighting Effect (To Exemplify)

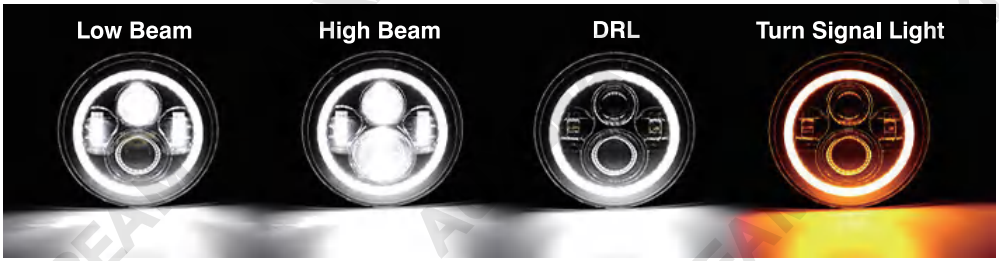



How to remove the moisture in the headlights?

1.Remove the headlights and open the vent valve on the back cover, with the front panel facing down and the cover facing up.

2.Turn on the light for half an hour to remove the moisture.

3.After removing the moisture, cover the vent valve back and install it back in your car.

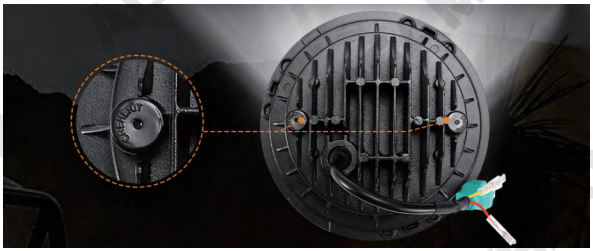

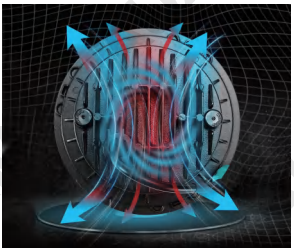

CAUTION

- READ ALL SAFETY MESSAGES AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL THIS PRODUCT.
- ALWAYS WEAR SAFETY GLASSES DURING INSTALL.

QUICK FEEDBACK

IF YOU MEET SOME PROBLEMS, PLEASE CONTACT OUR CUSTOMER SERVICE FOR QUICK HELP.

Method 1:
Scan QR code to obtain supporting.

Method 2:
Email contact AUXBEAM Customer Service.
CUSTOMER@AUXBEAM.COM