INSTALL/REMOVAL INSTRUCTIONS: SELF-CODING IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

REMOVAL/INSTALL OF SELF-CODING IGNITION LOCK CYLINDER (924-793)
Chrysler 2007, Dodge 2010–01, Mitsubishi 2009–06


General Tech Tips:

- This kit enables you to code your existing key to replacement ignition lock without requiring any specialty tools.
- Be sure to perform key coding procedure prior to installation

PLEASE WEAR SAFETY GLASSES!

Key Coding Procedure

STEP 1 / PASO 1 / ÉTAPE 1

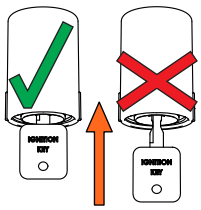


Insert the vehicle key.
(Check that the key is fully seated in the lock cylinder)

Inserte la llave del vehículo.
(Verifique que la llave esté completamente insertada en el cilindro de la cerradura)

Insérer la clef du véhicule.
(Vérifier que la clef soit complètement insérée dans le barillet de serrure).

STEP 2 / PASO 2 / ÉTAPE 2

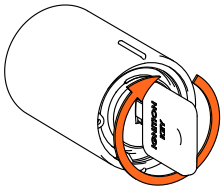


Swiftly rotate the key clockwise → 1 turn.
(Ratcheting will occur during the coding operation)

Rote rápidamente la llave en sentido horario →1 vuelta.
(notará un trinqueteo durante la operación de codificación).

Pivoter rapidement la clef en sens horaire → 1 tour.
(Le rochetage va se produire pendant l'opération de codage).

STEP 3 / PASO 3 / ÉTAPE 3

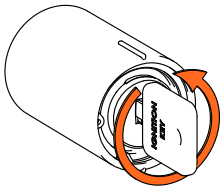


Rotate the key counter-clockwise ← 1 turn.
(If unable to rotate CCW to start step 4, repeat step 2)

Rote la llave en sentido contra horario ← 1 vuelta.
(Si no la puede rotar en sentido contra horario para comenzar con el paso 4, repita el paso 2).

Pivoter la clef en sens antihoraire ← 1 tour.
(En cas d'incapacité de pivoter en sens antihoraire pour commencer l'étape 4, répéter l'étape 2).

STEP 4 / PASO 4 / ÉTAPE 4

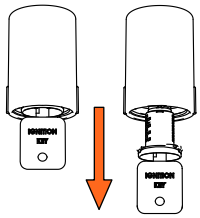

The coded lock cylinder and key will be released from the tool.

El cilindro codificado y la llave serán liberados de la herramienta.

Le barillet de serrure encodé et la clef seront dégagés de l'outil.

Disclaimer:
Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

©2018 Dorman Products, Inc.
No reproductions in whole or in part without prior written approval.

INSTALL/REMOVAL INSTRUCTIONS: SELF-CODING IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 1: Insert your original key fully into replacement lock.

STEP 2: Swiftly rotate key clockwise one full turn.

STEP 3: Rotate key back (counter-clockwise) one turn.

STEP 4: Remove key and tumbler assembly from orange housing.



STEP 5: Remove cap from tumbler shell, then install tumbler assembly with key.




Removal Instructions

STEP 1: Disconnect negative battery cable.

STEP 2: Remove column tilt lever if equipped.

STEP 3: Remove 3 bottom steering column cover screws and remove bottom cover.

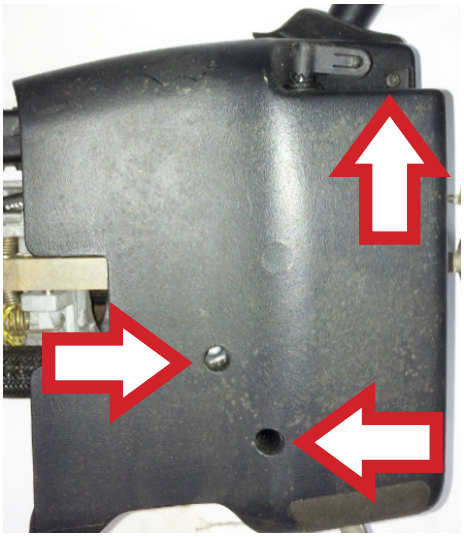

Disclaimer:
Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.


©2018 Dorman Products, Inc.
No reproductions in whole or in part without prior written approval.

INSTALL/REMOVAL INSTRUCTIONS: SELF-CODING IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 4: Rotate lock cylinder to the run position.

STEP 5: Using a small screwdriver or suitable tool, push in lock retaining pin in while pulling lock cylinder and remove from column.

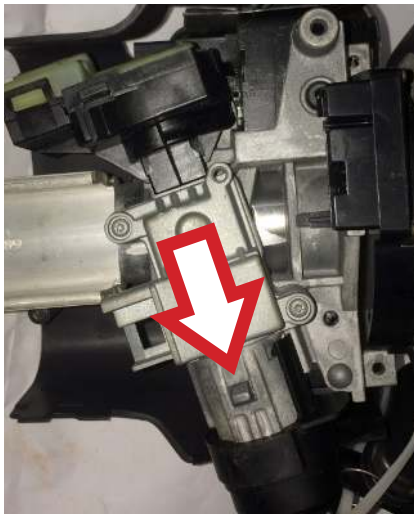

Installation Instructions

STEP 1: Install lock cylinder by rotating the new lock to the run position

STEP 2: Insert lock into column.

STEP 3: Rotate new lock cylinder using key to ensure proper operation in all positions.

STEP 4: Reinstall bottom column cover and screws.

STEP 5: Reinstall tilt lever if equipped.

STEP 6: Reconnect negative battery cable.

We appreciate your opinions regarding this product!
Please call our Technical Assistant with any challenges or suggestions regarding the installation or operation of this product.

1-800-523-2492

Disclaimer:
Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

©2018 Dorman Products, Inc.
No reproductions in whole or in part without prior written approval.