


Blindify

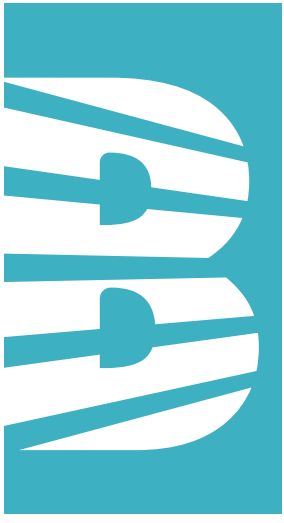


Smart Blinds Instruction Manual

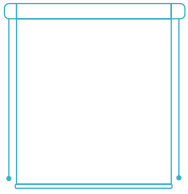

Outdoor Shades

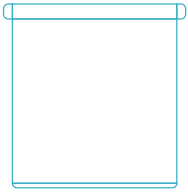


Roller Shades

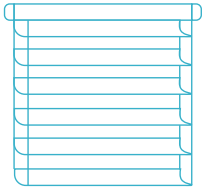


Sheer Horizontal Shades



Zebra Shades

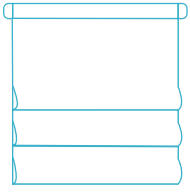


Roman Shades

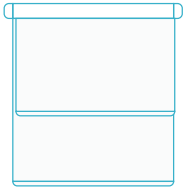

Dual Shades

We Listen To You

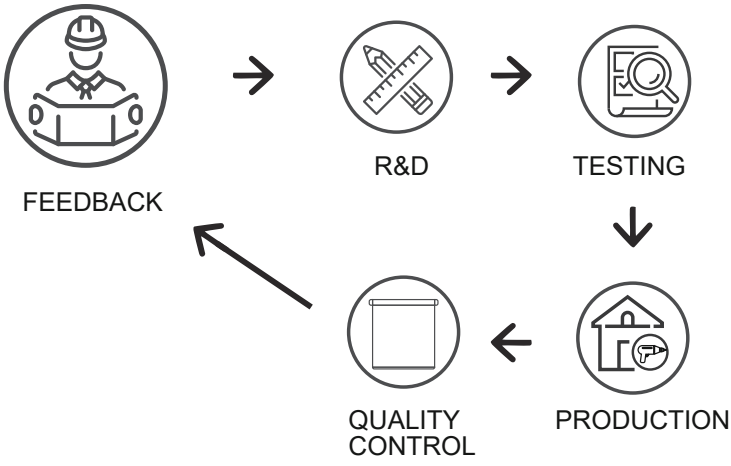

Service And Experience

Visit Our Website:

Youtube

Instagram

Facebook

Amazon

Blindify — Where Innovation Meets Elegance.

WhatsApp Chat: +86 15757135536

Factory Address: 2804 Jeanwood Drive, Elkhart, IN 46514

Email Us:

Service & Support: **service@iblindify.com**

Sales & Quotes: **service@blindifyhome.com**

Preparation

Remote Introduction ——— 1

Motor Introduction ——— 2

Remote&Motor Instruction

1.Basic Setting ——— 3-4

2.Function Setting ——— 5-7


APP & Smart device via Hub

1.Hub $ App Setting ——— 8-15


2.Alexa Setting ——— 16-18

REMOTE CONTROL

FRONT

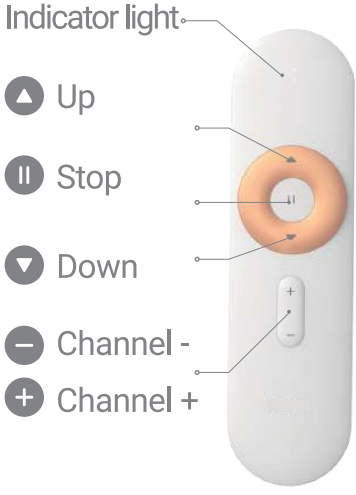


2-CHANNEL REMOTE:

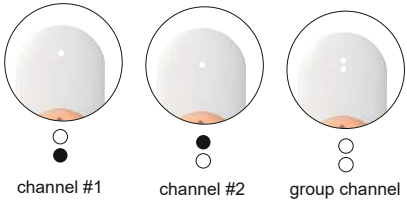

15-CHANNEL REMOTE:



BACK

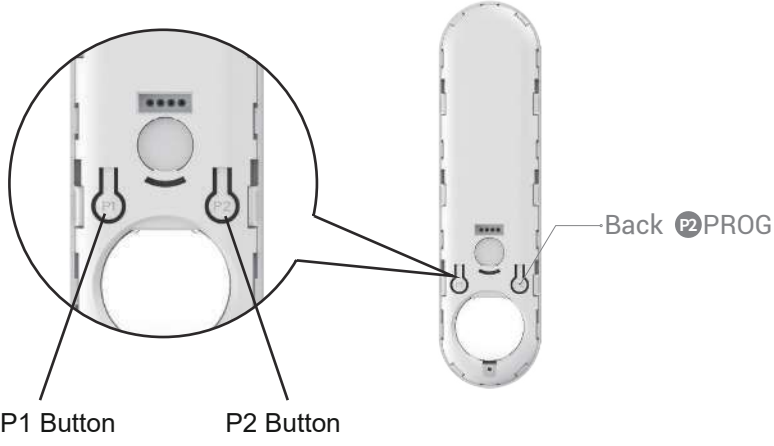


Remark:
The picture of emitter is only for reference,please make the object as the standard.
Switch to channel button,each channel represents one emitter.


Product description



Indicator	
Red Light	LOW battery or error feedback
Orange light	Setting Status
Green light	Normmal feedback

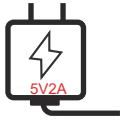


Charger
(Not included)




Solar Panel
(Optional)


Low Battery:
Orange light flashing

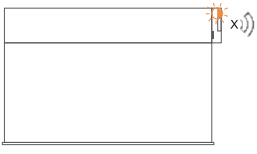

Charging:
Blue light flashing every 8s

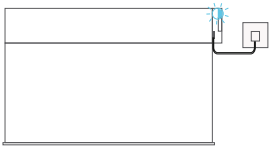

Fully Charged:
Blue light stays on

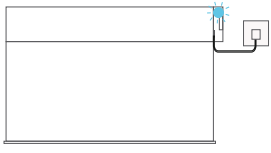

Charging Status Description	Status
Press wireless emitter's ▲or ▼, the motor indicator GREEN light flashes 2 times.	Charging
Press wireless emitter's ▲or ▼, the motor indicator GREEN light stays on.	Fully charged

Low battery alert
Press wireless emitter's any button, the motor indicator RED light flashes 5 times, please charge in time.

Operation steps

Note: Except motor goes up and down, operation success will feedback by motor jogs.

4.1 Activation



Press S PROG for 1s

Motor jogs thrice
Orange light stays on

4.2 Pairing



Press S PROG for 2s

Motor jogs once
Orange light flashes

Briefly press back P2 PROG

Motor jogs once

4.3 Change rotation direction




Press ▲ or ▼ to confirm the rotation direction


Press ⏸ for 2s


Motor jogs once

Note: This operation only applies before the Limits setting


4.4 Limits setting (in Tilting mode now)

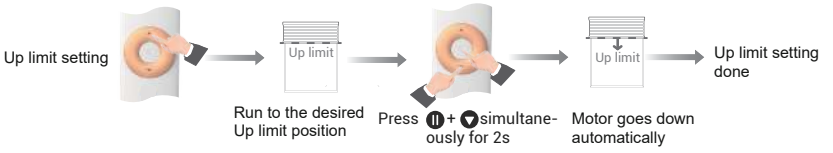

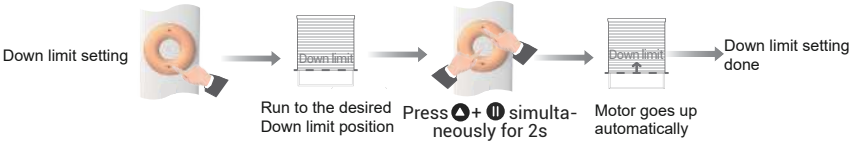

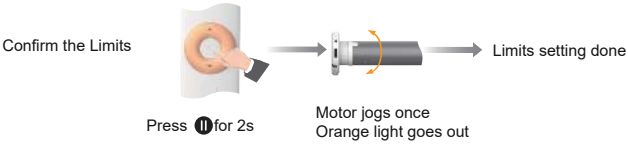

Note:
When configuring the motor, ensure that both upper and lower limit settings are completed and saved. Otherwise, the current settings may not be retained, requiring reconfiguration upon next use.

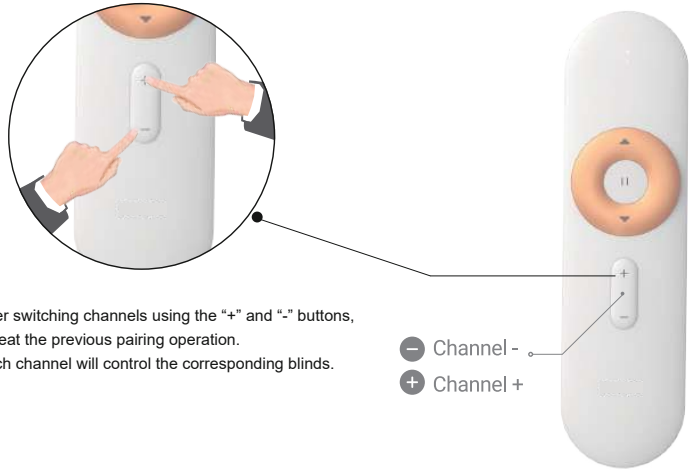


After switching channels using the “+” and “-” buttons, repeat the previous pairing operation.
Each channel will control the corresponding blinds.

Function setting

(should be proceeded after Step 04 done)

5.1 Limits fine-tuning

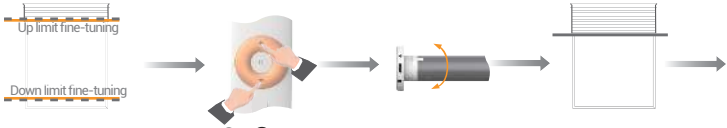

Run to the Up limit for Up limit fine-tuning
Run to the Down limit for Down limit fine-tuning

Press ▲ + ▼ simultaneously for 2s

Motor jogs once
Orange light flashes

Run to the desired new limit position




Press ⏸ for 2s

Motor jogs once
Orange light goes out

Fine-tuning done

5.2 Speed Adjustment

Set High speed:




Press ▲ + ⏸ simultaneously for 2s

Motor jogs once

Setting done

Set Low speed:




Press ⏸ + ▼ simultaneously for 2s

Motor jogs once

Setting done

5.3 Tilting mode (default is off)



Press ▲ + ⏸ + ▼ simultaneously for 2s

Motor jogs once

Tilting mode on/off setting done

Note:

1. When the Tilting mode is off, press ▲ or ▼, the motor runs continously.
2. When the Tilting mode is on, press ▲ or ▼ for less than 2s, the motor runs continously.
3. When the Tilting mode is on, press ▲ or ▼ for more than 2s, the motor runs slowly and tilts the slats, release then the motor stops.

5.4 Preferred position setting/deletion (set only between the Up and Down limits)



Run to the desired preferred position

Press ⏸ for 2s

Motor jogs once

Note:
When the shade stays in the non-preferred position, briefly press ⏸ , the shade will move to the preferred position.

5.5 Adding emitter (each motor can be quipped with 12 emitters maximumly)

Method 1



Press S PROG for 2s

Motor jogs once
Orange light flashes

Briefly press the new emitter's back P2 PROG

Motor jogs once
Orange light goes out

Method 2



Press the paired emitter's back P2 PROG for 2s


Motor jogs once
Orange light flashes

Briefly press the new emitter's back P2 PROG

Motor jogs once
Orange light goes out

5.6 Deleting emitter

Operation 1: Delete one by one (if only one emitter remains, it can not be deleted)
Method 1

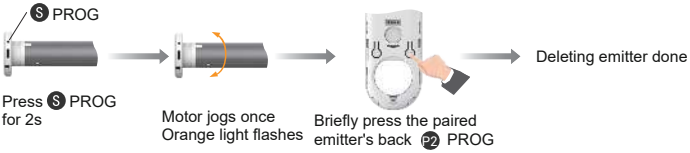

Press S PROG for 2s

Motor jogs once
Orange light flashes

Briefly press the paired emitter's back P2 PROG

Method 2




Press the paired emitter's back P2 PROG for 2s

Motor jogs once
Orange light flashes

Briefly press the paired emitter's back P2 PROG

Motor jogs once
Orange light goes out

Operation 2: Deleting all the emitters



Press PROG for 7s

Motor jogs twice
Orange light flashes

(Note: Adding an emitter after deleting all the emitters, briefly press emitter's back P2 PROG, orange light goes out, adding emitter done)

Restore to factory setting

(if operation error, reset after restoring to factory setting)



Long press PROG for 12s

Motor jogs thrice
Orange light stays on

Applications


(Please keep antennas away from metal obstructions during installation or placement to avoid signal interference or block)

Applications 1:

Built-in Lithium battery power supply, rechargeable via solar panel, instead of AC wall socket



SmartHome Control Host Wall wireless emitter Hand-held emitter

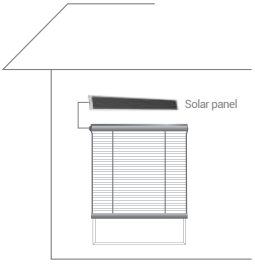


Applications 2:

Built-in Lithium battery power supply, recharge via external charger, 4-8 months operation if fully charged




SmartHome Control Host Wall wireless emitter Hand-held emitter

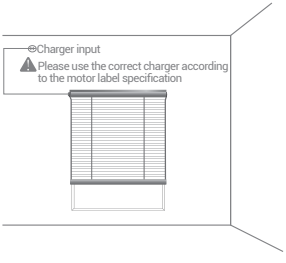


Hub&APP SETTING

The Smart Controller (Hub) requires plug-in and use in a stable 2.4 GHz Wi-Fi environment.

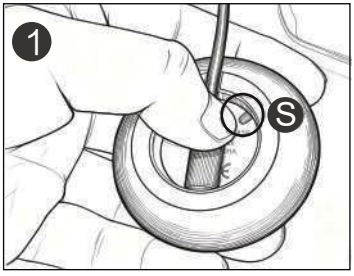

Long press the Ⓢ until the indicator light flashes.

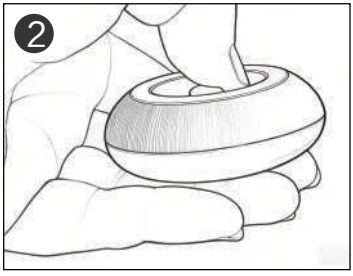

Long press the Ⓢ until the indicator light flashes.

❸ Scan the QR code to watch
the video insctruction(Start at 3:58)





Download Tuya Smart App or Smart Life App



Add the hub on APP



Add the Shade after the hub installed on App




Make the shade motor in pairing mode



Match the shade with app



Try controlling shades on APP

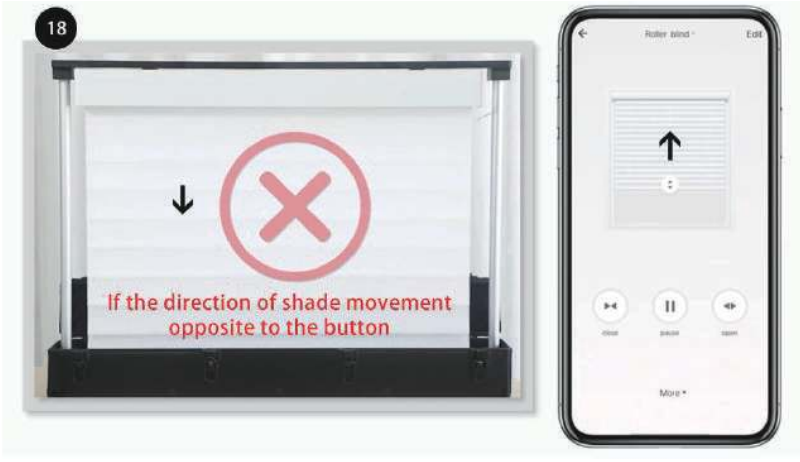

If the shade operating direction is opposite to the button's function, reverse the open/close button settings within the app.










Set upper/lower limit position on APP




26
Limit Position
Delete Limit
Up Limit
Lower Limit


27
Limit Position
Delete Limit
Up Limit



28
Limit Position
Delete Limit
Up Limit
Lower Limit

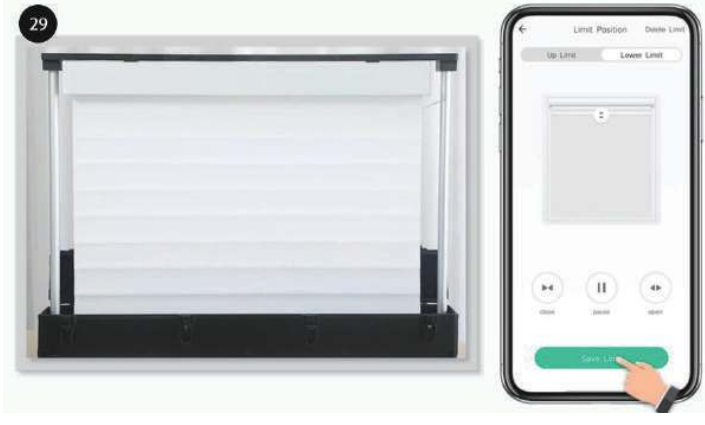
29
Limit Position
Delete Limit
Up Limit
Lower Limit




Operation complete

Connect with Alexa via Hub and Tuya APP

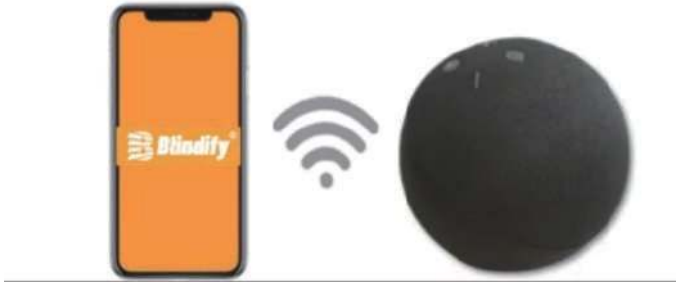



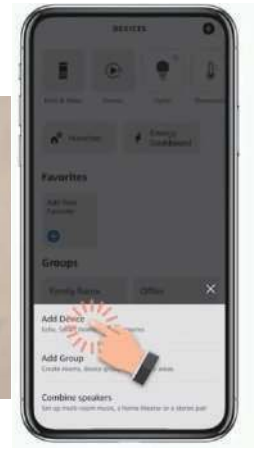

Open Alexa App





Choose Amazon Echo






Pair Alexa Device with Alexa App




pairing

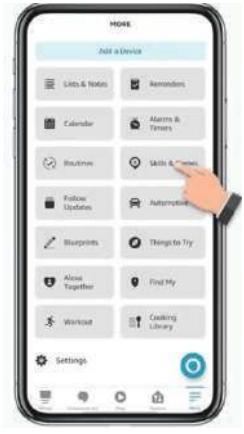



Add the Tuya Smart App or Smart Life APP firmware in the Alexa app.

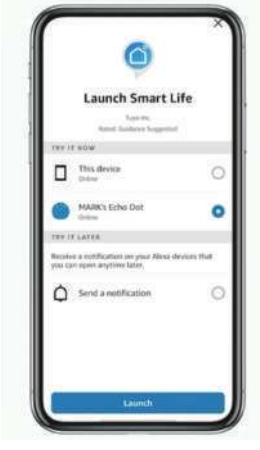



Map the shades from Tuya Smart App/Smart Life to Alexa App to enable Alexa Voice Control

Follow the prompts within the app to name your shade group and try using voice control.



Note: Some steps and screens may change with app version updates. Please refer to the actual app interface and on-screen instructions for setup.

SMART BLIND

EASY

YOUR LIFE

Blindify — Where Innovation Meets Elegance.

WhatsApp Chat: +86 15757135536

Factory Address: 2804 Jeanwood Drive, Elkhart, IN 46514