
Zeno Series

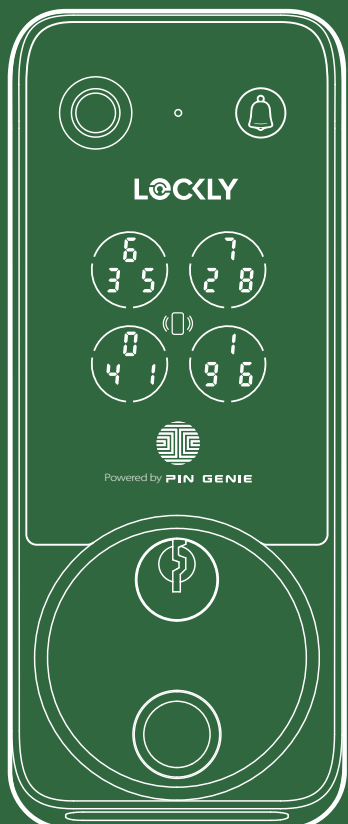

PGK798HK

2

Start Second

Lockly Vision

Setup and Use

LOCKLY
Enjoy the freedom™



We’re here to help

Your Lockly smart lock comes with lifetime technical support. Feel free to contact us with any questions or comments.


(669) 500-8835 help@Lockly.com support.Lockly.com

Setup

App download	04
Charge/install battery	05/6
Lock overview	07/8
Hub overview	09
Apple Home	10
Fingerprint access	11
Adding a fingerprint	12

Download the Lockly app

Scan or visit Lockly.com/app

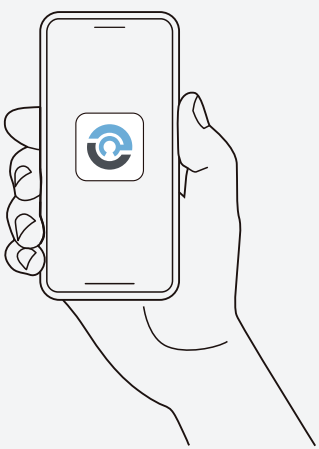

Download on the App Store


GET IT ON Google Play

The Lockly app will guide you through final installation, setup, and creating your user profile for a more tailored and optimized experience.

Charge the battery

Ensure battery has been fully charged.

Charge the battery with the included USB-C cable and a common mobile device charger (not included) rated 5V/2A or higher. A full charge can take up to 12 hours.

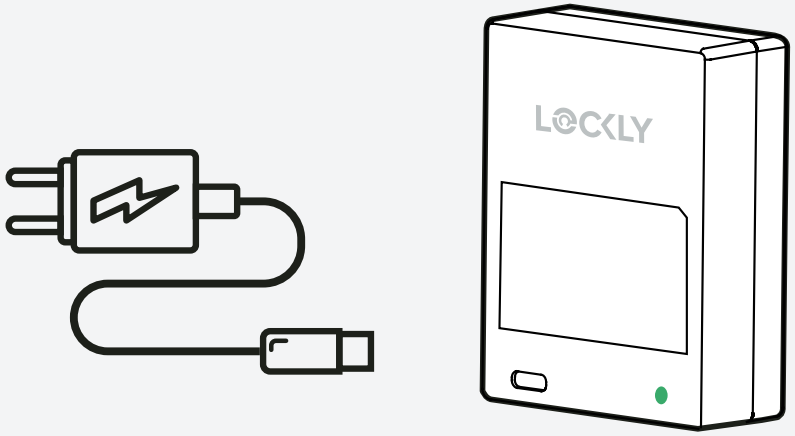


Install battery and start self-check

Ensure battery has been fully charged.

Install battery as shown.

Perform self-check (skip if done)
Immediately hold the red program button for 4 seconds. The lock will perform a self-diagnostic by extending and retracting the deadbolt multiple times.


Open the Lockly app and tap (**+**) to add a new device. Locate your Lockly model and follow in-app instructions to continue setup.

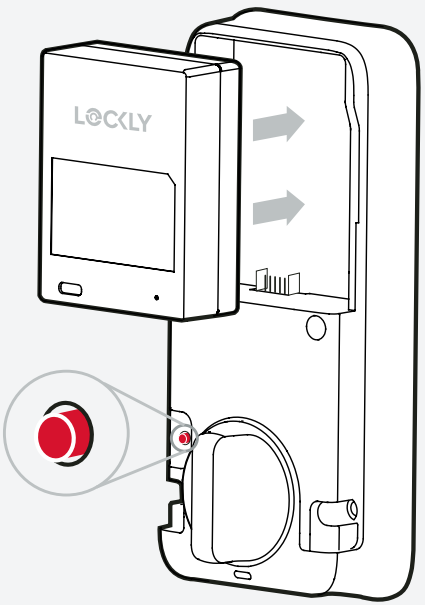


After 10 minutes of powering on, the Bluetooth connection will be disabled, preventing pairing with the Lockly or Home app. To re-enter Pairing Mode, reinstall the battery or press the Program button. You can also reactivate Bluetooth pairing by tapping the "**BL**" in the circle on the keypad.

Getting to know your Lockly Vision

Exterior

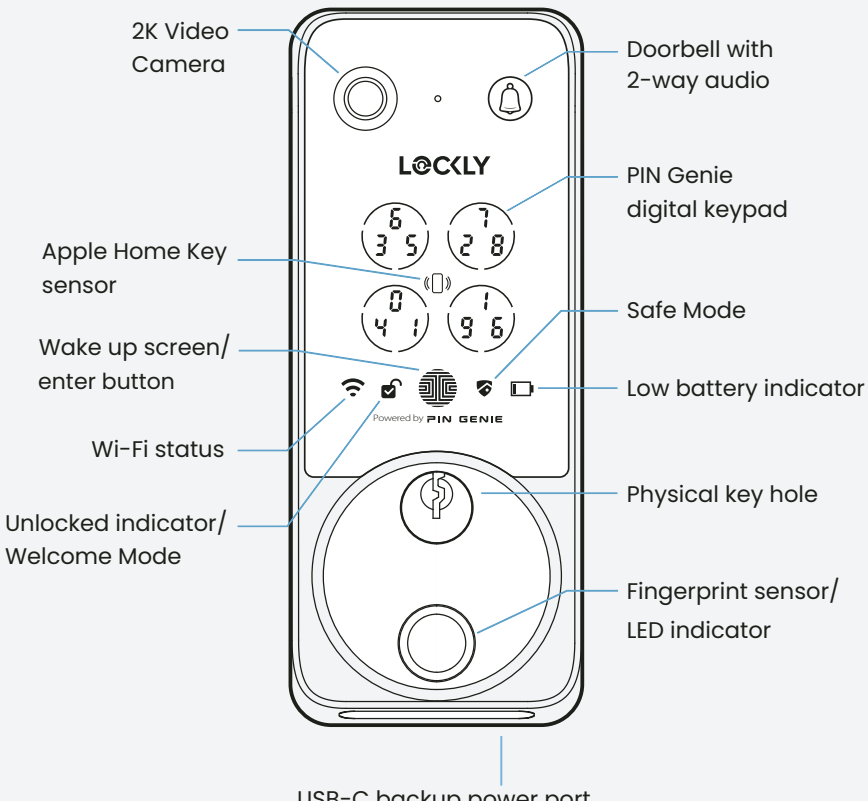


Interior

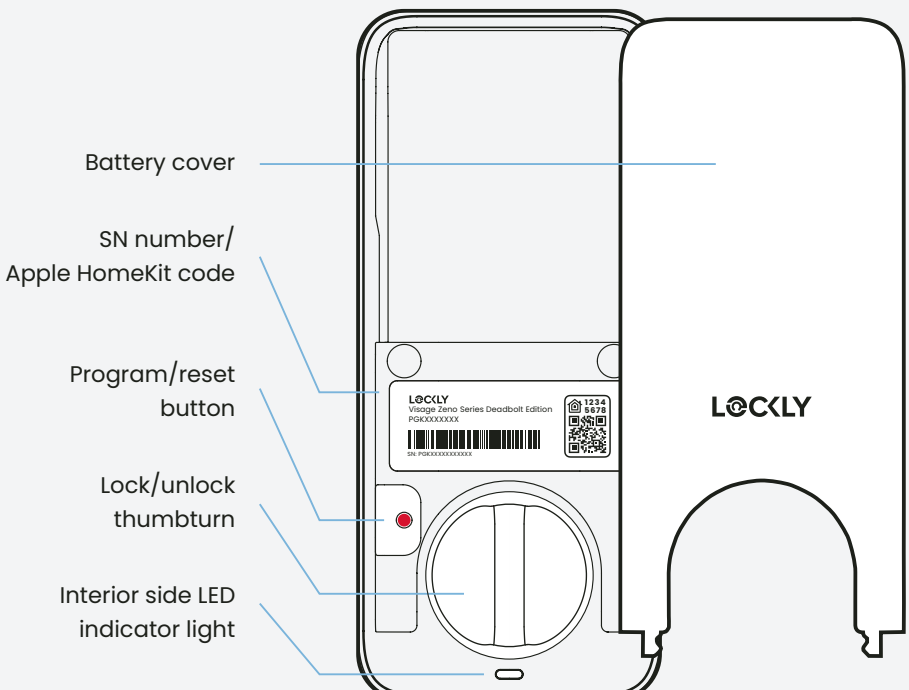
Battery cover
SN number/
Apple HomeKit code
Program/reset
button
Lock/unlock
thumbturn
Interior side LED
indicator light
LOCKLY
Visage Zeno Series Deadbolt Edition
PGKXXXXXXX
1234
5678
LOCKLY

Setup New-Gen Vision Connect Hub

Connect the hub to power. Follow the in-app instructions to complete the setup.

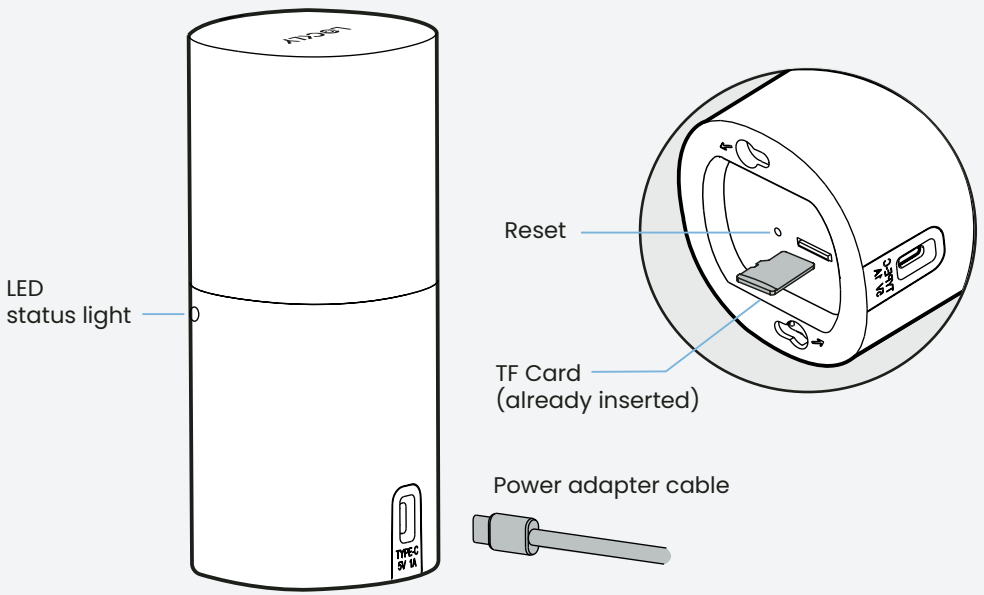


For the best Wi-Fi connection:
- Avoid placing the device in kitchens to prevent signal disruptions from appliances.
- Keep it away from walls and obstructions that can absorb wireless signals.
- Avoid placing it on the floor, as the ground can absorb signals.

Set up Apple Home

Unlock your door with your iPhone or Apple Watch and monitor its status through the Home app.

Works with Apple Home

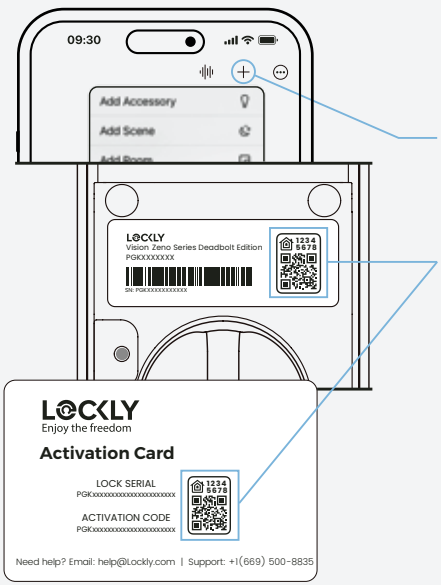

Open Apple's **Home app** and select (**+**), **Add Accessory.**

Locate the Apple HomeKit code under the battery cover or on the activation card. Scan code when prompted.

Follow the in-app instructions to add your Home Key to your Wallet app.


To share access and control remotely through Apple Home, you will need one of the following as a home hub:

- Apple TV® (4th gen, tvOS 12.0 or higher)
- iPad® (iOS 12.0 or higher)
- HomePod® or HomePod mini®

Set up fingerprint access


Fingerprint scanning

For fast and reliable fingerprint recognition, it's important to follow correct finger positioning when registering your fingerprints.

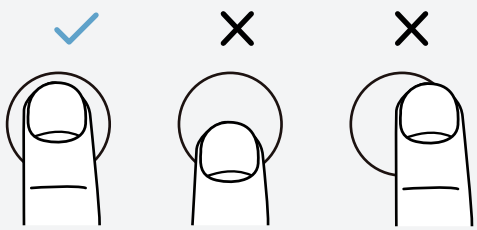

Alignment
Avoid positioning finger too high or low on the sensor.


Avoid positioning finger too much off-center left or right.

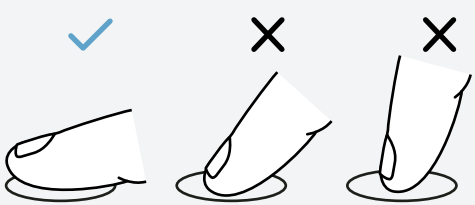


Angle
Keep finger straight and somewhat flat; avoid holding at an angle.

Adding a fingerprint

In the Lockly app, choose your lock then select “Access” and follow on-screen instructions.

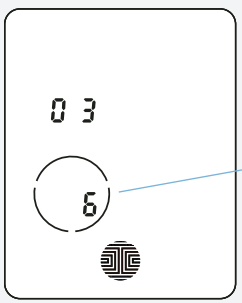

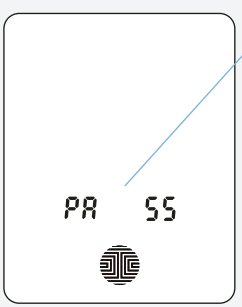

Scanning process

Your finger will be scanned six times for optimal accuracy. The countdown shows in the lower-left circle of the digital screen, starting from six.

Place your finger on the sensor and hold still until you hear a beep. Slightly adjust your finger position and hold for each remaining scan until you hear a longer beep with the word "pass" indicating a successful scan.

If fingerprint registration fails, repeat process.


Use

PIN Genie keypad	14
Unlock with keypad	15
Adding a PIN code	16
Auto and manual lock	17
Using Video Doorbell	18
Fingerprint access	19
Apple Home Keys	20
Unlock with app	21
More ways to access	22/23
Alert and sounds	24/25
Troubleshooting/FAQs	27/28

PIN Genie™ keypad

Dynamic shuffling technology

Exclusive hack-proof PIN Genie digital keypad shuffles PIN (personal identification number) between each use.

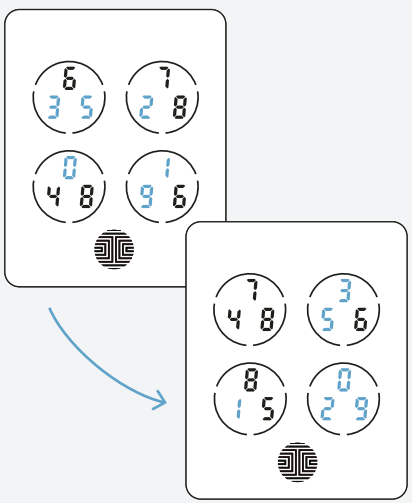

The same PIN shuffles location between each use.

Using

PIN codes are made up of six digits, for example **3 5 1 2 9 0.** Each number can show up anywhere in one of three positions inside for circles.

Simply press anywhere on a circle containing the corresponding number to enter your six digit PIN code.


Unlocking

After all six numbers are entered press the enter button to unlock.

Note: the default PIN code is 1 2 3 4 5 6

You can toggle between dynamic shuffling and always fixed number location by pressing the enter button for 3 seconds.

Unlock with digital keypad

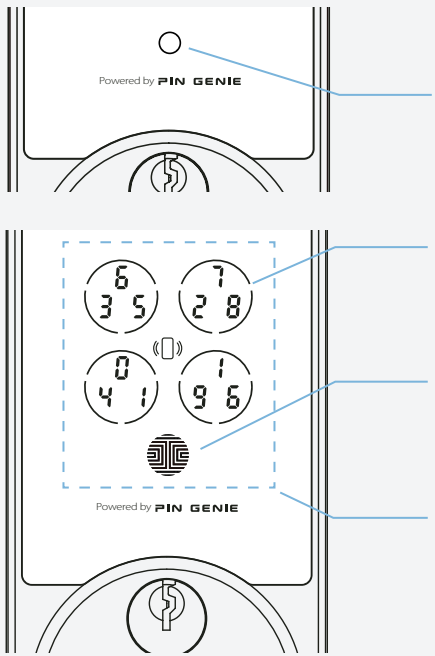

Unlock
Press the circle to wake screen.

Enter your PIN code by pressing anywhere in the circles that contain the corresponding numbers; you do not need to press the exact number.

Press the **enter** button after the last digit of your PIN code has been entered.


Lock
To lock, press the enter button while the screen is active, or the area of the 4 circilar number buttons while the screen is off.

Temporarily boost screen brightness by pressing and holding any of the 4 circular number buttons for 3 seconds.

Adding additional access codes

Access code types

Set permanent, recurring, time-based, or one-time use access codes.

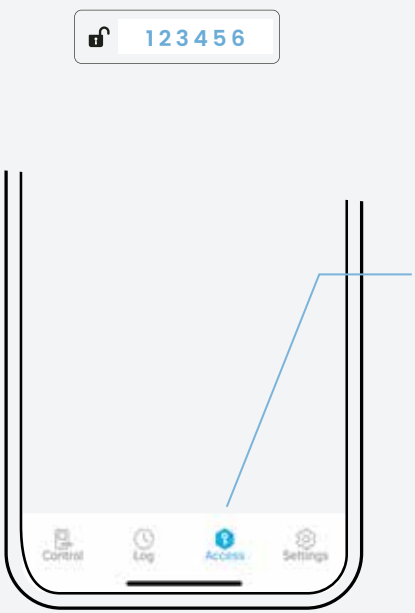

Default PIN code


The default PIN code is 1 2 3 4 5 6. During setup, you will be prompted to set a new code to replace it.

Adding a code

Select your lock from the Lockly app, then select **Access** then **user, Access Code** and follow the on-screen instructions to setup the various types of codes.

Auto and manual locking

When unlocked the icon will appear on screen.

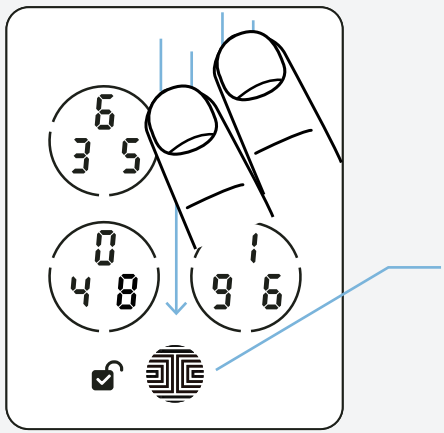

Auto-locking
In the Lockly app, set your desired time (example 5-min) under **settings** of your lock, **auto-lock timer.**

Lock using digital screen
Swipe top to bottom with two fingers when screen is off or press the enter button when screen is on.

Interior locking
Rotate the thumbturn on the interior assembly.


Lock with key
Insert physical key and rotate.

You can set auto-lock timing under your lock's setting in the Lockly app.


Using Video Doorbell

Ensure the New-Gen Vision Connect Hub has been set up and your phone can receive push notifications.

Press the doorbell button on the Lockly Vision.

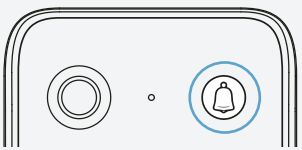

A notification will be sent to your smartphone. Tap the notification to open camera view in the Lockly app.

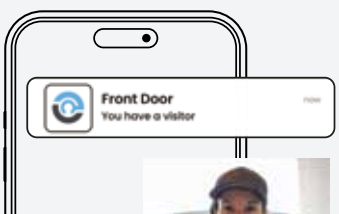


Unlock or initiate a two-way conversation within the live view.



You can record the call in the Lockly app.
Live view of the camera can also be activated from the Lockly app.

Unlock with your finger

Featuring advanced AI learning technology.

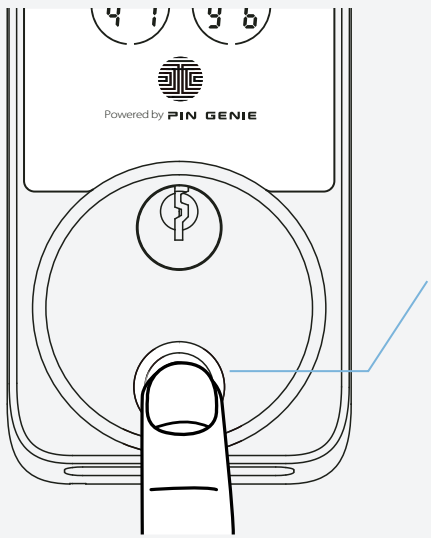

Place a registered finger flat and centered on the sensor.

Green circular LED: with a beep; door is unlocked.

Red circular LED: with two beeps; finger not recognized. Try again or try another registered finger.

Our advanced biometric sensor with AI learning technology recognizes your fingerprint in 0.2 seconds and improves in speed and accuracy with use.

Unlock with Apple home Keys


Open your door with your iPhone and Apple Watch

Unlock your door with home key in Apple Wallet (on your compatible iPhone and Apple Watch).

Set up a home key
Add your Lockly lock to the Home app. Choose the "Express Mode" unlocking option.

Unlock your door with a home key
On your iPhone or Apple Watch and with Express Mode turned on, place your device near the icon to unlock.



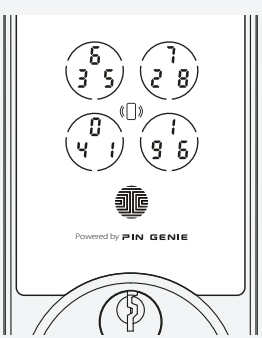

Learn more about home key in Apple Wallet on the iPhone User Guide online at: support.apple.com

Unlock with Lockly app

Lock, unlock, and check status.

Unlock or lock
Choose your lock in the Lockly app, tap unlock or lock.

Remote app control
Unlock, lock, check status, and get notifications from anywhere on your smartphone.

History and status monitoring
Check real-time status and history on your smartphone.



More Ways to Access and Control

Secure access, control, and monitoring options.



eKeys and eBadges
Share one-time, permanent, recurring, or revocable access with people you trust.



Voice control
Unlock, lock, or check door status through Amazon Alexa, Apple Siri, and Google Assistant.



Offline Access Codes™
Grant one-time access through the Lockly app without needing an internet connection.



Welcome Mode
Temporarily keep your lock from auto-locking for more convenient trusted user access.

We introduce new features every year. Subscribe to our newsletter at lockly.com for product updates, tips, and the latest innovations.



History and status monitoring
Check real-time status and history on your smartphone.



Air Transfer
Easily transfer user profiles between Lockly device for seamless setup and access management.



Set up user privileges
Grant sub-admin privileges to allow others to manage your property.



Manage multiple properties
Manage access control and reporting with LocklyOS, the cloud platform for property access management.

For more information, refer to the Lockly app or visit support.Lockly.com.

Alerts and sounds

Exterior Assembly Alerts

Fingerptint	
Exterior LED indicator flashes green with a 'beep' sound	Door unlocked
Exterior LED indicator flashes red with two 'beep' sounds	Fingerprint recognition failed
Access Code	
Exterior LED indicator flashes green	Door unlocked
Exterior LED indicator flashes red	Incorrect access code entered
Apple Home Key / Voice Control	
Exterior LED indicator flashes green	Door unlocked
Video Doorbell	
Exterior LED indicator flashes white	Doorbell ringing
Exterior LED indicator turns red for 2 seconds	Network not connected
Exterior LED indicator turns yellow for 2 seconds	Call missed
Exterior LED indicator turns green for 2 seconds	Call answered

Interior Assembly Alerts

Battery	
Interior LED indicator flashes red with a beep sound (x3)	Battery level is less than 20%
Interior LED indicator flashes red with a beep sound (x5)	Battery level is critically low (3 unlocks remaining). Charge battery immediately.

New-Gen Vision Connect Hub Status

LED Indicators	
Blue & White lights flash	Pairing
Green lights flash slowly	Network is connected
Purple lights flash	Resetting
Blue lights flash	Updating
Red lights flash	Network not connected
White light on	Doorbell ringing

Troubleshooting FAQs

Troubleshooting/FAQs

Why is my keypad not responding?

- Press the circle button ◯ to activate the keypad.
- If is flashing, your smart lock is in **Safe Mode**. Unlock with other access credentials (fingerprint, mobile app, home key or physical key) to exit.
- If water is detected, **Rain Mode** may be activated. Unlock your door with other authentication methods (Apple Home Keys, Lockly app..)
- Check if batteries are installed correctly.
- Refer to support.Lockly.com for more information about **Safe Mode** and **Rain Mode.**

Why is my keypad on full blackout?

- Battery may have been completely depleted. Use the physical key or a Type-C cable to connect your Lockly to a mobile power source to temporary activate the lock. Charge the battery immediately after unlock.

Why is my fingerprint not recognized?

- Check that you are using a registered finger.
- Make sure your finger is clean and dry.
- Position your finger at the centre of the sensor.

Why is my Lockly not locked automatically?

- Check if auto lock is disabled in the Lockly app.
- **Welcome mode** is currently active. Disable or change setting in Lockly app.

Troubleshooting/FAQs

Why is my New-Gen Vision Connect Hub cannot find my Wi-Fi networks?

- The New-Gen Vision Connect Hub works with 2.4GHz wireless networks.
- Check your router if it is combining the 2.4GHz and 5GHz bands.
- Refer to your router's manual to separate the two bands or refer to support.Lockly.com for more details.

How to pair my smart lock with a new phone?

- Download the Lockly app on your new device and log in using the same account credentials, follow in-app instructions.

How to pair my smart lock with a new Lockly account?

- You will need to perform a factory reset with the following steps.
  1. On the old Lockly app account, go toSettings > Reset and Pairing > Perform Factory Reset
  2. Download, register and log in to the new Lockly app account. You will need your activation card to set up the device.
- You can perform factory reset on the lock. Refer to Lockly app or support.Lockly.com for more details.

Lockly Technical Support

(669) 500-8835 help@Lockly.com support.Lockly.com

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. It should be installed and operated with a minimum distance of 20cm between the radiator & your body.

IC WARNING
This device contains license-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement
This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Cet équipement est conforme à l'exemption des limites d'évaluation habituelle de la section 2.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.

WARNING: This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

© Copyright 2024 Lockly All rights reserved
US Patent No. US 9,881,146 B2 | US Patent No. US 9,853,815 B2 | US Patent No. US 9,875,350 B2 | US Patent No. US 9,665,706 B2 | US Patent No. US 11,010,463 B2 | AU Patent No. 2013403169 | AU Patent No. 2014391959 | AU Patent No. 2016412123 | UK Patent No. EP3059689B1 | UK Patent No. EP3176722B1 | patternity technology patterned or parents and pattern pending.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. , and any use of such marks by Lockly is under license. Other trademarks and trade names are those of their respective owners. Google, Android, Google Play and Google Home are trademarks of Google LLC. , Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc., or its affiliates. Apple, Apple Home, Apple Watch, HomeKit, HomePod, HomePod mini, iPad, iPad Air, iPhone, and tvOS are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Let's co-create together!

Have an innovative idea?
Need a new solution for a situation?

Let us know. We are always innovating based on customer input and feedback.
(669) 500-8835 or hello@Lockly.com

Own a business?
Learn about how LocklyPRO and LocklyOS can help you in your business.

(510) 288-9928 or prosales@Lockly.com

LOCKLY
Enjoy the freedom™

© Copyright 2024 Lockly All rights reserved.
(See details on the inside back cover).

MPGK798HK240815